

# Flexco Workshop Machinery Stands

## Flexco Workshop Machinery Stands

Flexco Workshop Machinery Stands are purpose-built, designed, engineered and manufactured in Australia and can be used in a variety of applications and industries. With fixed or variable heights available, the Workshop Machinery Stands are commonly used to support heavy mobile equipment during installation, work and repairs. The Workshop Machinery Stands exceed Australian Standards in stability and SWL safety factors, and come in a complete range including 25 tonne, 50 tonne and 100 tonne in standard height increments of 50mm. This means there is a heavy-duty Workshop Machinery Stand to accommodate all varieties of mobile plant, and any specific applications can be designed and manufactured on request.



*\* The stands are built to exceed SWL safety factors and stability requirements specified in Australian Standard 2538*

*\* Retractable sprung castor assembly allows manoeuvrability when positioning under equipment*

*\* Removable inserts provide flexibility for variable height (fixed height stands also available)*

### Features and Benefits

- The stands feature even load distribution in variable height extension heads.
- Grooved heads come as standard to minimise risk of slipping and to maximise safety, plus, customised support heads are available to suit varying requirements.
- Convenient storage trolleys on castors are available for variable height extension heads.
- All components are fully labelled and come in standard safety yellow, (other colours available on request).
- Lifting lugs or handles are standard on all sizes.

# Flexco Workshop Machinery Stands

**Flexco Workshop Machinery Stands Size Chart**

SAFE WORKING LOAD (tonne)	HEIGHT TYPE	BASE DIAMETER (mm)	HEIGHT (mm)																													
			350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200	1250	1300	1350	1400	1450	1500	1550	1600	1650	1700	1750	1800
25	Fixed	400																														
25	Fixed	520																														
25	Fixed	645																														
25	Variable	400																														
25	Variable	520																														
25	Variable	645																														
50	Fixed	650																														
50	Fixed	850																														
50	Variable	650																														
50	Variable	850																														
50	Variable	1050																														
100	Fixed	704																														
100	Fixed	904																														
100	Variable	704																														
100	Variable	904																														

All other sizes available on request. Please note, the height of the variable stands is achieved by replacing the head extension, each head extension is good for one height only.

Authorized Distributor:

Flexco (Aust.) Pty. Ltd • 10 Solent Circuit • Baulkham Hills NSW 2153 • Australia  
Tel: 612-8818-2000 • Fax: 612-8824-6333 • E-mail: salesau@flexco.com

Visit [www.flexco.com](http://www.flexco.com) for other Flexco locations and products.

©2014 Flexible Steel Lacing Company. 02/15. For reorder: X3769

