 


FLEXCO ELEVATE™ WHEN TECHNOLOGY DELIVERS CONNECTIVITY OPERATIONS OPTIMIZE

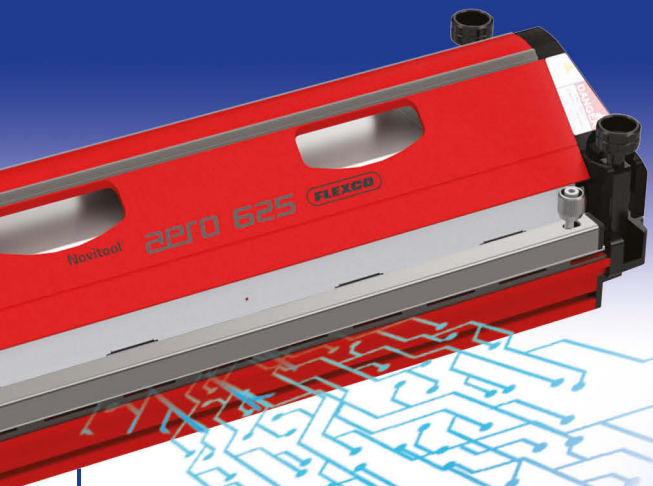

CONNECTIVITY

Enhance the productivity of your press and improve splice reliability.

Utilizing Bluetooth® technology, the Novitool® Aero® Splice Press connects through a simple-to-use mobile app to access and evaluate splice cycle data and manage updates to firmware for ongoing press advancements.

OPERATIONAL EFFICIENCY

Keep up-to-date on all the latest technological improvements to the Aero® Press.

Ongoing updates and improvements to press operation—based on customer feedback and technology innovations—means your press is continually optimized for the most efficient operation and consistent end-less splicing.

SPLICE RELIABILITY

The Aero® Dashboard allows operators easy access to splice cycle data for evaluation and troubleshooting.

Managing one press or many is easy, plus operators can work directly with Flexco Aero® Press experts for advanced splicing support and assistance.

INTUITIVE AERO® PRESS TECHNOLOGY



 
- Simply add your press to the Aero® Dashboard
- Download the Aero® Mobile App
- Connect to your press

DON'T JUST CONNECT

FLEXCO
elevate 


NOVITOOL® AERO® SPLICE PRESS CONNECTIVITY QUICK START GUIDE

Connecting your Aero® Splice Press is easy. Just follow the simple steps below.

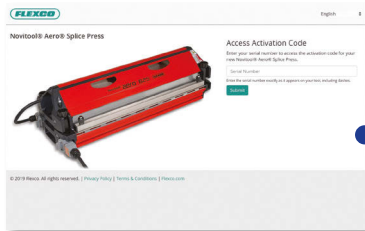


INITIALIZE PRESS

 Initialize your new Aero Splice Press by registering the unique serial number at www.flexco.com/code.

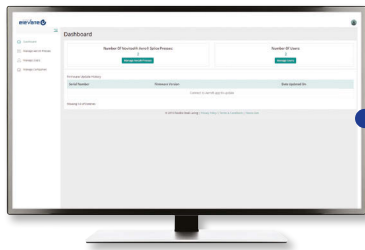

ADD PRESS TO DASHBOARD

 Within 1 to 3 business days, you will receive an email inviting you to log-in and add presses and users to the custom Dashboard. <https://Novitool.Flexco.cloud>



DOWNLOAD the AERO® MOBILE APP

Using your smart device, search your Apple or Android App Store for "Novitool® Aero® Splice Press".

Download the Aero® Mobile App and log-in using your Dashboard user name and password.



MAKE the CONNECTION

Use the Aero® Mobile App and connect via the Bluetooth® wireless technology dongle provided with your Aero® Press package.



 
TRANSMIT

Send your splice cycle data to the Dashboard on a regular basis to help with troubleshooting and improved splice reliability.



UPDATE

You will receive notifications from Flexco when it is time to update Firmware.

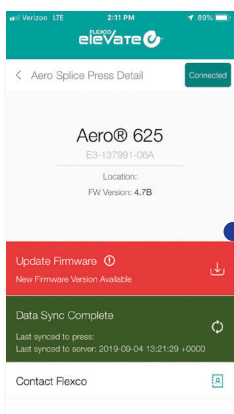

Authorized Distributor:

2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2019 Flexible Steel Lacing Company. Novitool® is a registered trademark. 01/14/20. For Reorder: X5998

