


# MMP Precleaner

---

## Installation, Operation and Maintenance Manual

---

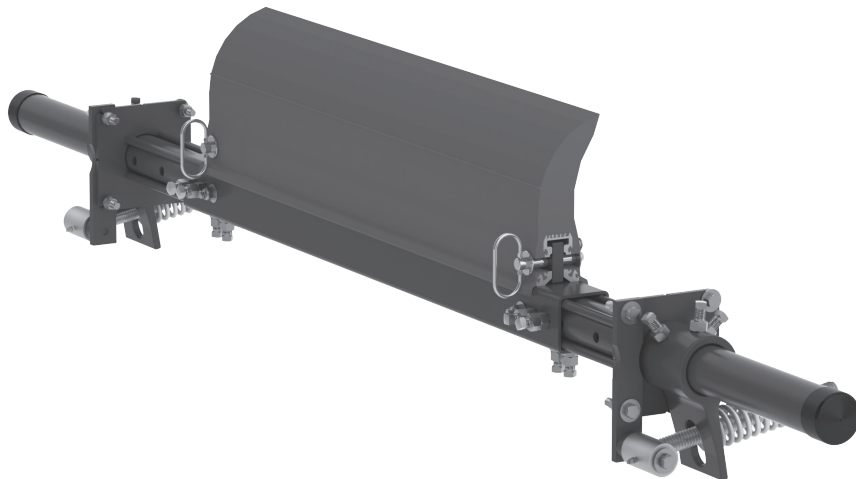

# MMP Precleaner

---

Purchase Date: \_\_\_\_\_

Purchased From: \_\_\_\_\_

Installation Date: \_\_\_\_\_

This information will be helpful for any future inquiries or questions about belt cleaner replacement parts, specifications or troubleshooting.

# Table of Contents

---

<b>Section 1 - Important Information .....</b>	<b>4</b>
1.1 General Introduction.....	4
1.2 User Benefits .....	4
1.3 Service Option .....	4
<b>Section 2 - Safety Considerations and Precautions .....</b>	<b>5</b>
2.1 Stationary Conveyors.....	5
2.2 Operating Conveyors.....	5
<b>Section 3 - Pre-Installation Checks and Options.....</b>	<b>6</b>
3.1 Checklist.....	6
3.2 Cleaner Location Adjustments.....	7
3.3 Optional Installation Accessories.....	8
3.4 Correct Blade Installation and Tensioning .....	9
<b>Section 4 - Installation Instructions.....</b>	<b>10</b>
4.1 MMP Precleaner.....	10
4.2 MMP Precleaner - QMT Tensioner .....	12
4.3 MMP Precleaner - PAT Tensioner .....	13
<b>Section 5 - Pre-Operation Checklist and Testing.....</b>	<b>14</b>
5.1 Pre-Op Checklist.....	14
5.2 Test Run the Conveyor .....	14
<b>Section 6 - Maintenance.....</b>	<b>15</b>
6.1 New Installation Inspection.....	15
6.2 Routine Visual Inspection.....	15
6.3 Routine Physical Inspection .....	15
6.4 Blade Replacement Instructions.....	16
6.5 Maintenance Log.....	18
6.6 Cleaner Maintenance Checklist.....	19
<b>Section 7 - Troubleshooting .....</b>	<b>20</b>
<b>Section 8 - Specs and CAD Drawings.....</b>	<b>21</b>
8.1 Specs and Guidelines .....	21
8.2 CAD Drawings .....	23
<b>Section 9 - Replacement Parts .....</b>	<b>27</b>
<b>Section 10 - Other Flexco® Conveyor Products.....</b>	<b>31</b>

# Section 1 - Important Information

---

## 1.1 General Introduction

We at Flexco are very pleased that you have selected an MMP Belt Cleaner for your conveyor system.

This manual will help you to understand the operation of this product and assist you in making it work up to its maximum efficiency over its lifetime of service.

It is essential for safe and efficient operation that the information and guidelines presented be properly understood and implemented. This manual will provide safety precautions, installation instructions, maintenance procedures and troubleshooting tips.

If, however, you have any questions or problems that are not covered, please visit our web site or contact our Customer Service Department.

**Visit [www.flexco.com](http://www.flexco.com) for other Flexco locations and products.**

Please read this manual thoroughly and pass it on to any others who will be directly responsible for installation, operation and maintenance of this cleaner. While we have tried to make the installation and service tasks as easy and simple as possible, **it does however require correct installation and regular inspections and adjustments to maintain top working condition.**

## 1.2 User Benefits

Correct installation and regular maintenance will provide the following benefits for your operation:

- Reduced conveyor downtime
- Reduced man-hour labor
- Lower maintenance budget costs
- Increased service life for the belt cleaner and other conveyor components

## 1.3 Service Option

The MMP Precleaner is designed to be easily installed and serviced by your on-site personnel. However, if you would prefer complete turn-key factory service, please contact your local Flexco Field Engineer or your Flexco Distributor.

## Section 2 - Safety Considerations and Precautions

---

Before installing and operating the MMP Precleaner, it is important to review and understand the following safety information.

There are set-up, maintenance and operational activities involving both **stationary** and **operating** conveyors. Each case has a safety protocol.

---

### 2.1 Stationary Conveyors

The following activities are performed on stationary conveyors:

- Installation
- Blade replacement
- Repairs
- Tension adjustments
- Cleaning

#### **DANGER**

It is imperative that Lockout/Tagout (LOTO) regulations, be followed before undertaking the preceding activities. Failure to use LOTO exposes workers to uncontrolled behavior of the belt cleaner caused by movement of the conveyor belt. Severe injury or death can result.

**Before working:**

- Lockout/Tagout the conveyor power source.
- Disengage any takeups.
- Clear the conveyor belt or clamp securely in place.

#### **WARNING**

**Use Personal Protective Equipment (PPE):**

- Safety eyewear
- Hardhats
- Safety footwear

Close quarters, springs and heavy components create a worksite that compromises a worker's eyes, feet and skull. PPE must be worn to control the foreseeable hazards associated with conveyor belt cleaners. Serious injuries can be avoided.

### 2.2 Operating Conveyors

There are two routine tasks that must be performed while the conveyor is running:

- Inspection of the cleaning performance.
- Dynamic troubleshooting.

#### **DANGER**

Every belt cleaner is an in-running nip hazard. Never touch or prod an operating cleaner. Cleaner hazards cause instantaneous amputation and entrapment.

#### **WARNING**

Belt cleaners can become projectile hazards. Stay as far from the cleaner as practical and use safety eyewear and headgear. Missiles can inflict serious injury.

#### **WARNING**

Never adjust anything on an operating cleaner. Unforeseeable belt projections and tears can catch on cleaners and cause violent movements of the cleaner structure. Flailing hardware can cause serious injury or death.

## Section 3 - Pre-installation Checks and Options

---

### 3.1 Checklist

- Check that the cleaner size is correct for the beltline width.
- Check the belt cleaner carton and make sure all the parts are included.
- Review the “Tools Needed” list on the top of the installation instructions.
- Check the conveyor site:
  - Will the cleaner be installed on a chute?
  - Is the install on an open head pulley requiring mounting structure?  
(see 3.3 - Optional Installation Accessories)
  - Are there obstructions that may require cleaner location adjustments?  
(see 3.2 - Cleaner Location Adjustments)

## Section 3 - Pre-Installation Checks and Options

### 3.2 Cleaner Location Adjustments

In certain applications it is necessary to modify the location of the precleaner pole due to permanent obstacles that obstruct the desired location. Relocating the pole location can be done easily and does not hinder the performance of the cleaner as long as the “C” dimension is maintained.

**NOTE:** In the following example we will be lowering the pole location in the “Y” direction, but the same method could also be applied in the “X” direction.


Conveyor situation:

Pulley Diameter: 600 mm (24")

X = 321 mm (12 5/8")

Y = 300 mm (12")

C = 441 mm (17 3/8")

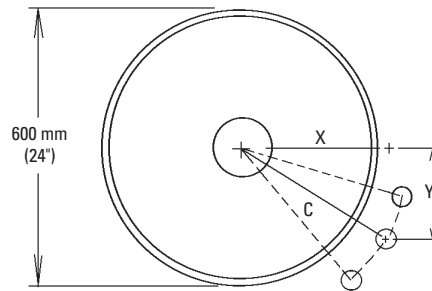

**Determine the given location dimensions and define the change needed.** After laying out the given X & Y dimensions, determine the distance of the modification required for adequate clearance of the pole and tensioning system. (In the example we decide to lower the pole 50 mm (2") to clear the support structure).

- 1. Write down known dimensions.** We can now determine two of the three required dimension which will allow us to find the third. We know we cannot alter the “C” dimension, so this will remain the same. Also we are required to lower the unit in the “Y” dimension 50 mm (2"), so we add 50 mm (2") to the given “Y” dimension.

X = ? mm (?)

Y = 300 + 50 = 350 mm (12 + 2 = 14")

C = 441 mm (17 3/8")

- 2. Determine final dimension.** On a flat vertical surface, using a level, draw one horizontal line and one vertical line creating a right triangle (Fig 3a). Measure down from the intersection the determined “Y” dimension and mark (Fig 3b). With the tape measure starting at the modified “Y” mark, swing the tape across the “X” line and mark at the “C” dimension where it crosses the “X” line (Fig 3c). Measure from the intersection to the “C” intersection and this will be your new “X” dimension (Fig. 3d).

X = 254 mm (10 1/4")

Y = 350 mm (14")

C = 441 mm (17 3/8")

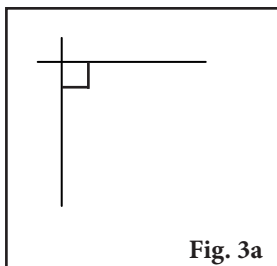


Fig. 3a

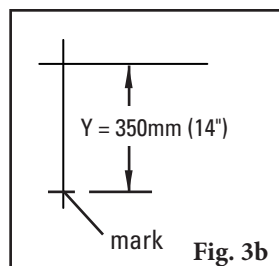


Fig. 3b

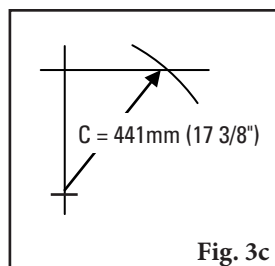


Fig. 3c

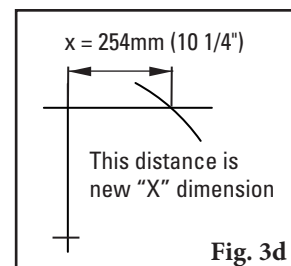


Fig. 3d

## Section 3 - Pre-Installation Checks and Options


### 3.3 Optional Installation Accessories

Versatile, adjustable brackets and plates that can be mounted on the conveyor structure so precleaners and secondary cleaners can be easily and quickly bolted into place. Pole extenders are also available for wide, non-standard conveyor structures.


- **Optional Mounting Bar Kit**  
(incl. bolts, nuts and washers)  
(Item Code: 75830)
  - For mounting precleaners on open head pulleys.
  - Weld on both sides of pulley and bolt on steel plates.
  - 38 x 405 mm (1 1/2 x 16") with (4) 16 mm (5/8") tapped holes




- **Mounting Plate Kit**  
(incl. 2 plates)  
(Item Code: 76537)
  - For use with Mounting Bars to mount cleaners on open head pulleys.
  - 400 x 800 mm (16 x 32") with (4) 16 mm (5/8") holes

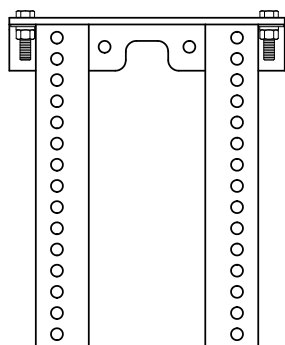


- **SST Standard Mounting Bracket Kit**  
(for SST XD Tensioner)  
(Item Code: 76071)
  - For most secondary cleaner installs.
  - 325 x 388 mm (13 x 15 1/2")

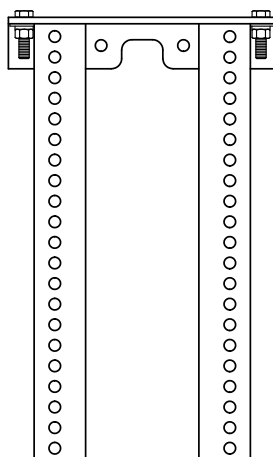

- **SST Long Mounting Bracket Kit**  
(for SST XD Tensioner)  
(Item Code: 76072)
  - For installations that require extra length legs.
  - 325 x 538 mm (13 x 21 1/2")

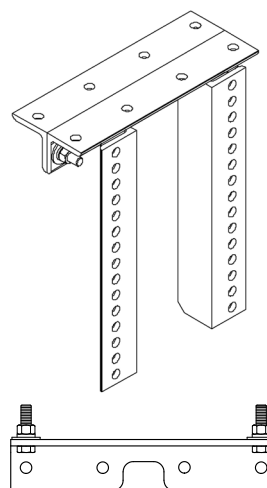

- **SST Optional Top Angle Kit**  
(for SST XD Tensioner)  
(Item Code: 76073)
  - Used with both standard and long mounting bracket kits for additional mounting options.
  - 325 mm (13") Length

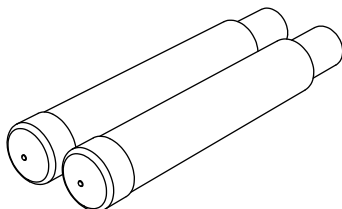

- **Pole Extender Kit**  
(incl. 2 pole extenders)  
(Item Code: 76024)
  - For cleaner sizes 1800 mm (72") and larger
  - Provides 750 mm (30") of extended pole length

#### Optional Mounting Kits (includes 2 brackets/bars)

DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT KG
Optional Mounting Bar Kit *	MMBK	75830	8.8
Mounting Plate Kit (incl. 2 plates)	MMPK	76537	63.5
Standard Mounting Bracket Kit *	SSTSMB	76071	15.6
Long Mounting Bracket Kit *	SSTLMB	76072	19.7
Optional Top Angle Kit *	SSTOTA	76073	4.8
Pole Extender Kit	MAPEK	76024	9.9

\*Hardware Included  
Lead time: 1 working day

## Section 3 - Pre-Installation Checks and Options

### 3.4 Correct Blade Installation and Tensioning




For optimal cleaning efficiency and long wear life, the TuffShear<sup>™</sup> blade must be located and tensioned correctly on the belt head pulley. If the cleaner pole is in the wrong location the performance of the new blade may be adversely affected. See "Possible Problems" below. For tensioning, please follow these instructions.

#### Correct Location:

When blade contact is made against the head pulley (prior to tensioning) there should be a 2–3 mm (1/16–1/8") gap at the bottom of the blade face (Fig. 1).


#### Possible Problems:

- Pole location too far out - The initial blade/belt contact gap will be larger than 3 mm (1/8") (Fig. 2). If the blade is correctly tensioned it may flip through before it is fully worn. If tensioned too lightly, it will develop the "smile effect" quickly and not clean properly.
- Pole location too far in - If there is no gap at the initial blade/belt contact (Fig. 3), the tip of the blade may not be touching the belt. In this case, the blade will push away and lose its shearing (cleaning) effect. The blade may also develop a flap at the tip which may trap material.

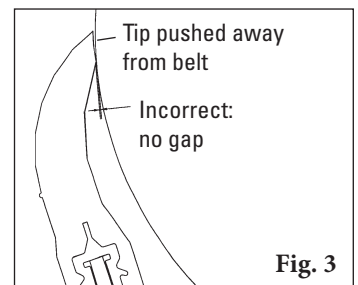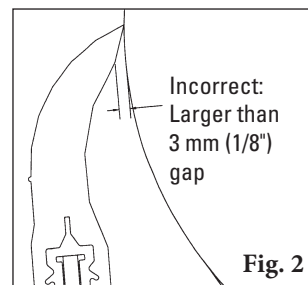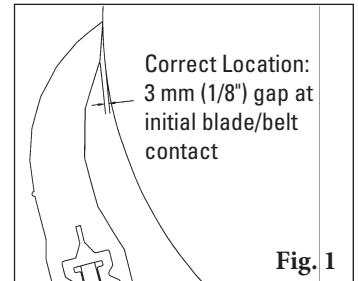


#### Correct Tensioning:

The blade should be tensioned until the gap is gone (Fig. 4).

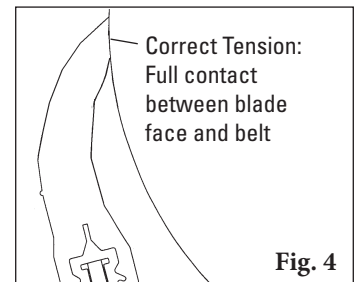



#### The "Material Path" Option

For optimal cleaning and reduced blade retensioning, the cleaner blade width should be sized to fit the material path of the belt. The material path is typically the center 2/3 of the belt width. Choosing a blade only slightly wider than the material path can decrease differential blade wear which reduces blade retensioning maintenance, as well as reducing the frequency of blade replacement.

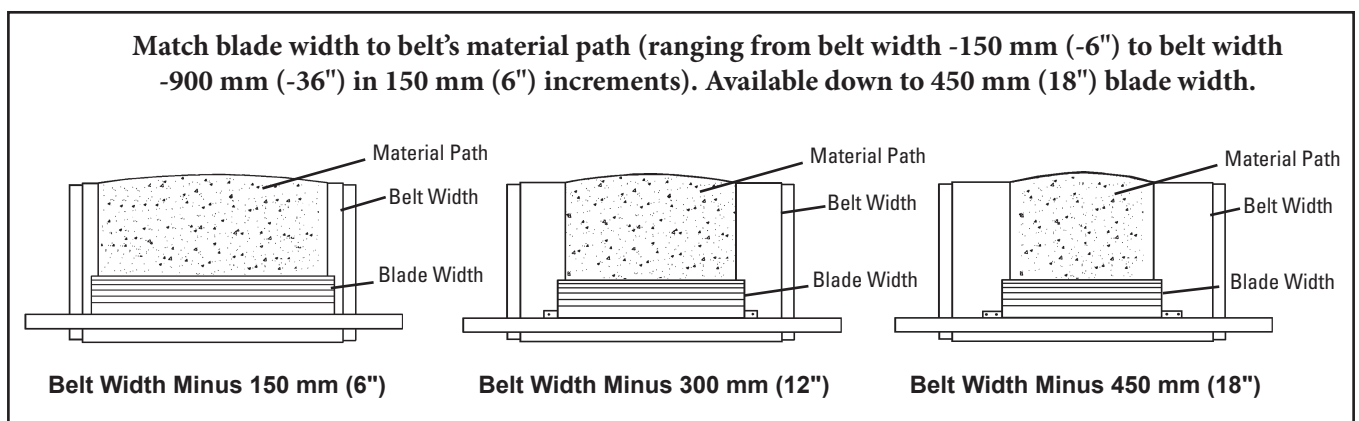

## Section 4 - Installation Instructions

### 4.1 MMP Precleaner

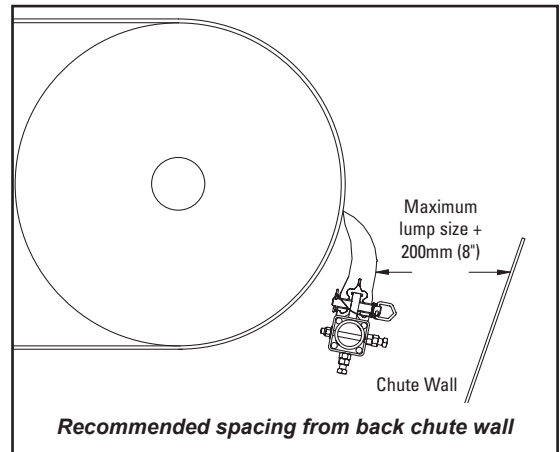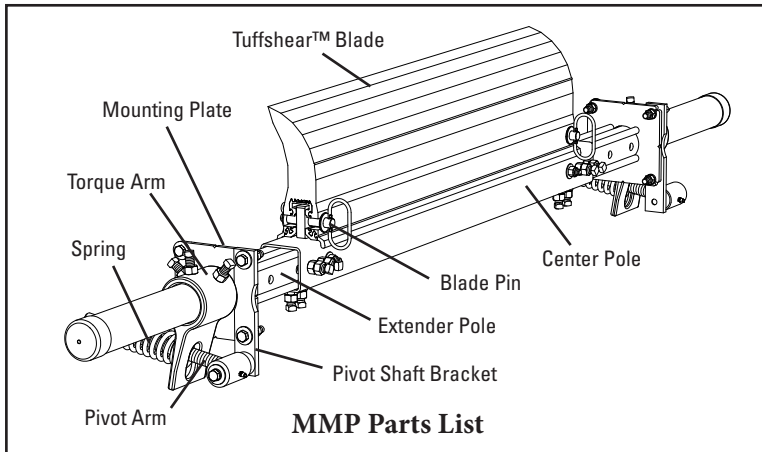

**PHYSICALLY LOCK OUT AND TAG THE CONVEYOR AT THE POWER SOURCE BEFORE YOU BEGIN CLEANER INSTALLATION.**

**CAUTION:** Components may be heavy. Use safety-approved lifting procedures.


#### Tools Needed:

- Tape Measure
- Level
- 19 mm (3/4") combination wrench
- Ratchet with 19 mm (3/4") socket
- Marking pen or soapstone
- Adjustable pliers
- Large adjustable wrench
- Torch or welder

1. **Find the X, Y & C specifications.** Measure the pulley diameter (including the belt and the lagging) (Fig. 1).

Pulley Diameter \_\_\_\_"; X=\_\_\_\_"; Y=\_\_\_\_"; C=\_\_\_\_".

(Adjustments can be made to the X & Y coordinates to move away from obstacles as long as the C dimension remains constant. See Section 3.2.)

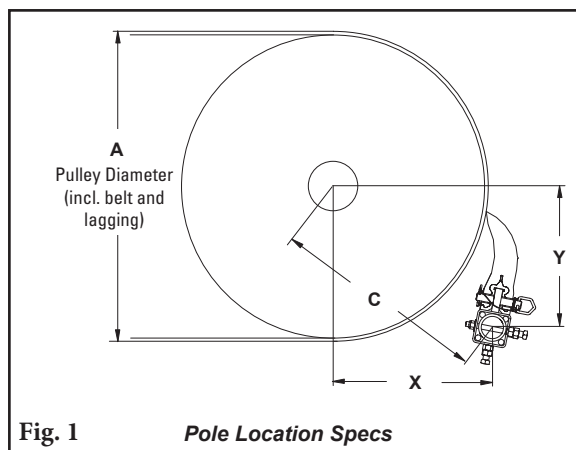

**Pole Location Chart**

A		X		Y		C	
mm	in	mm	in	mm	in	mm	in
400	16	206	8 1/8	300	12	368	14 1/2
425	17	222	8 3/4	300	12	378	14 7/8
450	18	235	9 1/4	300	12	384	15 1/8
475	19	248	9 3/4	300	12	394	15 1/2
500	20	264	10 3/8	300	12	403	15 7/8
525	21	279	11	300	12	413	16 1/4
550	22	292	11 1/2	300	12	422	16 5/8
575	23	305	12	300	12	432	17
600	24	321	12 5/8	300	12	441	17 3/8
625	25	333	13 1/8	300	12	451	17 3/4
650	26	346	13 5/8	300	12	460	18 1/8
675	27	359	14 1/8	300	12	470	18 1/2
700	28	371	14 5/8	300	12	479	18 7/8
725	29	387	15 1/4	300	12	492	19 3/8
750	30	397	15 5/8	300	12	502	19 3/4
775	31	410	16 1/8	300	12	511	20 1/8
800	32	425	16 3/4	300	12	524	20 5/8
825	33	438	17 1/4	300	12	533	21
850	34	451	17 3/4	300	12	543	21 3/8
875	35	464	18 1/4	300	12	556	21 7/8
900	36	476	18 3/4	300	12	565	22 1/4
925	37	492	19 3/8	300	12	578	22 3/4
950	38	502	19 3/4	300	12	587	23 1/8
975	39	518	20 3/8	300	12	600	23 5/8
1000	40	527	20 3/4	300	12	610	24
1025	41	543	21 3/8	300	12	622	24 1/2
1050	42	556	21 7/8	300	12	635	25
1075	43	572	22 1/2	300	12	648	25 1/2
1100	44	587	23 1/8	300	12	660	26
1125	45	600	23 5/8	300	12	673	26 1/2
1150	46	613	24 1/8	300	12	686	27
1175	47	629	24 3/4	300	12	699	27 1/2
1200	48	641	25 1/4	300	12	711	28

## Section 4 - Installation Instructions

### 4.1 MMP Precleaner

2. **Lay out the dimensions on the chute wall.** Measure out the X dimension horizontally from the center of the pulley shaft and mark. (**NOTE:** It may be easier to put a level on top of the pulley shaft, draw a horizontal line and then measure down half the diameter of the shaft and make a line from the front of the shaft. Now subtract half the pulley shaft diameter from the X coordinate and measure on the line and make a mark.) Then measure down vertically the Y dimension and mark. This is the correct position for the center of the cleaner pole (Fig. 2). Lay out and mark the same dimensions on the other side.
3. **Mark and cut the mounting base holes.** Using the mounting base template provided in the instruction packet, position the large pole hole of the template on the chute with the hole notches aligned with the layout lines. Trace the pole hole and mounting holes (Fig. 3). Each base can be mounted in any position 360° around the pole as long as the pole's center point does not change. Cut the holes on both sides of the chute.
4. **Assemble the extender poles to the center pole.** Insert the extender poles through the chute holes and into the center pole (Fig. 4). Leave the locking bolts loose.
5. **Install the mounting plates.** Position both mounting plates with the keyways toward the pulley and weld or bolt the mounting plates in place using bolts provided (Fig. 5).
6. **Center the cleaner on the belt and lock in place.** Reinstall the blade (Fig. 6a). Slide the pole until the blade is centered or covers the material path (Fig. 6b).

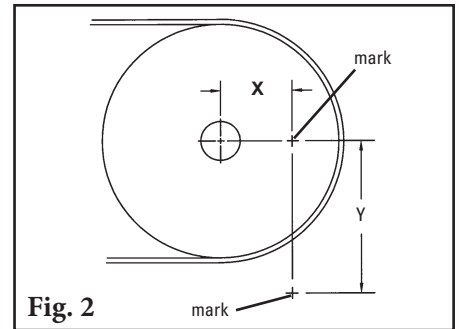


Fig. 2

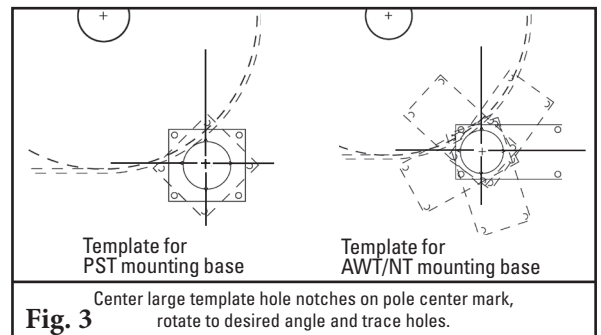


Fig. 3

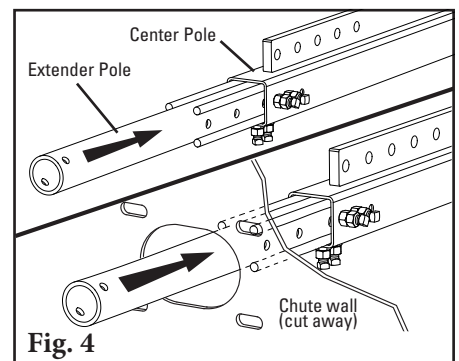


Fig. 4

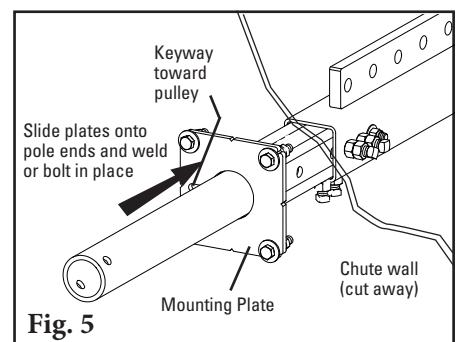


Fig. 5

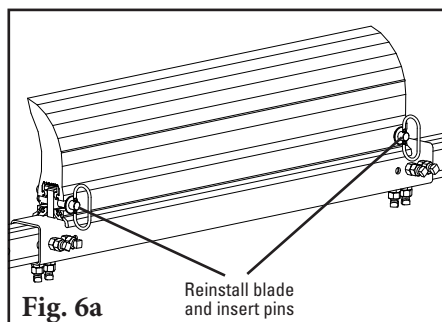


Fig. 6a

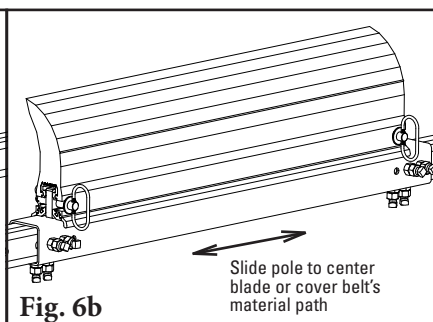


Fig. 6b

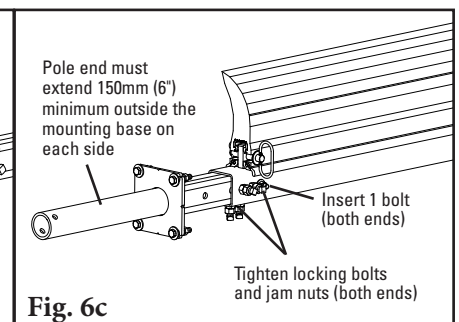


Fig. 6c

## Section 4 - Installation Instructions

### 4.2 MMP Precleaner - QMT Spring Tensioner

**Install the Tensioning System.** For the QMT Spring Tensioner go to step 7S. For the PAT Tensioner proceed to step 7P.

- 7S. Install the QMT spring tensioner.** Remove the adjusting nuts and springs from the pivot rod. Insert the pivot arm through the slot in the torque arm. Slide the torque arm onto the pole end (be sure the rotation of the arm is correct to tension the blade) and rotate it until the pivot shaft bracket lines up with the desired bolt holes (Fig. 7). Remove bolts, nuts and washers from mounting plate and reinstall through pivot shaft bracket and mounting plate.
- 8S. Reassemble the spring assembly.** Slide the spring, washer and bushings onto the pivot arm and turn the two adjusting nuts so about 6 mm (1/4") of the pivot arm is exposed above the nuts (Fig. 8).
- 9S. Tension the blade to the belt.** Rotate the blade until it contacts the belt. While holding the spring bushing flat on the torque arm, rotate the torque arm until the pivot arm is against the end of the slot nearest the pole. Tighten the locking bolts and jam nuts on the torque arm (Fig. 9).





**NOTE:** The torque arm should be up against the mounting plate.

- 10S. Set the correct blade tension.** Refer to the chart on the pivot shaft bracket for the spring length required for the belt width. Lightly pull the pivot arm toward the end of the torque arm slot nearest the pole and turn the adjusting nuts until the required spring length is achieved.

**QMT Spring Length Chart**

Blade Width		Purple Springs		White Springs		Gold Springs		Silver Springs	
mm	in.	mm	in.	mm	in.	mm	in.	mm	in.
450	18	111	4 3/8	152	6	N/A	N/A	N/A	N/A
600	24	N/A	N/A	146	5 3/4	152	6	N/A	N/A
750	30	N/A	N/A	140	5 1/2	149	5 7/8	N/A	N/A
900	36	N/A	N/A	137	5 3/8	146	5 3/4	N/A	N/A
1050	42	N/A	N/A	130	5 1/8	143	5 5/8	156	6 1/8
1200	48	N/A	N/A	127	5	143	5 5/8	156	6 1/8
1350	54	N/A	N/A	121	4 3/4	140	5 1/2	152	6
1500	60	N/A	N/A	114	4 1/2	137	5 3/8	152	6
1650	66	N/A	N/A	N/A	N/A	133	5 1/4	149	5 7/8
1800	72	N/A	N/A	N/A	N/A	130	5 1/8	149	5 7/8
1950	78	N/A	N/A	N/A	N/A	127	5	146	5 3/4
2100	84	N/A	N/A	N/A	N/A	124	4 7/8	146	5 3/4
2250	90	N/A	N/A	N/A	N/A	N/A	N/A	146	5 3/4
2400	96	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2550	102	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2700	108	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2
2850	114	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2

Shading indicates preferred spring option.

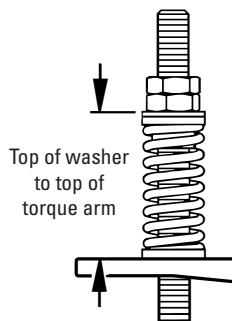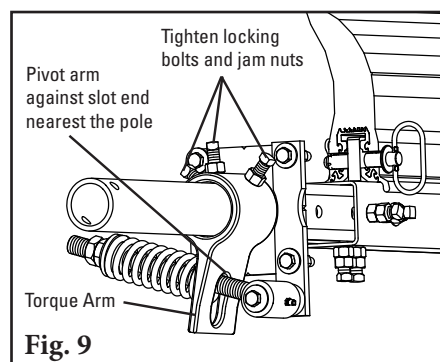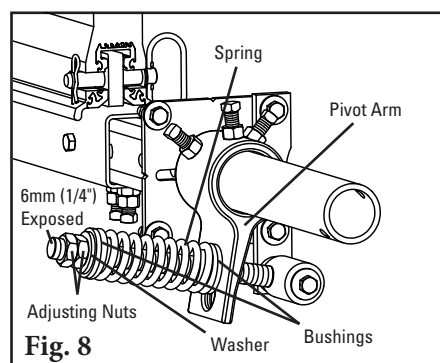
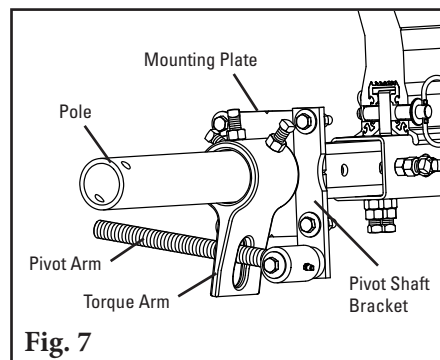


## Section 4 - Installation Instructions

### 4.3 MMP Precleaner - PAT Tensioner

**NOTE:** PAT Tensioners are shipped with the air bags and torque arms attached to the mounting bases.

- 7P. Tension the blades to the belt.** Collapse both air bags (with C-clamps) and rotate the blades until they are 25 mm (1") short of contact with the belt. Tighten the torque arm locking bolts and jam nuts (Fig. 10).
- 8P. Connect the supply lines and set tension pressure.** With the parts supplied, attach a line to each air bag and run the lines to the outlet side of the control box (Fig. 11). **NOTE:** Be sure lines are safely away from the belt. Connect a line from the inlet side of the box to the site's supply, or air tank. Test the connections for leaks and set the pressure per the chart on the control box (also shown to right).
- 9P. Test run the cleaner.** Run the conveyor for at least 15 minutes and inspect cleaning performance. Make adjustments as necessary.

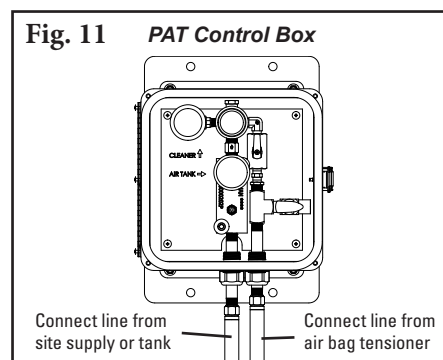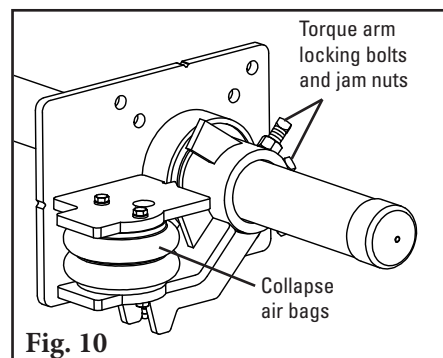

**PAT Pressure Chart**

Blade Width		Pressure	
mm	in.	kPa	psi
450	18	34	5
600	24	41	6
800	32	55	8
900	36	62	9
1050	42	76	11
1200	48	90	13
1350	54	97	14
1500	60	110	16
1650	66	117	17
1800	72	131	19
1950	78	145	21
2100	84	152	22
2250	90	165	24
2400	96	172	25
2550	102	186	27
2700	108	193	28
2850	114	207	30

\*PSI setting is based on belt width.

## Section 5 - Pre-Operation Checklist and Testing

---

### 5.1 Pre-Op Checklist

- Recheck that all fasteners are tightened properly.
- Add pole caps.
- Apply all supplied labels to the cleaner.
- Check the blade location on the belt.
- Be sure that all installation materials and tools have been removed from the belt and the conveyor area.

### 5.2 Test Run the Conveyor

- Run the conveyor for at least 15 minutes and inspect the cleaning performance.
- Check the tensioner spring for recommended length (proper tensioning).
- Make adjustments as necessary.

**NOTE:** Observing the cleaner when it is running and performing properly will help to detect problems or when adjustments are needed later.

## Section 6 - Maintenance

---

Flexco belt cleaners are designed to operate with minimum maintenance. However, to maintain superior performance some service is required. When the cleaner is installed a regular maintenance program should be set up. This program will ensure that the cleaner operates at optimal efficiency and problems can be identified and fixed before the cleaner stops working.

All safety procedures for inspection of equipment (stationary or operating) must be observed. The MMP Precleaner operates at the discharge end of the conveyor and is in direct contact with the moving belt. Only visual observations can be made while the belt is running. Service tasks can be done only with the conveyor stopped and by observing the correct lockout/tagout procedures.

### 6.1 New Installation Inspection

After the new cleaner has run for a few days a visual inspection should be made to ensure the cleaner is performing properly. Make adjustments as needed.

### 6.2 Routine Visual Inspection (every 2-4 weeks)

A visual inspection of the cleaner and belt can determine:

- If the spring length is the correct length for optimal tensioning.
- If the belt looks clean or if there are areas that are dirty.
- If the blade is worn out and needs to be replaced.
- If there is damage to the blade or other cleaner components.
- If fugitive material is built up on the cleaner or in the transfer area.
- If there is cover damage to the belt.
- If there is vibration or bouncing of the cleaner on the belt.
- If a snub pulley is used, a check should be made for material buildup on the pulley.

If any of the above conditions exist, a determination should be made on when the conveyor can be stopped for cleaner maintenance.



### 6.3 Routine Physical Inspection (every 6-8 weeks)

When the conveyor is not in operation and properly locked and tagged out a physical inspection of the cleaner to perform the following tasks:

- Clean material buildup off of the cleaner blade and pole.
- Closely inspect the blade for wear and any damage. Replace if needed.
- Check both blade pins and retaining clips for proper installation and condition. Replace if needed.
- Ensure full blade to belt contact.
- Inspect the cleaner pole for damage.
- Inspect all fasteners for tightness and wear. Tighten or replace as needed.
- Replace any worn or damaged components.
- Check the tension of the cleaner blade to the belt. Adjust the tension if necessary using the chart on the cleaner or the one on page 12/13.
- When maintenance tasks are completed, test run the conveyor to ensure the cleaner is performing properly.

## Section 6 - Maintenance

### 6.4 Blade Replacement Instructions

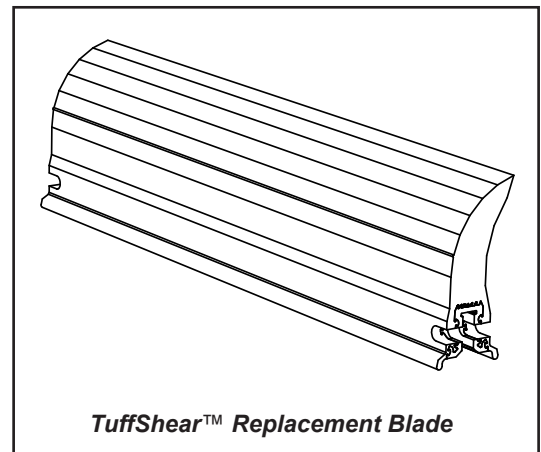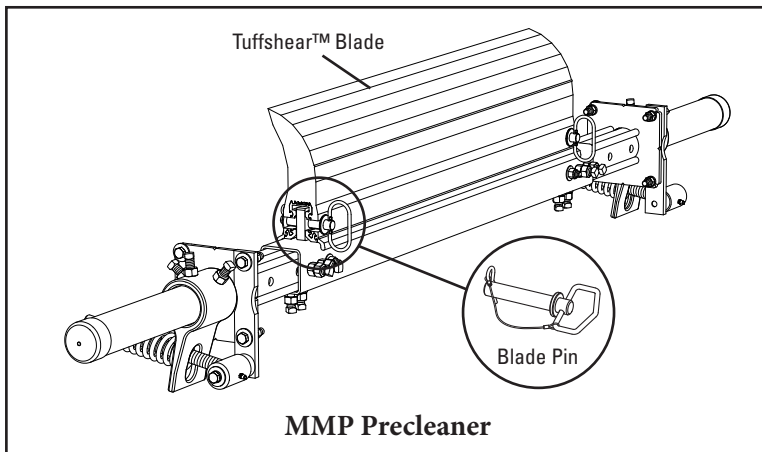



**PHYSICALLY LOCK OUT AND TAG THE CONVEYOR AT THE POWER SOURCE BEFORE YOU BEGIN CLEANER MAINTENANCE.**

#### Tools Needed:

- Tape Measure
- Wrenches or Crescent Wrenches: (2) 38mm (1-1/2")
- Wire brush (for cleaning pole)
- Small putty knife (for cleaning pole)

1. **Remove the tension.** Loosen the adjusting nuts on both sides and turn them out until they are flush with ends of the pivot arms (Fig. 1) or release pressure from air control box. This releases the tension of the blade on the belt.
2. **Remove the worn blade.** Remove one blade pin and remove the blade from the pole (Fig. 2). Clean all fugitive material from the pole.

**NOTE:** If blade is hard to remove use a screwdriver or hammer to loosen it and then remove.

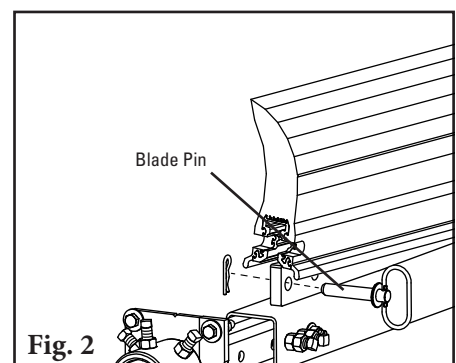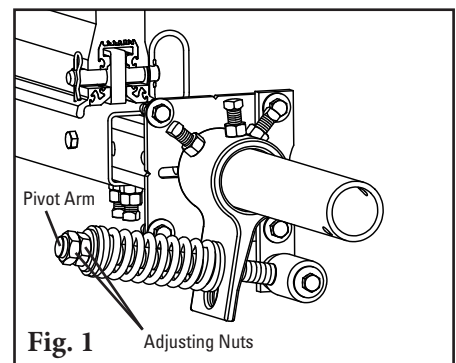


## Section 6 - Maintenance

### 6.4 Blade Replacement Instructions

3. **Install the new blade.** Slide the new blade onto the pole, locking it into the far blade pin, then reinstall the removed blade pin, washer and clip (Fig. 3).
4. **Reset the correct blade tension.** Refer to the charts for the spring length or PSI required for the belt width. For QMT lightly pull the pivot arm toward the end of the torque arm slot nearest the pole and turn the adjusting nuts until the required spring length is achieved.

**NOTE:** The chart is also on the cleaner's pivot shaft bracket for future reference for retensioning maintenance.


**Test run the cleaner.** Run the conveyor for at least 15 minutes and inspect the cleaning performance. Check the spring length for proper tensioning. Make adjustments as necessary.

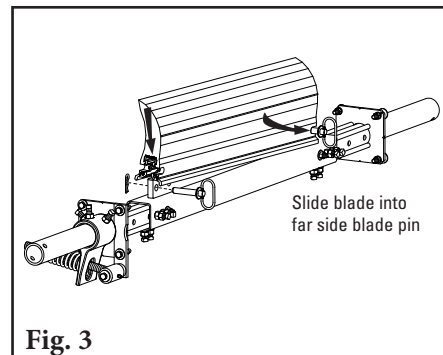

**QMT Spring Length Chart**

Blade Width		Purple Springs		White Springs		Gold Springs		Silver Springs	
mm	in.	mm	in.	mm	in.	mm	in.	mm	in.
450	18	111	4 3/8	152	6	N/A	N/A	N/A	N/A
600	24	N/A	N/A	146	5 3/4	152	6	N/A	N/A
750	30	N/A	N/A	140	5 1/2	149	5 7/8	N/A	N/A
900	36	N/A	N/A	137	5 3/8	146	5 3/4	N/A	N/A
1050	42	N/A	N/A	130	5 1/8	143	5 5/8	156	6 1/8
1200	48	N/A	N/A	127	5	143	5 5/8	156	6 1/8
1350	54	N/A	N/A	121	4 3/4	140	5 1/2	152	6
1500	60	N/A	N/A	114	4 1/2	137	5 3/8	152	6
1650	66	N/A	N/A	N/A	N/A	133	5 1/4	149	5 7/8
1800	72	N/A	N/A	N/A	N/A	130	5 1/8	149	5 7/8
1950	78	N/A	N/A	N/A	N/A	127	5	146	5 3/4
2100	84	N/A	N/A	N/A	N/A	124	4 7/8	146	5 3/4
2250	90	N/A	N/A	N/A	N/A	N/A	N/A	146	5 3/4
2400	96	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2550	102	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2700	108	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2
2850	114	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2

Shading indicates preferred spring option.

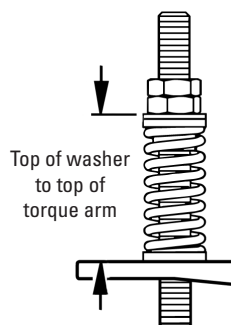

**PAT Pressure Chart**

Blade Width		Pressure	
mm	in.	kPa	psi
450	18	34	5
600	24	41	6
800	32	55	8
900	36	62	9
1050	42	76	11
1200	48	90	13
1350	54	97	14
1500	60	110	16
1650	66	117	17
1800	72	131	19
1950	78	145	21
2100	84	152	22
2250	90	165	24
2400	96	172	25
2550	102	186	27
2700	108	193	28
2850	114	207	30

\*PSI setting is based on belt width.

## Section 6 - Maintenance

---

### 6.5 Maintenance Log

Conveyor Name/No. \_\_\_\_\_

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

Date: \_\_\_\_\_ Work done by: \_\_\_\_\_ Service Quote #: \_\_\_\_\_

Activity: \_\_\_\_\_

---

## Section 6 - Maintenance

### 6.6 Cleaner Maintenance Checklist

Site: \_\_\_\_\_ Inspected by: \_\_\_\_\_ Date: \_\_\_\_\_

Belt Cleaner: \_\_\_\_\_ Serial Number: \_\_\_\_\_

#### Beltline Information:

Beltline Number: \_\_\_\_\_ Belt Condition: \_\_\_\_\_

Belt ☐ 600mm ☐ 750mm ☐ 900mm ☐ 1050mm ☐ 1200mm ☐ 1350mm ☐ 1500mm ☐ 1800mm ☐ 2100mm ☐ 2400mm ☐ 2700mm ☐ 3000mm  
Width: (24") (30") (36") (42") (48") (54") (60") (72") (84") (96") (108") (120")

Belt Speed: \_\_\_\_\_ fpm Belt Thickness: \_\_\_\_\_

Belt Splice: \_\_\_\_\_ Condition of Splice: \_\_\_\_\_ Number of Splices: \_\_\_\_\_ ☐ Skived ☐ Unskived  
\*It is recommended that mechanical fasteners on the belt be skived.

Material conveyed: \_\_\_\_\_

Days per week run: \_\_\_\_\_ Hours per day run: \_\_\_\_\_

#### Blade Life:

Date blade installed: \_\_\_\_\_ Date blade inspected: \_\_\_\_\_ Estimated blade life: \_\_\_\_\_

Is blade making complete contact with belt? ☐ Yes ☐ No

Blade wear: Left \_\_\_\_\_ Middle \_\_\_\_\_ Right \_\_\_\_\_

Blade condition: ☐ Good ☐ Grooved ☐ Smiled ☐ Not contacting belt ☐ Damaged

Measurement of spring: Required \_\_\_\_\_ Currently \_\_\_\_\_

For PAT Tensioner only: Air/Nitrogen Pressure Required \_\_\_\_\_ Currently \_\_\_\_\_  
Inspect PAT bags and lines

Was Cleaner Adjusted: ☐ Yes ☐ No

Pole Condition: ☐ Good ☐ Bent ☐ Worn

Lagging: ☐ Side Lag ☐ Ceramic ☐ Rubber ☐ Other ☐ None

Condition of lagging: ☐ Good ☐ Bad ☐ Other: \_\_\_\_\_

Cleaner's Overall Performance: (Rate the following 1 - 5, 1= very poor - 5 = very good)

Appearance: ☐: Comments: \_\_\_\_\_

Location:: ☐: Comments: \_\_\_\_\_

Maintenance:: ☐: Comments: \_\_\_\_\_

Performance:: ☐: Comments: \_\_\_\_\_

Other comments: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

## Section 7 - Troubleshooting

Problem	Possible Cause	Possible Solutions
Poor Cleaning Performance	Cleaner under-tensioned	Adjust to correct tension - see chart
	Cleaner over-tensioned	Adjust to correct tension - see chart
	Cleaner installed in wrong location	Verify “C” dimension, relocate to correct dimension
	Cleaner blade worn or damaged	Replace cleaner blade
Rapid Blade Wear	Tension on cleaner too high/low	Adjust to correct tension - see chart
	Cleaner not located correctly	Check cleaner location for correct dimensions
	Blade attack angle incorrect	Check cleaner location for correct dimensions
	Material too abrasive for blade	Option: switch to alternate cleaner with metal blades
	Mechanical splice damaging blade	Repair, skive or replace splice
Center wear on blade (smile effect)	Blade wider than material path	Replace blade with width to match material path
	Tension on cleaner too high/low	Adjust to correct tension - see chart
Unusual wear or damage to blade	Mechanical splice damaging blade	Repair, skive or replace splice
	Belt damaged or ripped	Repair or replace belt
	Cleaner not correctly located	Verify “C” dimension, relocate to correct dimension
	Damage to pulley or pulley lagging	Repair or replace pulley
Vibration or noise	Cleaner not located correctly	Verify “C” dimension, relocate to correct dimension
	Blade attack angle incorrect	Verify “C” dimension, relocate to correct dimension
	Cleaner running on empty belt	Use a spray pole when the belt is empty
	Cleaner tension too high/low	Adjust to correct tension or slight adjust to diminish
	Cleaner locking bolts not secure	Check and tighten all bolts and nuts
	Cleaner not square to head pulley	Verify “C” dimension, relocate to correct dimension
	Material buildup in chute	Clean up build-up on cleaner and in chute
Cleaner being pushed away from pulley	Cleaner tension not set correctly	Ensure correct tension/increase tension slightly
	Sticky material is overburdening cleaner	Increase tension; replace with cleaner with metal tips; replace with larger size cleaner
	Cleaner not set up correctly	Confirm location dimensions are equal on both sides


# Section 8 - Specs and CAD Drawing

## 8.1 Specs and Guidelines

### Pole Length Specifications\*

CLEANER SIZE		MAX OVERALL POLE LENGTH		CENTER POLE LENGTH		MAXIMUM CONVEYOR SPAN	
mm	in.	mm	in.	mm	in.	mm	in.
600	24	1950	78	600	24	1650	66
750	30	2100	84	750	30	1800	72
900	36	2250	90	900	36	1950	78
1050	42	2400	96	1050	42	2100	84
1200	48	2550	102	1200	48	2250	90
1350	54	2700	108	1350	54	2400	96
1500	60	2850	114	1500	60	2550	102
1800	72	3150	126	1800	72	2850	114
2100	84	3450	138	2100	84	3150	126
2400	96	3750	150	2400	96	3450	138
2700	108	4050	162	2700	108	3750	150
3000	120	4350	174	3000	120	4050	162


\* For special extra long pole length requirements a Pole Extender Kit (#76024) is available that provides 750 mm (30") of extended pole length.

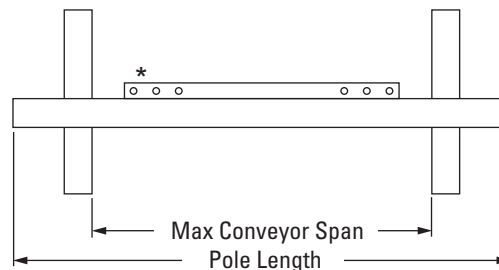

\*Each pole size can be used with a blade size matched to the belt's material path (ranging from belt width -150 mm (-6") to belt width -900 mm (-36") in 150 mm (6") increments). Available down to 450 mm (18") blade width.

### Clearance Guidelines for Installation


HORIZONTAL CLEARANCE REQUIRED		VERTICAL CLEARANCE REQUIRED	
mm	in.	mm	in.
100	4	325	13

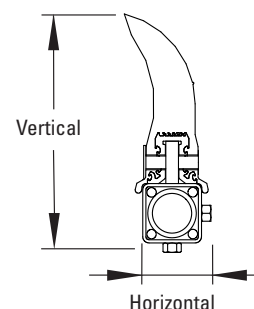

### OMT Spring Length Chart

Blade Width		Purple Springs		White Springs		Gold Springs		Silver Springs	
mm	in.	mm	in.	mm	in.	mm	in.	mm	in.
450	18	111	4 3/8	152	6	N/A	N/A	N/A	N/A
600	24	N/A	N/A	146	5 3/4	152	6	N/A	N/A
750	30	N/A	N/A	140	5 1/2	149	5 7/8	N/A	N/A
900	36	N/A	N/A	137	5 3/8	146	5 3/4	N/A	N/A
1050	42	N/A	N/A	130	5 1/8	143	5 5/8	156	6 1/8
1200	48	N/A	N/A	127	5	143	5 5/8	156	6 1/8
1350	54	N/A	N/A	121	4 3/4	140	5 1/2	152	6
1500	60	N/A	N/A	114	4 1/2	137	5 3/8	152	6
1650	66	N/A	N/A	N/A	N/A	133	5 1/4	149	5 7/8
1800	72	N/A	N/A	N/A	N/A	130	5 1/8	149	5 7/8
1950	78	N/A	N/A	N/A	N/A	127	5	146	5 3/4
2100	84	N/A	N/A	N/A	N/A	124	4 7/8	146	5 3/4
2250	90	N/A	N/A	N/A	N/A	N/A	N/A	146	5 3/4
2400	96	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2550	102	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2700	108	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2
2850	114	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2

Shading indicates preferred spring option.

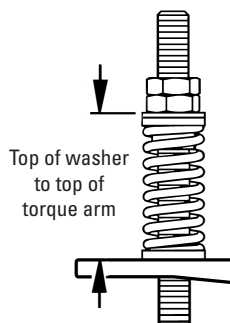

### PAT Pressure Chart

Blade Width		Pressure	
mm	in.	kPa	psi
450	18	34	5
600	24	41	6
800	32	55	8
900	36	62	9
1050	42	76	11
1200	48	90	13
1350	54	97	14
1500	60	110	16
1650	66	117	17
1800	72	131	19
1950	78	145	21
2100	84	152	22
2250	90	165	24
2400	96	172	25
2550	102	186	27
2700	108	193	28
2850	114	207	30

\*PSI setting is based on belt width.

### Specifications:

- Maximum Belt Speed .....5M/sec (1000 FPM)
- Temperature Rating .....-35 to 82°C (-30 to 180°F)
- Minimum Pulley Diameter .....400mm (16")
- Usable Blade Wear Length .....150mm (6")
- Blade .....Urethane (proprietary blend for abrasion resistance and long wear)
- Available for Belt Widths.....600 to 3000mm (24 to 120"). Other sizes available upon request.
- CEMA Cleaner Rating.....Class 4


## Section 8 - Specs and CAD Drawing

### 8.1 Specs and Guidelines - MMP UG

#### Pole Length Specifications\*

CLEANER SIZE		MAX OVERALL POLE LENGTH		CENTER POLE LENGTH		MAXIMUM CONVEYOR SPAN	
mm	in.	mm	in.	mm	in.	mm	in.
1200	48	3600	144	1350	54	3300	132
1350	54	3750	150	1500	60	3450	138
1500	60	3900	156	1650	66	3600	144
1800	72	4200	168	1950	78	3900	156
2100	84	4500	180	2250	90	4200	168
2400	96	4800	192	2550	102	4500	180
2700	108	5100	204	2850	114	4800	192
3000	120	4350	216	3150	126	5100	204


\* For special extra long pole length requirements a Pole Extender Kit (#76024) is available that provides 750mm (30") of extended pole length. Pole diameter 73mm (2-7/8").

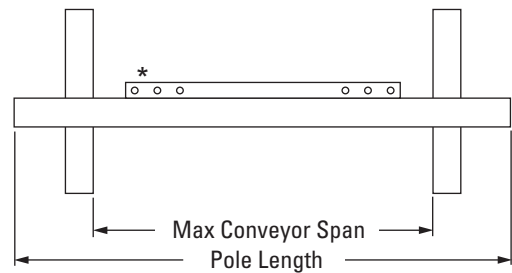

\*Each pole size can be used with a blade size either belt width -150 mm, -300 mm, -450 mm, -600 mm, -750 mm, -900 mm (-6", BW -12", BW -18", BW -24", BW -30", BW -36").

#### Clearance Guidelines for Installation


HORIZONTAL CLEARANCE REQUIRED		VERTICAL CLEARANCE REQUIRED	
mm	in.	mm	in.
100	4	325	13

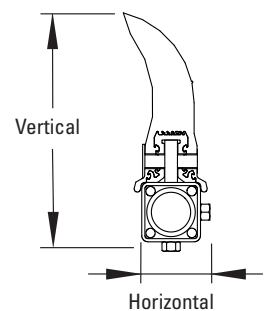

#### QMT Spring Length Chart

Blade Width		Purple Springs		White Springs		Gold Springs		Silver Springs	
mm	in.	mm	in.	mm	in.	mm	in.	mm	in.
450	18	111	4 3/8	152	6	N/A	N/A	N/A	N/A
600	24	N/A	N/A	146	5 3/4	152	6	N/A	N/A
750	30	N/A	N/A	140	5 1/2	149	5 7/8	N/A	N/A
900	36	N/A	N/A	137	5 3/8	146	5 3/4	N/A	N/A
1050	42	N/A	N/A	130	5 1/8	143	5 5/8	156	6 1/8
1200	48	N/A	N/A	127	5	143	5 5/8	156	6 1/8
1350	54	N/A	N/A	121	4 3/4	140	5 1/2	152	6
1500	60	N/A	N/A	114	4 1/2	137	5 3/8	152	6
1650	66	N/A	N/A	N/A	N/A	133	5 1/4	149	5 7/8
1800	72	N/A	N/A	N/A	N/A	130	5 1/8	149	5 7/8
1950	78	N/A	N/A	N/A	N/A	127	5	146	5 3/4
2100	84	N/A	N/A	N/A	N/A	124	4 7/8	146	5 3/4
2250	90	N/A	N/A	N/A	N/A	N/A	N/A	146	5 3/4
2400	96	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2550	102	N/A	N/A	N/A	N/A	N/A	N/A	143	5 5/8
2700	108	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2
2850	114	N/A	N/A	N/A	N/A	N/A	N/A	140	5 1/2

Shading indicates preferred spring option.

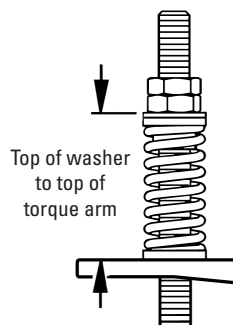

#### PAT Pressure Chart

Blade Width		Pressure	
mm	in.	kPa	psi
450	18	34	5
600	24	41	6
800	32	55	8
900	36	62	9
1050	42	76	11
1200	48	90	13
1350	54	97	14
1500	60	110	16
1650	66	117	17
1800	72	131	19
1950	78	145	21
2100	84	152	22
2250	90	165	24
2400	96	172	25
2550	102	186	27
2700	108	193	28
2850	114	207	30

\*PSI setting is based on belt width.



#### Specifications:

- Maximum Belt Speed .....5M/sec (1000 FPM)
- Temperature Rating .....-35 to 82°C (-30 to 180°F)
- Minimum Pulley Diameter.....400mm (16")
- Usable Blade Wear Length.....150mm (6")
- Blade .....Urethane (proprietary blend for abrasion resistance and long wear)
- Available for Belt Widths .....1200 to 3000mm (48 to 120"). Other sizes available upon request.
- CEMA Cleaner Rating .....Class 4


Section 8 - Specs and CAD Drawing

8.2 CAD Drawing – MMP - QMT Tensioner

 SPECIFICATIONS						MMP PRECLEANER MINUS 6" (50mm)	
BELT WIDTH		BLADE WIDTH 'A'		CENTER POLE LENGTH 'B'		OVERALL POLE LENGTH 'C'	ITEM CODE
(in)	(mm)	(in)	(mm)	(in)	(mm)	(in)	(mm)
24	600	18	450	24	600	78	1950
30	750	24	600	30	750	84	2100
36	900	30	750	36	900	90	2250
42	1050	36	900	42	1050	96	2400
48	1200	42	1050	48	1200	102	2550
54	1350	48	1200	54	1350	108	2700
60	1500	54	1350	60	1500	114	2850
72	1800	66	1650	72	1800	126	3150
84	2100	78	1950	84	2100	138	3450
96	2400	90	2250	96	2400	150	3750

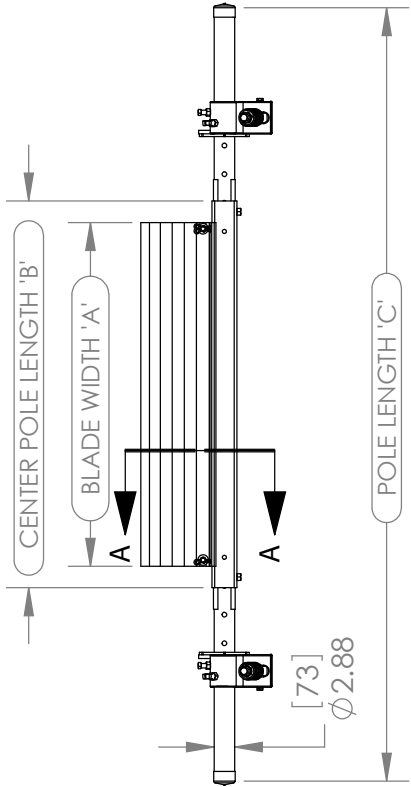


SECTION A-A

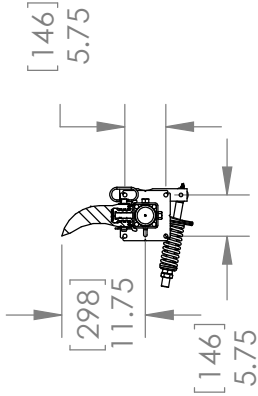

Section 8 - Specs and CAD Drawings



8.2 CAD Drawing – MMP - PAT Tensioner

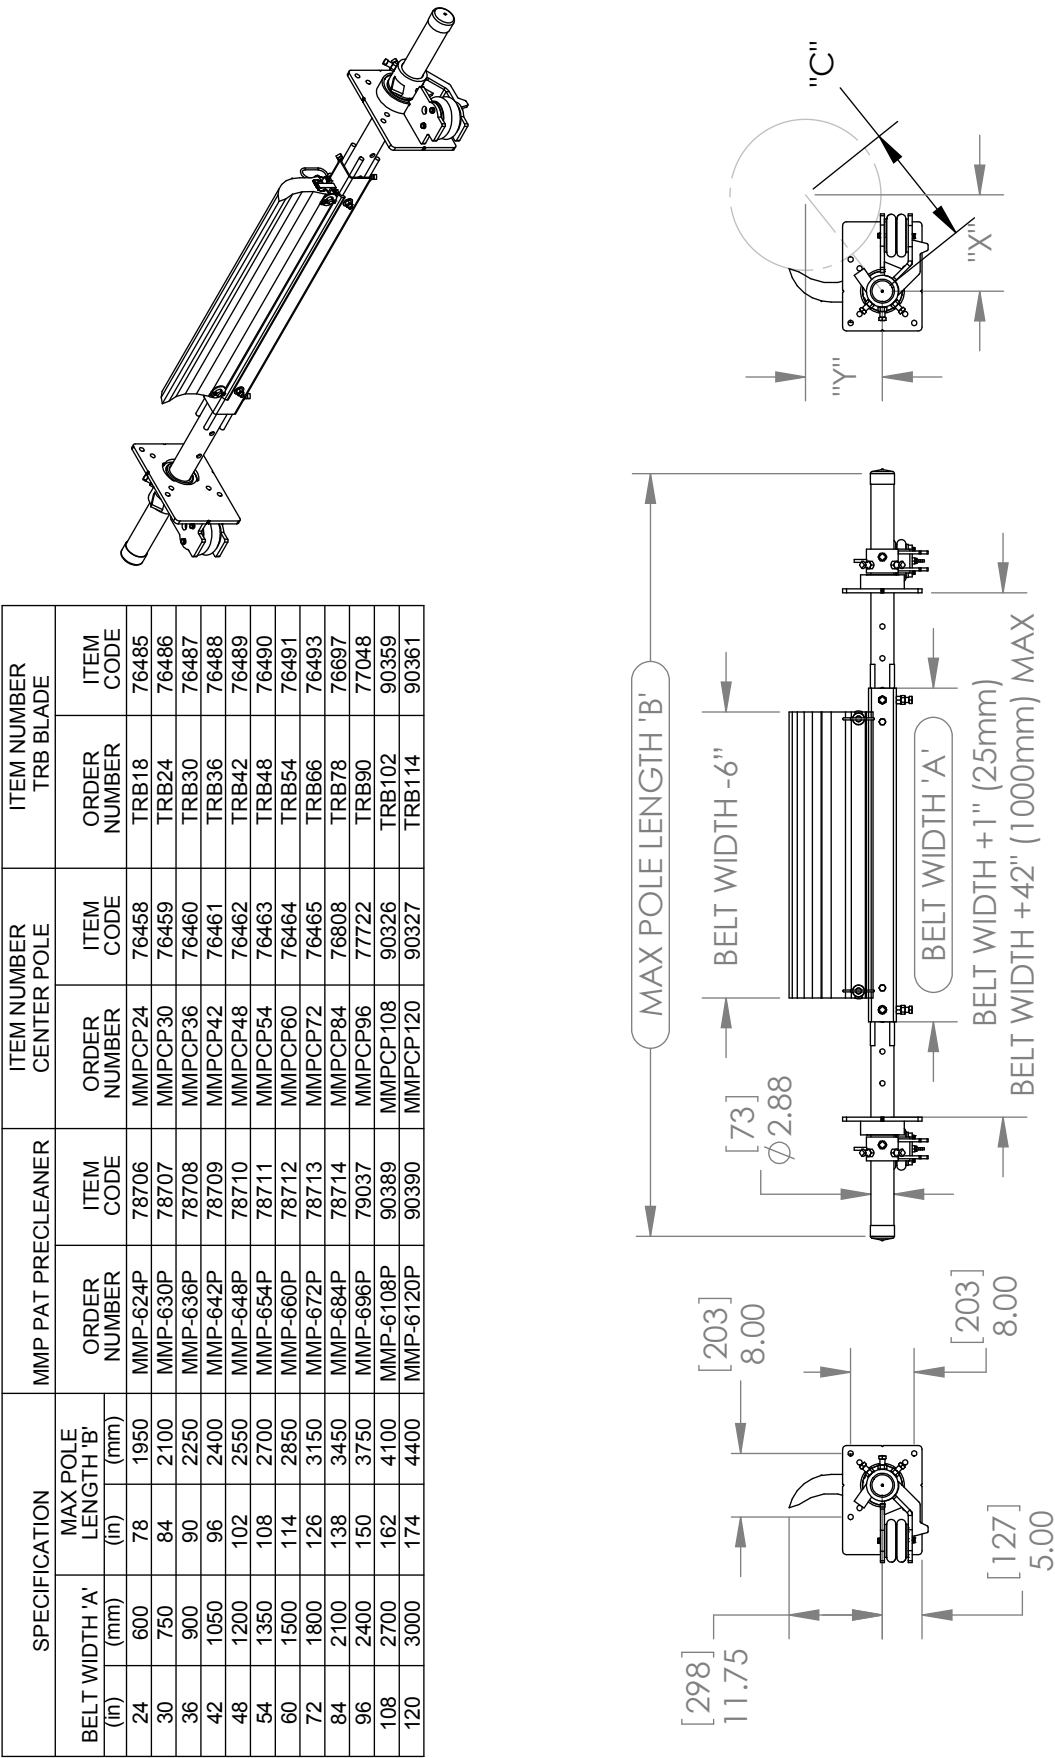

## Section 8 - Specs and CAD Drawings


### 8.2 CAD Drawing — MMP UG - QMT Tensioner

SPECIFICATIONS										MMP PRECLEANER MINUS 6" (50mm)		ITEM NUMBER 1 MMP CENTER POLE	
BELT WIDTH (in)		BLADE WIDTH 'A' (in)		CENTER POLE LENGTH 'B' (in)		OVERALL POLE LENGTH 'C' (in)		ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE		
48	1200	42	1050	54	1350	144	3600	MMP-648-UG	91943	MMPCP54	76463		
54	1350	48	1200	60	1500	150	3750	MMP-654-UG	91944	MMPCP60	76464		
60	1500	54	1350	66	1650	156	3900	MMP-660-UG	91945	MMPCP66	91937		
72	1800	66	1650	78	1950	168	4200	MMP-672-UG	91946	MMPCP78	91938		
84	2100	78	1950	90	2250	180	4500	MMP-684-UG	91947	MMPCP90	91939		
96	2400	90	2250	102	2550	192	4800	MMP-696-UG	91948	MMPCP102	91940		
108	2700	102	2550	114	2850	204	5100	MMP-6108-UG	91949	MMPCP114	91941		
120	3000	114	2850	126	3150	216	5400	MMP-6120-UG	91950	MMPCP126	91942		

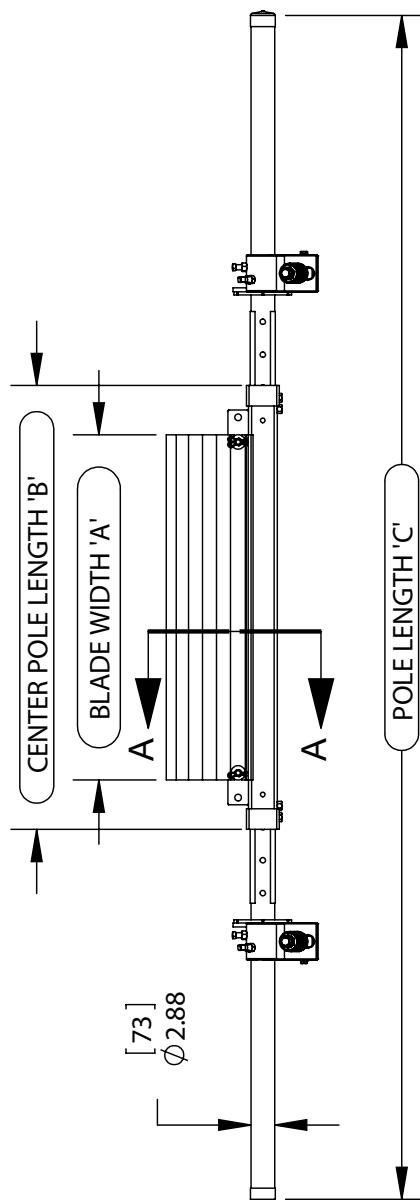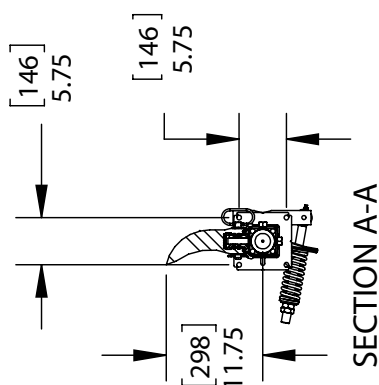


# Section 8 - Specs and CAD Drawings

## 8.2 CAD Drawing – MMP UG - PAT Tensioner

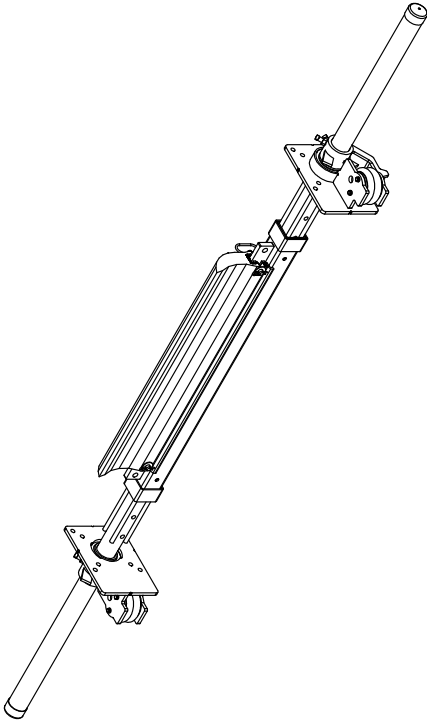

SPECIFICATION			MMP PAT PRECLEANER		ITEM NUMBER ① CENTER POLE		ITEM NUMBER ② TRB BLADE	
BELT WIDTH (in)	(mm)	MAX POLE LENGTH 'A' (in) (mm)		ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE	
48	1200	144	3600	MMP-648P-UG	92014	MMPCP54	76463	TRB42 76489
54	1350	150	3750	MMP-654P-UG	92015	MMPCP60	76464	TRB48 76490
60	1500	156	3900	MMP-660P-UG	92016	MMPCP66	91937	TRB54 76491
72	1800	168	4200	MMP-672P-UG	92017	MMPCP78	91938	TRB66 76493
84	2100	180	4500	MMP-684P-UG	92018	MMPCP90	91939	TRB78 76697
96	2400	192	4800	MMP-696P-UG	92019	MMPCP102	91940	TRB90 77048
108	2700	204	5100	MMP-6108P-UG	92020	MMPCP114	91941	TRB102 90359
120	3000	216	5400	MMP-6120P-UG	92021	MMPCP126	91942	TRB114 90361

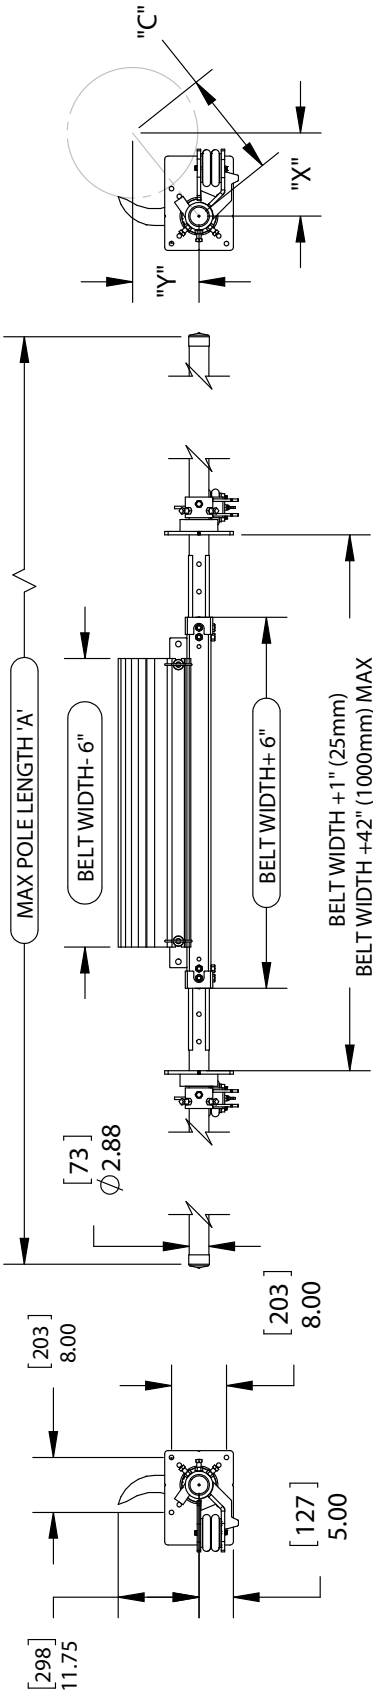

## Section 9 - Replacement Parts


### 9.1 Replacement Parts List - MMP

#### Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	600mm (24") Center Pole	MMPCP24	76458	34.4
	750mm (30") Center Pole	MMPCP30	76459	43.0
	900mm (36") Center Pole	MMPCP36	76460	51.6
	1050mm (42") Center Pole	MMPCP42	76461	60.1
	1200mm (48") Center Pole	MMPCP48	76462	68.7
	1350mm (54") Center Pole	MMPCP54	76463	77.3
	1500mm (60") Center Pole	MMPCP60	76464	85.9
	1800mm (72") Center Pole	MMPCP72	76465	103.1
	2100mm (84") Center Pole	MMPCP84	76808	120.3
	2400mm (96") Center Pole	MMPCP96	77722	137.5
	2700mm (108") Center Pole	MMPCP108	90326	154.7
	3000mm (120") Center Pole	MMPCP120	90327	171.9
2	Extender Pole Kit (2 ea.)	MHP-EP	76392	54.0
3	Mounting Plate Kit* (2 ea.)	MSPMPK	75811	8.3
4	Blade Pin Kit* (1 ea.)	MMPBPK	76466	0.8
5	Pivot Arm Kit* (1 ea.)	QMTPAK	76096	4.3
6	Tension Spring—Purple (1 ea.) for blades 600mm (24")	QMTS-P	75845	0.6
6a	Tension Spring—White (1 ea.) for blades 750–1200mm (30–48")	PSTS-W	75898	1.7
6b	Tension Spring—Gold (1 ea.) for blades 1350–1950mm (54–78")	QMTS-G	76484	2.5
6c	Tension Spring—Silver (1 ea.) for blades 2100–2850mm (84–114")	PSTS-S	75899	3.0
7	Bushing Kit—Purple (2 ea.)	QMTBK-P	76097	0.1
7a	Bushing Kit—White & Silver (2 ea.)	QMTBK-W	76098	0.2
7b	Bushing Kit—Gold (2 ea.)	QMTBK-G	76540	0.3
8	Pivot Shaft Bracket Kit* (1 ea.)	QMTPSBK	76099	4.3
9	Torsion Arm Kit* (1 ea.)	PSTA	75896	11.4
10	Jam Nut Kit, QMT Tensioner	JNK-C	79893	0.3
-	QMT Spring Tensioner*—Purple (incl. 1 ea. Items 5, 6, 7, 8, & 9) for blades 450–600mm (18–24")	QMT-P	76074	20.4
-	QMT Spring Tensioner*—White (incl. 1 ea. Items 5, 6a, 7a, 8, & 9) for blades 750–1200mm (30–48")	QMT-W	76075	21.8
-	QMT Spring Tensioner*—Gold (incl. 1 ea. Items 5, 6b, 7b, 8, & 9) for blades 1350–1950mm (54–78")	QMT-G	76483	23.2
-	QMT Spring Tensioner*—Silver (incl. 1 ea. Items 5, 6c, 7a, 8 & 9) for blades 2100–2850mm (84–114")	QMT-S	79039	20.3
11	Air/Water Bag (1 ea.)	AWTB	75905	3.8
12	Mounting Base (1ea.)	AWTMB	75906	22.9
13	Torque Arm* (1 ea.)	AWTA	75907	11.6
14	Hose Kit (50' (15M) of hose and 6 hose clamps)	AWTHK	75909	6.7
15	AWT Pole Bearing Assy (For cleaners shipped after 4/2016)	AWTPBA	90000	2.3
-	AWT Air/Water Tensioner (includes 2 ea. Items 11, 12, 13 & 14)	AWTNCB	76069	75.2

\*Hardware Included

Lead Time: 1 working day

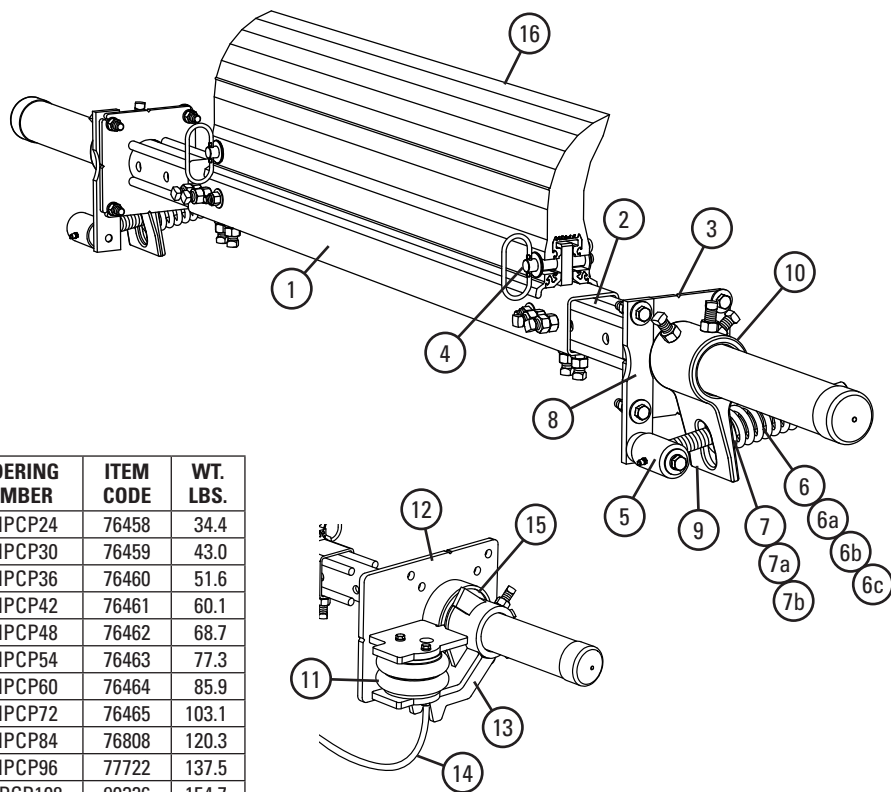

#### Replacement TuffShear™ Blades

REF	BLADE WIDTH		ORDERING NUMBER	ITEM CODE	WT. LBS.
	mm	in.			
16	450	18	TRB18	76485	21.0
	600	24	TRB24	76486	28.0
	750	30	TRB30	76487	35.0
	900	36	TRB36	76488	42.0
	1050	42	TRB42	76489	49.0
	1200	48	TRB48	76490	56.0
	1350	54	TRB54	76491	63.0
	1500	60	TRB60	76492	70.0
	1650	66	TRB66	76493	77.0
	1800	72	TRB72	76494	84.0
	1950	78	TRB78	76697	91.0
	2100	84	TRB84	77047	98.0
	2250	90	TRB90	77048	105.0
	2400	96	TRB96	90358	112.0
	2550	102	TRB102	90359	119.0
	2700	108	TRB108	90360	126.0
	2850	114	TRB114	90361	133.0

Order blade width for your belt width's material path:

Belt Width Minus 150mm (6"), BW -300mm (-12"), BW -450mm (-18"), BW -600mm (-24"), BW -750mm (-30"), or BW -900mm (-36")


Lead Time: 1 working day

#### Spring Tensioner Selection Chart

CLEANER BLADE WIDTH	76074 QMT-P	76075 QMT-W	76483 QMT-G	79039 QMT-S
TuffShear™ 450–600mm (18–24")	X			
TuffShear™ 750–1200mm (30–48")		X		
TuffShear™ 1350–1950mm (54–78")			X	
TuffShear™ 2100–2850mm (84–114")				X

## Section 9 - Replacement Parts

### 9.2 Replacement Parts List - MMP UG

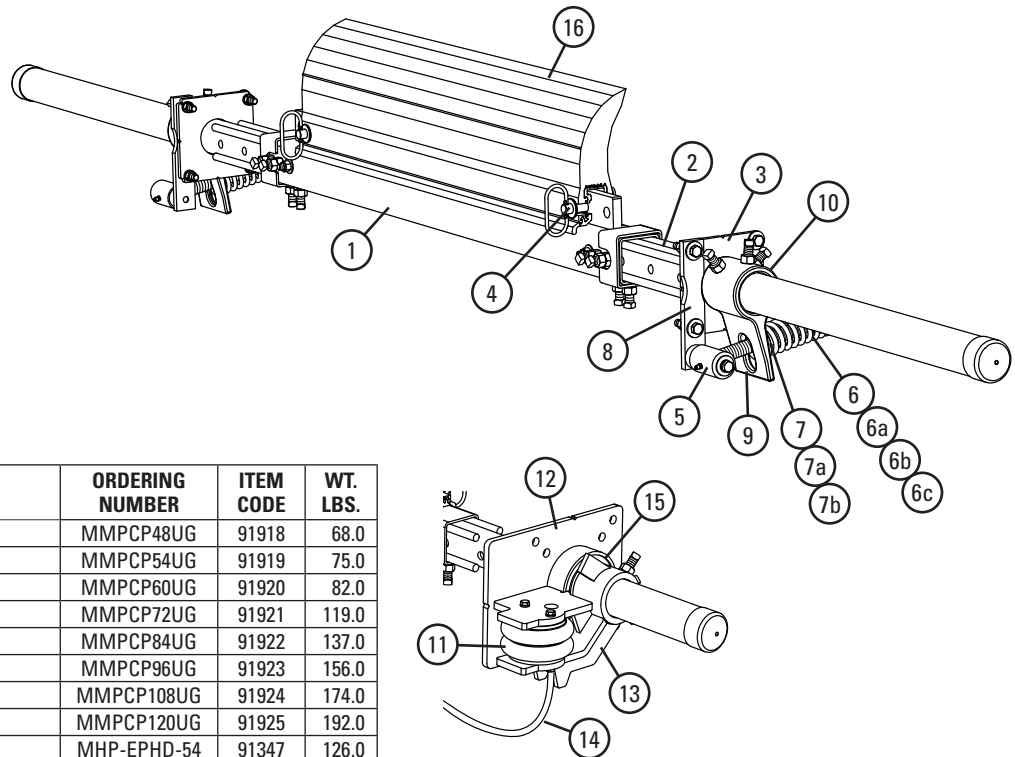

#### Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	1200mm (48") Center Pole	MMPCP48UG	91918	68.0
	1350mm (54") Center Pole	MMPCP54UG	91919	75.0
	1500mm (60") Center Pole	MMPCP60UG	91920	82.0
	1800mm (72") Center Pole	MMPCP72UG	91921	119.0
	2100mm (84") Center Pole	MMPCP84UG	91922	137.0
	2400mm (96") Center Pole	MMPCP96UG	91923	156.0
	2700mm (108") Center Pole	MMPCP108UG	91924	174.0
	3000mm (120") Center Pole	MMPCP120UG	91925	192.0
2	Extender Pole HD Kit (2 ea.)	MHP-EPHD-54	91347	126.0
3	Mounting Plate Kit* (2 ea.)	MSPMPK	75811	8.3
4	Blade Pin Kit* (1 ea.)	MMPBPK	76466	0.8
5	Pivot Arm Kit* (1 ea.)	QMTPAK	76096	4.3
6	Tension Spring—Purple (1 ea.) for blades 600mm (24")	QMTS-P	75845	0.6
6a	Tension Spring—White (1 ea.) for blades 750–1200mm (30–48")	PSTS-W	75898	1.7
6b	Tension Spring—Gold (1 ea.) for blades 1350–1950mm (54–78")	QMTS-G	76484	2.5
6c	Tension Spring—Silver (1 ea.) for blades 2100–2850mm (84–114")	PSTS-S	75899	3.0
7	Bushing Kit—Purple (2 ea.)	QMTBK-P	76097	0.1
7a	Bushing Kit—White & Silver (2 ea.)	QMTBK-W	76098	0.2
7b	Bushing Kit—Gold (2 ea.)	QMTBK-G	76540	0.3
8	Pivot Shaft Bracket Kit* (1 ea.)	QMTPSBK	76099	4.3
9	Torsion Arm Kit* (1 ea.)	PSTA	75896	11.4
10	Jam Nut Kit, QMT Tensioner	JNK-C	79893	0.3
-	QMT Spring Tensioner*—Purple (incl. 1 ea. Items 5, 6, 7, 8, & 9) for blades 450–600mm (18–24")	QMT-P	76074	20.4
-	QMT Spring Tensioner*—White (incl. 1 ea. Items 5, 6a, 7a, 8, & 9) for blades 750–1200mm (30–48")	QMT-W	76075	21.8
-	QMT Spring Tensioner*—Gold (incl. 1 ea. Items 5, 6b, 7b, 8, & 9) for blades 1350–1950mm (54–78")	QMT-G	76483	23.2
-	QMT Spring Tensioner*—Silver (incl. 1 ea. Items 5, 6c, 7a, 8 & 9) for blades 2100–2850mm (84–114")	QMT-S	79039	20.3
11	Air/Water Bag (1 ea.)	AWTB	75905	3.8
12	Mounting Base (1ea.)	AWTMB	75906	22.9
13	Torque Arm* (1 ea.)	AWTA	75907	11.6
14	Hose Kit (50' (15M) of hose and 6 hose clamps)	AWTHK	75909	6.7
15	AWT Pole Bearing Assy (For cleaners shipped after 4/2016)	AWTPBA	90000	2.3
-	AWT Air/Water Tensioner (includes 2 ea. Items 11, 12, 13 & 14)	AWTNCB	76069	75.2

\*Hardware Included

Lead Time: 1 working day

#### Replacement TuffShear™ Blades

REF	BLADE WIDTH		ORDERING NUMBER	ITEM CODE	WT. LBS.
	mm	in.			
16	450	18	TRB18	76485	21.0
	600	24	TRB24	76486	28.0
	750	30	TRB30	76487	35.0
	900	36	TRB36	76488	42.0
	1050	42	TRB42	76489	49.0
	1200	48	TRB48	76490	56.0
	1350	54	TRB54	76491	63.0
	1500	60	TRB60	76492	70.0
	1650	66	TRB66	76493	77.0
	1800	72	TRB72	76494	84.0
	1950	78	TRB78	76697	91.0
	2100	84	TRB84	77047	98.0
	2250	90	TRB90	77048	105.0
	2400	96	TRB96	90358	112.0
	2550	102	TRB102	90359	119.0
	2700	108	TRB108	90360	126.0
	2850	114	TRB114	90361	133.0

Order blade width for your belt width's material path:

Belt Width Minus 150mm (6"), BW -300mm (-12"), BW -450mm (-18"), BW -600mm (-24"), BW -750mm (-30"), or BW -900mm (-36")


Lead Time: 1 working day

#### Spring Tensioner Selection Chart

CLEANER BLADE WIDTH	76074 QMT-P	76075 QMT-W	76483 QMT-G	79039 QMT-S
TuffShear™ 450–600mm (18–24")	X			
TuffShear™ 750–1200mm (30–48")		X		
TuffShear™ 1350–1950mm (54–78")			X	
TuffShear™ 2100–2850mm (84–114")				X

## Section 9 - Replacement Parts

### 9.3 Replacement Parts List - MMP Stainless Steel

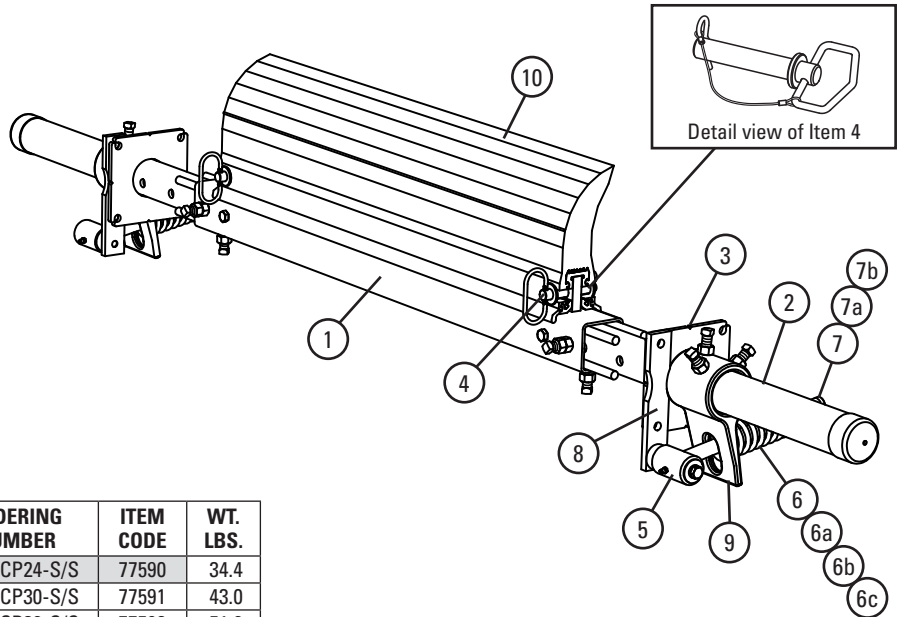

#### Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	600mm (24") SS Center Pole	MMPCP24-S/S	77590	34.4
	750mm (30") SS Center Pole	MMPCP30-S/S	77591	43.0
	900mm (36") SS Center Pole	MMPCP36-S/S	77592	51.6
	1050mm (42") SS Center Pole	MMPCP42-S/S	77593	60.1
	1200mm (48") SS Center Pole	MMPCP48-S/S	77594	68.7
	1350mm (54") SS Center Pole	MMPCP54-S/S	77595	77.3
	1500mm (60") SS Center Pole	MMPCP60-S/S	77596	85.9
	1800mm (72") SS Center Pole	MMPCP72-S/S	77597	103.1
	2100mm (84") SS Center Pole	MMPCP84-S/S	77598	120.3
	2400mm (96") SS Center Pole	MMPCP96-S/S	78686	137.5
2	SS Extender Pole Kit (2 ea.)	MHP-EP-S/S	77599	54.0
3	SS Mounting Plate Kit* (2 ea.)	MSPMPK-S/S	77582	8.3
4	SS Blade Pin Kit* (1 ea.)	MMPBPk-S/S	77600	0.8
5	SS Pivot Arm Kit* (1 ea.)	QMTPAK-S/S	77587	4.3
6	SS Tension Spring—Purple (1 ea.) for blades 600mm (24")	QMTS-P-S/S	77450	0.6
6a	SS Tension Spring—White (1 ea.) for blades 750–1200mm (30–48")	QMTS-W-S/S	77451	1.7
6b	SS Tension Spring—Gold (1 ea.) for blades 1350–1950mm (54–78")	QMTS-G-S/S	77452	2.5
6c	SS Tension Spring—Silver (1 ea.) for blades 2100–2250mm (84–90")	QMTS-S-S/S	79056	3.1
7	Bushing Kit—Purple (2 ea.)	QMTBK-P	76097	0.1
7a	Bushing Kit—White and Silver (2 ea.)	QMTBK-W	76098	0.2
7b	Bushing Kit—Gold (2 ea.)	QMTBK-G	76540	0.3
8	SS Pivot Shaft Bracket Kit* (1 ea.)	QMTPSBK-S/S	77588	4.3
9	SS Torsion Arm Kit* (1 ea.)	PSTA-S/S	77442	11.4
-	SS QMT Spring Tensioner*—Purple (incl. 1 ea. Items 5, 6, 7, 8, & 9) for blades 450–600mm (18–24")	QMT-P-S/S	77584	20.4
-	SS QMT Spring Tensioner*—White (incl. 1 ea. Items 5, 6a, 7a, 8, & 9) for blades 750–1200mm (30–48")	QMT-W-S/S	77585	21.8
-	SS QMT Spring Tensioner*—Gold (incl. 1 ea. Items 5, 6b, 7b, 8, & 9) for blades 1350–1800mm (54–78")	QMT-G-S/S	77586	23.2
-	SS QMT Spring Tensioner*—Silver (incl. 1 ea. Items 5, 6c, 7a, 8 & 9) for blades 2100–2250mm (84–90")	QMT-S-S/S	79059	24.6

\*Hardware Included

Lead Time: 1 working day

Shaded items are made to order.  
Lead time: 3 weeks

#### Replacement TuffShear™ Blades

REF	BLADE WIDTH		ORDERING NUMBER	ITEM CODE	WT. LBS.
	mm	in.			
10	450	18	TRB18	76485	21.0
	600	24	TRB24	76486	28.0
	750	30	TRB30	76487	35.0
	900	36	TRB36	76488	42.0
	1050	42	TRB42	76489	49.0
	1200	48	TRB48	76490	56.0
	1350	54	TRB54	76491	63.0
	1500	60	TRB60	76492	70.0
	1650	66	TRB66	76493	77.0
	1800	72	TRB72	76494	84.0
	1950	78	TRB78	76697	91.0
	2100	84	TRB84	77047	98.0
	2250	90	TRB90	77048	105.0

Order blade width for your belt width's material path:

Belt Width Minus 150mm (6"), Belt Width Minus 300mm (12")

or Belt Width Minus 450mm (18").

Lead Time: 1 working day

#### Spring Tensioner Selection Chart

CLEANER BLADE WIDTH	77584 QMT-P- S/S	77585 QMT-W- S/S	77586 QMT-G- S/S	79059 QMT-S- S/S
TuffShear™ 18–24" (450–600mm)	X			
TuffShear™ 30–48" (750–1200mm)		X		
TuffShear™ 54–78" (1350–1950mm)			X	
TuffShear™ 84–90" (2100–2250mm)				X

For best results use Flexco® Genuine Replacement Blades and Parts.





## Section 10 - Other Flexco Conveyor Products

---

Flexco provides many conveyor products that help your conveyors to run more efficiently and safely. These components solve typical conveyor problems and improve productivity. Here is a quick overview on just a few of them:

### EZP1 Precleaner




- Patented ConShear™ blade renews its cleaning edge as it wears
- Visual Tension Check™ for optimal blade tensioning and simple retensioning
- Quick and easy one-pin blade replacement Material Path Option™ for optimal cleaning and reduced maintenance

### DRX™ Impact Beds



- Exclusive Velocity Reduction Technology™ to better protect the belt
- Slide-Out Service™ gives direct access to all impact bars for change-out
- Impact bar supports for longer bar life
- 4 models to custom fit to the application

### MHS Secondary Cleaner with Service Advantage Cartridge

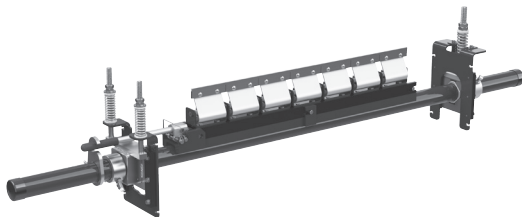

- An easy slide-out cartridge for service
- Cartridge design to speed up blade-change maintenance
- Patented PowerFlex™ Cushions for superior cleaning performance
- Compatible with Flexco mechanical splices

### PT Max™ Belt Trainer



- Patented “pivot & tilt” design for superior training action
- Dual sensor rollers on each side to minimize belt damage
- Pivot point guaranteed not to freeze or seize up
- Available for topside and return side belts

### Flexco Specialty Belt Cleaners



- “Limited space” cleaners for tight conveyor applications
- High Temp cleaners for severe, high heat applications
- A rubber fingered cleaner for chevron and raised rib belts
- Multiple cleaner styles in stainless steel for corrosive applications

### Belt Plows



- A belt cleaner for the tail pulley
- Exclusive blade design quickly spirals debris off the belt
- Economical and easy to service
- Available in vee or diagonal models

Visit [www.flexco.com](http://www.flexco.com) for other Flexco locations and products, or to find an authorised distributor.

©2022 Flexible Steel Lacing Company. 01-09-24. X3169

