



Installing Flexco® SR™ Fasteners with the Electric Powered Rivet Driver and the Standard MSRT Installation Tool


Warning: Follow all maintenance and safety precautions that are noted in the Hitachi manual included in this kit. We recommend a trial drive prior to production installation. Use of this driver will vary with the length of the rivet and the type of belt you are using.

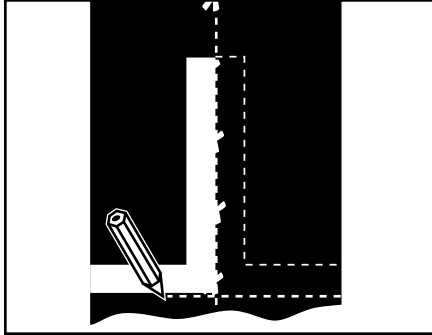


1. Square belt using centerline method. Cut belt at least 4”(100 mm) behind old splice using a Flexco belt cutting tool. Skive belt when top cover permits.

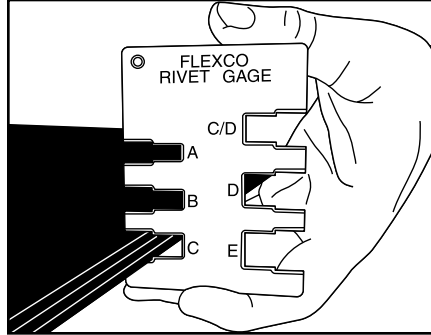


2. Measure belt thickness from cut edge using gauge or tape measure. Select correct size SR rivets for your belt thickness.

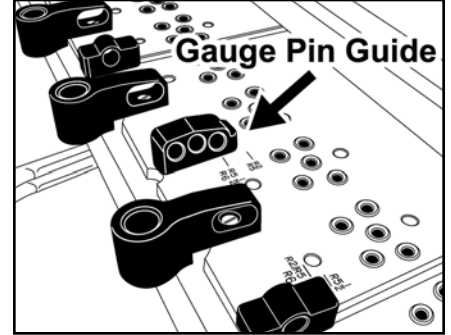


3. Place tool on wooden board, width of the conveyor framework, for support. Lift and turn gauge pin guide to correct fastener size.

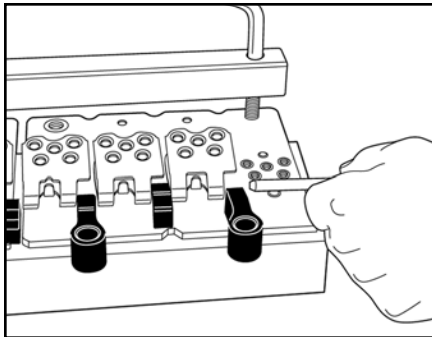

4. Center fastener strip on tool, Flexco stamp facing up. Holes on fasteners and anvil plate must line up. Insert gauge pin through guides and fastener loops.

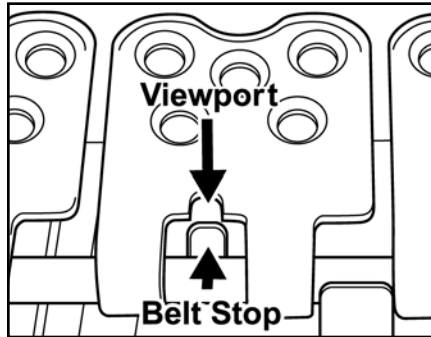


5. Center belt in fastener strip. Look through viewports, belt end should be tight against belt stops. Tighten hold down bar to secure belt.

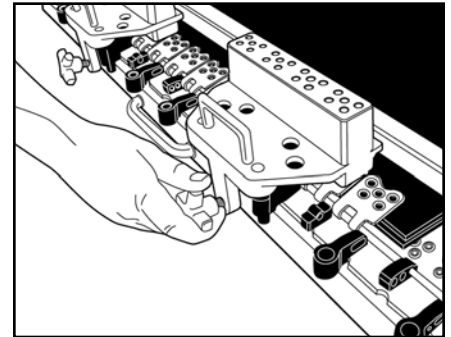

6. Set all fastener top plates with hammer blows. Place SR700 guide blocks at each end of the fastener strip and tighten clamping screws. Spray guide block with SL5 Silicone.

Note: Spray guide blocks with SL5 silicone.

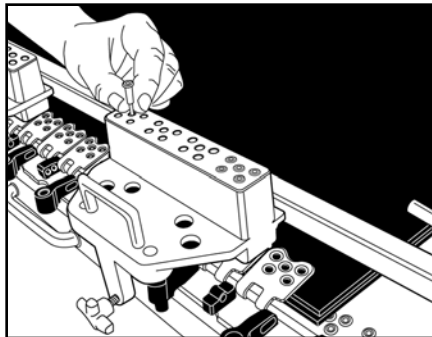


Individual Rivets


7A. Load guide block with individual rivets. Reduce installation time by adding guide blocks across tool.

Rapid Loader™ Collated Rivets

Reduce installation time using Rapid Loader™ Collated Rivet Strips.

7B. If a shorter strip is needed, break off extra plates by bending strip at checkpoints.

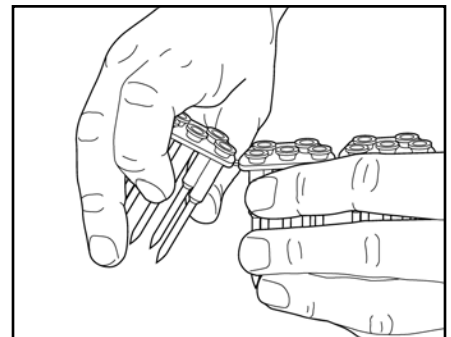


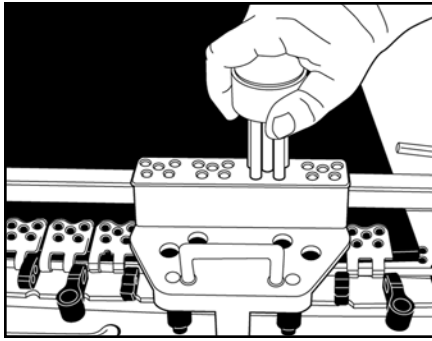


Individual Rivets


8A. Using the SR759 push rivets into guide block.

Rapid Loader™ Collated Rivets


8B. Insert pilot nails into guide block holes. Using a hammer, hit collated rivets to release rivets from plastic. Remove plastic from guide block.

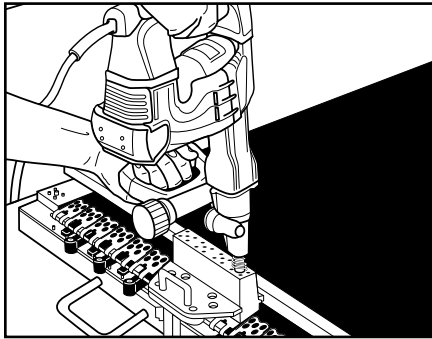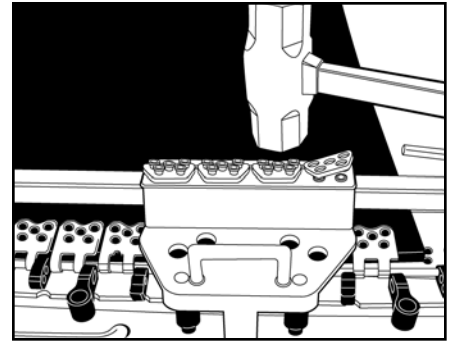


9. Insert the punch directly into the SR700 Guide Block. Keeping the tool perpendicular to the base, pull the trigger to fire the driver. Push down on the driver slightly and maintain force on the driver until you feel the rivet set. This should take approximately 1 to 2 seconds per rivet depending on the length of the rivet and the type of belt.

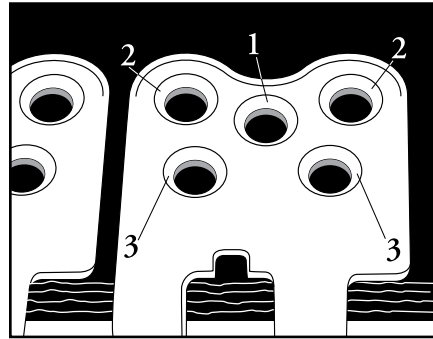


10. Drive rivets into the center hole of both end plates. This will anchor fastener strip in position. Continue to drive all remaining rivets into holes in the sequence shown above.

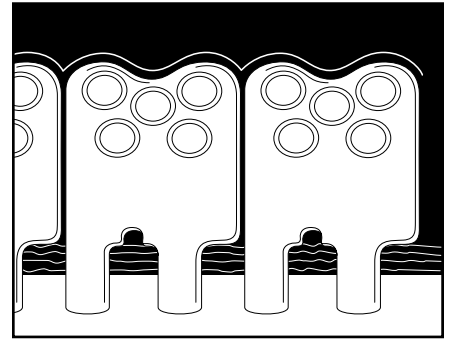

11. Remove guide block(s) and make sure rivets are set completely. Complete belt end by moving the block across the width of the belt and continue driving rivets.

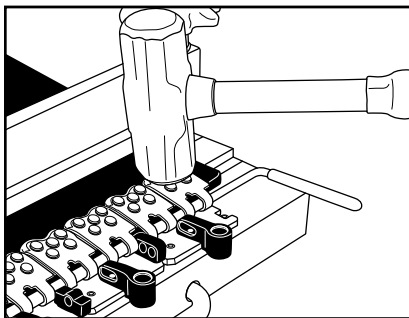

12. Remove guide blocks. Using a 4 lb (1.8 kg) hammer, set all rivets. The belt should pucker around the edges of the fasteners.

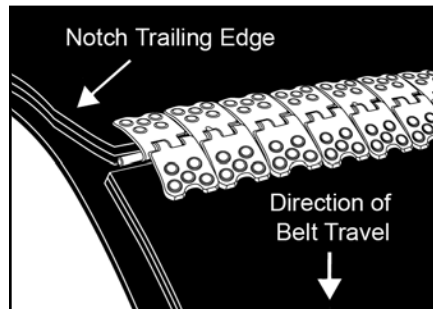

13. Repeat steps 1-12 on other belt end. Bring belt ends together and insert hinge pin. Notch trailing edge of belt only. Splice is complete.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
Tel: (630)-971-0150 • Fax: (630)-971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2014 Flexible Steel Lacing Company. Flexco® is a registered trademark. 04-14. For Reorder: X2290

