


MHP Precleaner

Installation, Operation and Maintenance Manual

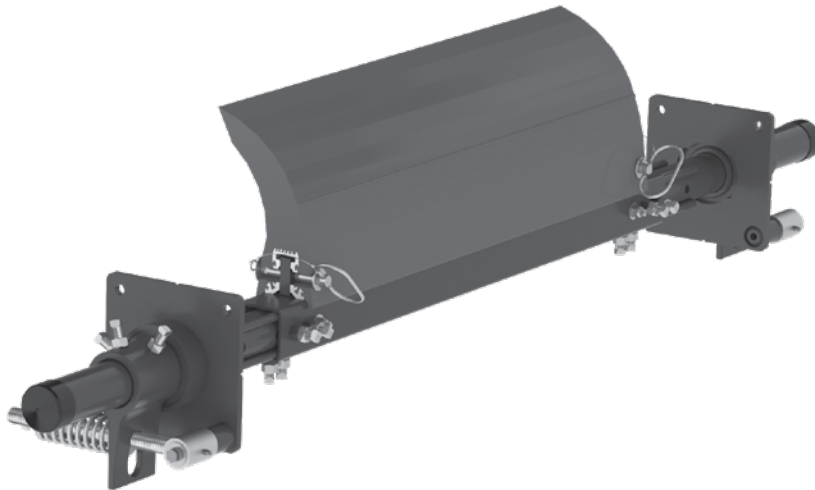

MHP Precleaner

Serial Number: _____
Purchase Date: _____
Purchased From: _____
Installation Date: _____

Serial number information can be found on the Serial Number Label included in the Information Packet found in the cleaner carton.

This information will be helpful for any future inquiries or questions about belt cleaner replacement parts, specifications or troubleshooting.

Table of Contents

Section 1 – Important Information	2
1.1 General Introduction	2
1.2 User Benefits	2
1.3 Service Option	2
Section 2 – Safety Considerations and Precautions	3
2.1 Stationary Conveyors.....	3
2.2 Operating Conveyors	3
Section 3 – Pre-Installation Checks and Options.....	4
3.1 Checklist	4
3.2 Cleaner Location Adjustments	5
3.3 Optional Installation Accessories.....	6
Section 4 – Installation Instructions.....	7
Section 5 – Pre-Operation Checklist and Testing.....	11
5.1 Pre-Op Checklist.....	11
5.2 Test Run the Conveyor	11
Section 6 – Maintenance	12
6.1 New Installation Inspection	12
6.2 Routine Visual Inspection	12
6.3 Routine Physical Inspection.....	12
6.4 Blade Replacement Instructions.....	13
6.5 Maintenance Log.....	15
6.6 Cleaner Maintenance Checklist.....	16
Section 7 – Troubleshooting	17
Section 8 – Specs and CAD Drawings.....	18
8.1 Specifications and Guidelines	18
8.2 CAD Drawings.....	21
Section 9 – Replacement Parts	25
9.1 Replacement Parts List.....	25
Section 10 – Other Flexco Conveyor Products.....	29

Section 1 – Important Information

1.1 General Introduction

We at Flexco are very pleased that you have selected an MHP Precleaner for your conveyor system.

This manual will help you to understand the operation of this product and assist you in making it work up to its maximum efficiency over its lifetime of service.

It is essential for safe and efficient operation that the information and guidelines presented be properly understood and implemented. This manual will provide safety precautions, installation instructions, maintenance procedures and troubleshooting tips.

If, however, you have any questions or problems that are not covered, please visit our web site or contact our Customer Service Department:

Customer Service: USA: 1-800-541-8028

Visit www.flexco.com for other Flexco locations and products.

Please read this manual thoroughly and pass it on to any others who will be directly responsible for installation, operation and maintenance of this cleaner. While we have tried to make the installation and service tasks as easy and simple as possible, **it does however require correct installation and regular inspections and adjustments to maintain top working condition.**

1.2 User Benefits

Correct installation and regular maintenance will provide the following benefits for your operation:

- Reduced conveyor downtime
- Reduced man-hour labor
- Lower maintenance budget costs
- Increased service life for the belt cleaner and other conveyor components

1.3 Service Option

The MHP Precleaner is designed to be easily installed and serviced by your on-site personnel. However, if you would prefer complete turn-key factory service, please contact your local Flexco Field Representative.

Section 2 – Safety Considerations and Precautions

Before installing and operating the MHP Precleaner, it is important to review and understand the following safety information.

There are set-up, maintenance and operational activities involving both **stationary** and **operating** conveyors. Each case has a safety protocol.

2.1 Stationary Conveyors

The following activities are performed on stationary conveyors:

- Installation
- Blade replacement
- Repairs
- Tension adjustments
- Cleaning

DANGER

It is imperative that OSHA/MSHA Lockout/Tagout (LOTO) regulations, 9 CFR 1910.147, be followed before undertaking the preceding activities. Failure to use LOTO exposes workers to uncontrolled behavior of the belt cleaner caused by movement of the conveyor belt. Severe injury or death can result.

Before working:

- Lockout/Tagout the conveyor power source
- Disengage any takeups
- Clear the conveyor belt or clamp securely in place

WARNING

Use Personal Protective Equipment (PPE):

- Safety eyewear
- Hardhats
- Safety footwear

Close quarters, springs and heavy components create a worksite that compromises a worker's eyes, feet and skull.

PPE must be worn to control the foreseeable hazards associated with conveyor belt cleaners. Serious injuries can be avoided.

2.2 Operating Conveyors

There are two routine tasks that must be performed while the conveyor is running:

- Inspection of the cleaning performance
- Dynamic troubleshooting

DANGER

Every belt cleaner is an in-running nip hazard. Never touch or prod an operating cleaner. Cleaner hazards cause instantaneous amputation and entrapment.

WARNING

Belt cleaners can become projectile hazards. Stay as far from the cleaner as practical and use safety eyewear and headgear. Missiles can inflict serious injury.

WARNING

Never adjust anything on an operating cleaner. Unforseeable belt projections and tears can catch on cleaners and cause violent movements of the cleaner structure. Flailing hardware can cause serious injury or death.

Section 3 – Pre-Installation Checks and Options

3.1 Checklist

- Check that the cleaner size is correct for the beltline width
- Check the belt cleaner carton and make sure all the parts are included
- Review the “Tools Needed” list on the top of the installation instructions
- Check the conveyor site:
 - Will the cleaner be installed on a chute
 - Are there obstructions that may require cleaner location adjustments (see 3.2 – Cleaner Location Adjustments)
 - Is the install on an open head pulley requiring mounting structure (see 3.3 – Optional Installation Accessories)

Section 3 – Pre-Installation Checks and Options


3.2 Cleaner Location Adjustments

In certain applications it is necessary to modify the location of the precleaner pole due to permanent obstacles that obstruct the desired location. Relocating the pole location can be done easily and does not hinder the performance of the cleaner as long as the “C” dimension is maintained.

NOTE: In the following example we will be lowering the pole location in the “Y” direction, but the same method could also be applied in the “X” direction.

Conveyor situation:

- Pulley Diameter: 12" (300mm)
- X=6 1/8" (155mm)
- Y=5 1/2" (140mm)
- C=8 1/4" (210mm)

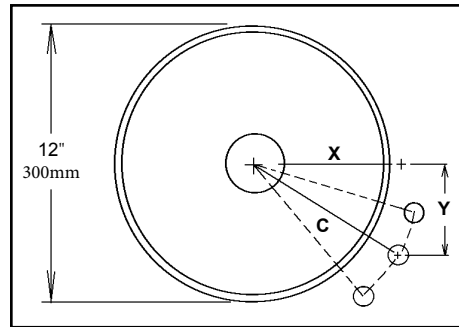

1. **Determine the given location dimensions and define the change needed.** After laying out the given X & Y dimensions, determine the distance of the modification required for adequate clearance of the pole and tensioning system. (In the example we decide to lower the pole 2" (50mm) to clear the support structure).

2. **Write down known dimensions.** We can now determine two of the three required dimensions which will allow us to find the third. We know we cannot alter the “C” dimension, so this will remain the same. Also we are required to lower the unit in the “Y” dimension 2" (50mm), so we add 2" (50mm) to the given “Y” dimension.

$$X = ?$$

$$Y = 5 \frac{1}{2} + 2 = 7 \frac{1}{2} \text{ (140mm + 50mm = 190mm)}$$





$$C = 8 \frac{1}{4} \text{ (210mm)}$$

3. **Determine final dimension.** On a flat vertical surface, using a level, draw one horizontal line and one vertical line, creating a right triangle (Fig 3a). Measure down from the intersection the determined “Y” dimension and mark (Fig 3b). With the tape measure starting at the modified “Y” mark, swing the tape across the “X” line and mark at the “C” dimension where it crosses the “X” line (Fig 3c). Measure from the intersection to the “C” intersection and this will be your new “X” dimension (Fig. 3d).

$$X = 3 \frac{1}{2} \text{ (89mm)}$$

$$Y = 7 \frac{1}{2} \text{ (190mm)}$$

$$C = 8 \frac{1}{4} \text{ (210mm)}$$

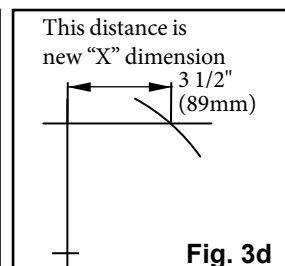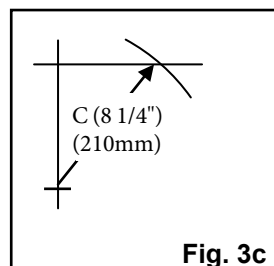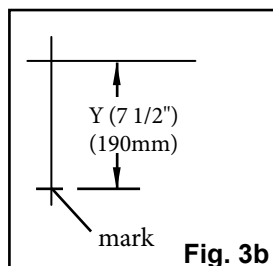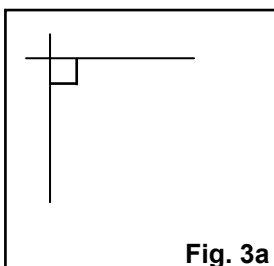

Section 3 - Pre-Installation Checks and Options

3.3 Optional Installation Accessories

Versatile, adjustable brackets and plates that can be mounted on the conveyor structure so precleaners and secondary cleaners can be easily and quickly bolted into place.

- **75830**
Optional Mounting Bar Kit
(with bolts, nuts and washers)
 - For mounting precleaners on open head pulleys.
 - Weld on both sides of pulley and bolt on steel plates.
 - 1-1/2" x 16" (38x400mm) with four 5/8-11 tapped holes




- 76537**
Mounting Plate Kit (incl. 2 plates)
 - For use with Mounting Bars to mount cleaners on open head pulleys.
 - 16" x 32" (400 x 800mm) with four 5/8" (16mm) holes

Optional Mounting Kits (incl. 2 brackets/bars)			
Description	Ordering Number	Item Code	Wt. Lbs.
Optional Mounting Bar Kit *	MMBK	75830	19.5
Mounting Plate Kit (incl. 2 plates)	MMPK	76537	140.0

*Hardware Included
Lead time: 1 working day



Pole Extender Kit (incl. 2 pole extenders)			
Description	Ordering Number	Item Code	Wt. Lbs.
Pole Extender Kit	MAPEK	76024	21.9

 Provides 30" (750mm) of extended pole length.
Lead time: 1 working day



Section 4 – Installation Instructions

4.1 MHP Precleaner

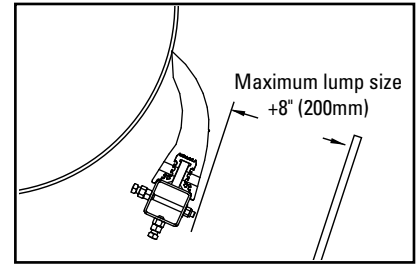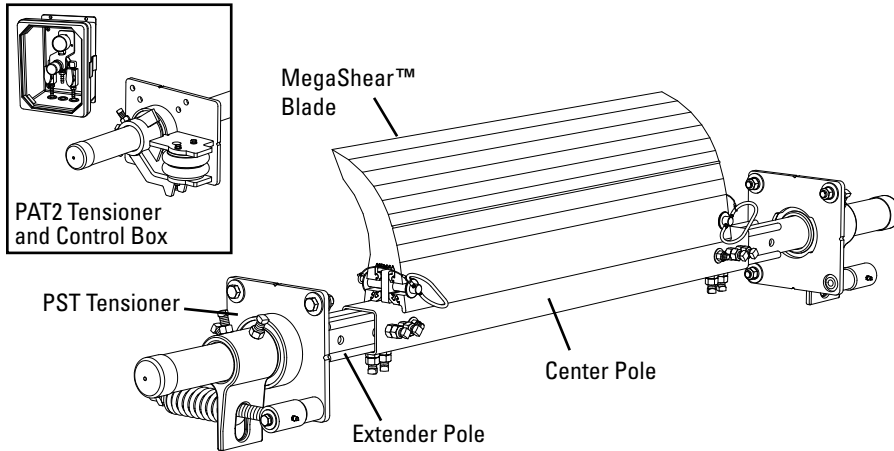

- Tools Needed:**
- Tape Measure
 - Wrenches or Crescent Wrenches: (2) 3/4" (19mm), (2) 1-1/2" (38mm), (1) 15/16" (24mm), and (1) 5/8" (16mm)
 - Level
 - Marking pen or soapstone
 - C-clamps for AWT only


Physically lock out and tag the conveyor at the power source before you begin cleaner installation.

CAUTION: Components may be heavy. Use safety-approved lifting procedures.

1. Find the X, Y & C specifications. Measure the pulley diameter (including the belt and the lagging) (Fig. 1).

Pulley Diameter _____"; X= _____"; Y= _____"; C= _____".

(Adjustments can be made to the X & Y coordinates to move away from obstacles as long as the C dimension remains constant.)

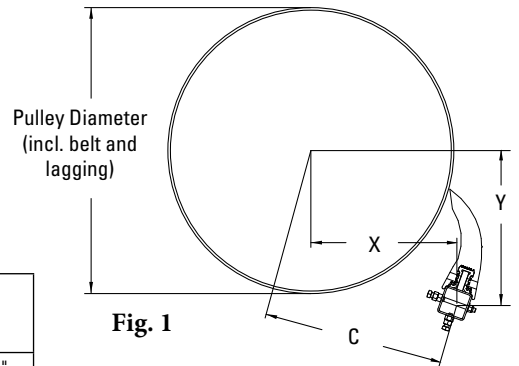

X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
20"	10"	14 3/8"	17 1/2"
21"	10 1/2"	14 3/8"	17 3/4"
22"	11"	14 3/8"	18 1/8"
23"	11 1/2"	14 3/8"	18 3/8"
24"	12"	14 3/8"	18 3/4"
25"	12 1/2"	14 3/8"	19"
26"	13"	14 3/8"	19 3/8"
27"	13 1/2"	14 3/8"	19 3/4"
28"	14"	14 3/8"	20 1/8"
29"	14 1/2"	14 3/8"	20 3/8"
30"	15"	14 3/8"	20 3/4"
31"	15 1/2"	14 3/8"	21 1/8"
32"	16"	14 3/8"	21 1/2"
33"	16 1/2"	14 3/8"	21 7/8"
34"	17"	14 3/8"	22 1/4"
35"	17 1/2"	14 3/8"	22 5/8"
36"	18"	14 3/8"	23"
37"	18 1/2"	14 3/8"	23 3/8"
38"	19"	14 3/8"	23 7/8"
39"	19 1/2"	14 3/8"	24 1/4"
40"	20"	14 3/8"	24 5/8"
41"	20 1/2"	14 3/8"	25"
42"	21"	14 3/8"	25 1/2"
43"	21 1/2"	14 3/8"	25 7/8"
44"	22 1/4"	14 3/8"	26 1/2"

X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
45	22 7/8"	14 3/8"	27"
46	23 1/2"	14 3/8"	27 1/2"
47	24"	14 3/8"	28"
48	24 5/8"	14 3/8"	28 1/2"
49	25 1/8"	14 3/8"	29"
50	25 3/4"	14 3/8"	29 1/2"
51	26 3/8"	14 3/8"	30"
52	26 7/8"	14 3/8"	30 1/2"
53	27 1/2"	14 3/8"	31"
54	28"	14 3/8"	31 1/2"
55	28 5/8"	14 3/8"	32"
56	29 1/8"	14 3/8"	32 1/2"
57	29 3/4"	14 3/8"	33"
58	30 1/4"	14 3/8"	33 1/2"
59	30 3/4"	14 3/8"	34"
60	31 3/8"	14 3/8"	34 1/2"
61	31 7/8"	14 3/8"	35"
62	32 1/2"	14 3/8"	35 1/2"
63	33"	14 3/8"	36"
64	33 1/2"	14 3/8"	36 1/2"
65	34 1/8"	14 3/8"	37"
66	34 5/8"	14 3/8"	37 1/2"
67	35 1/8"	14 3/8"	38"
68	35 3/4"	14 3/8"	38 1/2"
69	36 1/4"	14 3/8"	39"


X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
70	36 3/4"	14 3/8"	39 1/2"
71	37 3/8"	14 3/8"	40"
72	37 7/8"	14 3/8"	40 1/2"
73	38 3/8"	14 3/8"	41"
74	38 7/8"	14 3/8"	41 1/2"
75	39 1/2"	14 3/8"	42"
76	40"	14 3/8"	42 1/2"
77	40 1/2"	14 3/8"	43"
78	41"	14 3/8"	43 1/2"
79	41 5/8"	14 3/8"	44"
80	42 1/8"	14 3/8"	44 1/2"
81	42 5/8"	14 3/8"	45"
82	43 1/8"	14 3/8"	45 1/2"
83	43 3/4"	14 3/8"	46"
84	44 1/4"	14 3/8"	46 1/2"




Section 4 – Installation Instructions


4.1 MHP Precleaner (cont.)

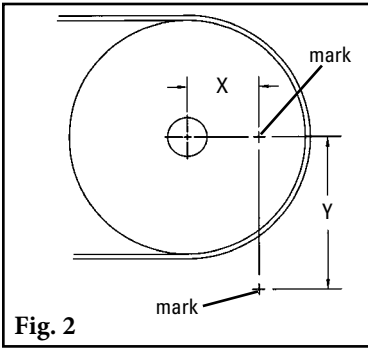


- 2. Lay out the dimensions on the chute wall.** Measure out the X dimension horizontally from the center of the pulley shaft and mark. (**NOTE:** It may be easier to put a level on top of the pulley shaft, draw a horizontal line and then measure down half the diameter of the shaft and make a line from the front of the shaft. Now subtract half the pulley shaft diameter from the X coordinate and measure on the line and make a mark.) Then measure down vertically the Y dimension and mark. This is the correct position for the center of the cleaner pole (Fig. 2). Lay out and mark the same dimensions on the other side.

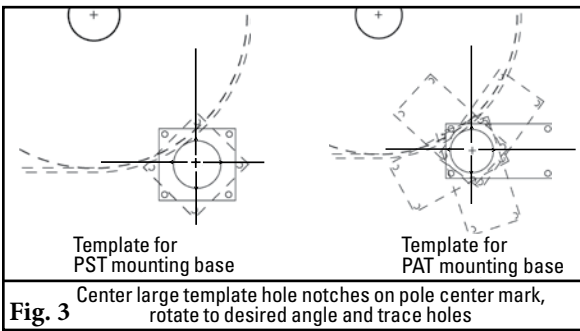


- 3. Mark and cut the mounting base holes.** Using the mounting base template provided in the instruction packet, position the large pole hole of the template on the chute with the hole notches aligned with the layout lines. Trace the pole hole and mounting holes (Fig. 3). Each base can be mounted in any position 360° around the pole as long as the pole's center point does not change. Cut the holes on both sides of the chute.

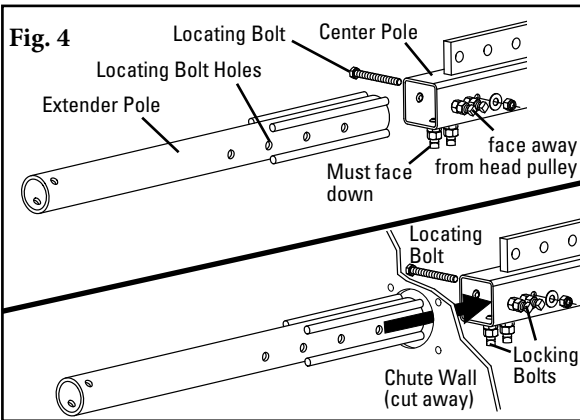

- 4. Assemble the extender poles to the center pole.** Insert the extender poles through the chute holes and into the center pole and make sure the locating bolt holes align with the center pole holes. Position the center pole with the welded nuts and locking bolts on one side facing down and on the adjoining side facing away from the head pulley (Fig. 4). Leave the locking bolts loose.

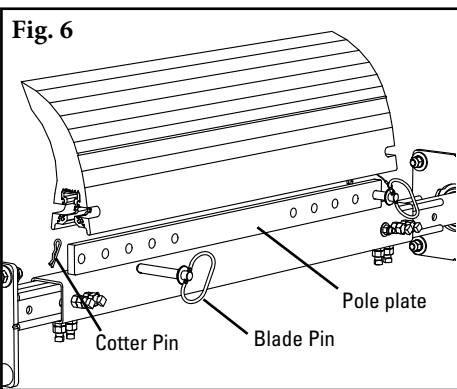


- 5. Install the mounting bases.** Bolt the mounting bases to the chute with the bolts provided (Fig. 5). Position pivot shaft in desired orientation (see Step 9S).

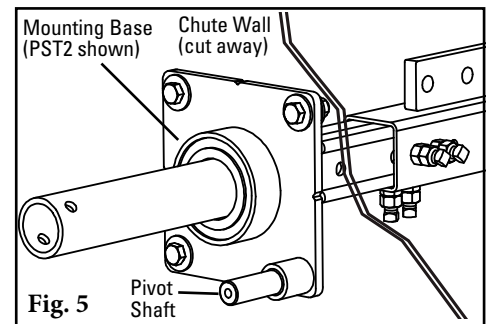

- 6. Install the blade.** Place the blade onto the center pole plate. Adjust the extender poles until the holes align with the holes in the center pole and lock the blade into place with the two blade pins and cotter pins (Fig. 6). **NOTE:** Be sure at least 6" of the extender pole extends out of the mounting base on each side for tensioner installation. Adjust the extender poles in the center pole if more or less length is needed.

Section 4 – Installation Instructions

4.1 MHP Precleaner (cont.)

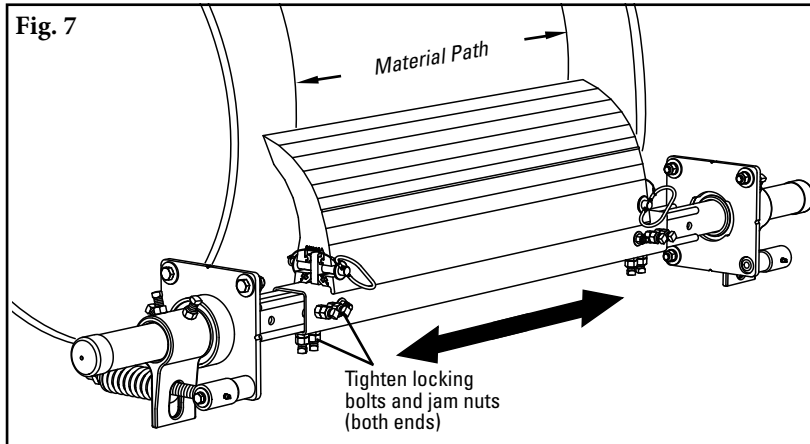

7. **Center the blade on the belt.** Slide the pole until the blade is centered or cover the belt's material path (Fig. 7). **NOTE:** Standard blade coverage is belt width minus 6" (150mm). If less blade coverage is required, other material path options are available for replacement.

8. **Lock the extender poles in the center pole.** Tighten the two locking bolts and jam nuts on each end of the center pole (Fig. 7).



Install the tensioning system. For the PST2 Spring Tensioner go to step 9S. For the PAT Tensioner proceed to step 9A.

Precleaner Spring Tensioner (PST2)


- 9S. **Determine spring orientation.** Remove the adjusting nuts and springs from the rods. Rotate mounting base until pivot rod is in desired orientation to clear structure and obstacles (Fig. 9S). Tighten all mounting bolts including pivot mounting bolt.

- 10S. **Slide the torque arm onto the pole end.** Temporarily remove torque pivot rod. Insert through torque arm slot. Flat face of torque arm should face away from pivot point. Ensuring the correct pulling rotation, slide the torque arm onto the pole end (Fig. 10S). Slide torque pivot rod over pivot shaft and reinstall bolt.

- 11S. **Reassemble the spring assembly.** Slide the spring, washer and bushings onto the pivot rod and turn the two adjusting nuts so about 1/4" (6mm) of the rod is exposed above the nuts (Fig. 11S). Complete steps 9S through 11S on the other side.

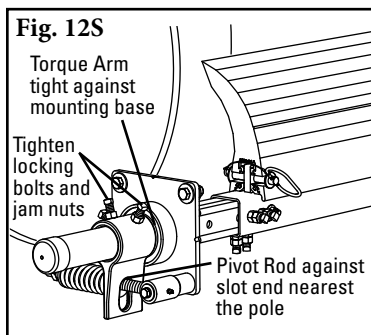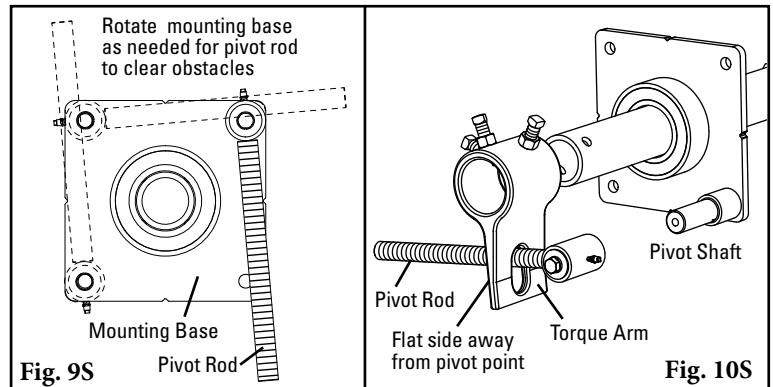


- 12S. **Tension the blade to the belt.** Rotate the blade up until it contacts the belt. While holding the spring bushing flat on the torque arm, rotate the torque arm until the pivot rod is against the end of the slot nearest the pole. Tighten the locking bolts and jam nuts on the torque arm (Fig. 12S). **NOTE:** The torque arm should be up against the mounting base.

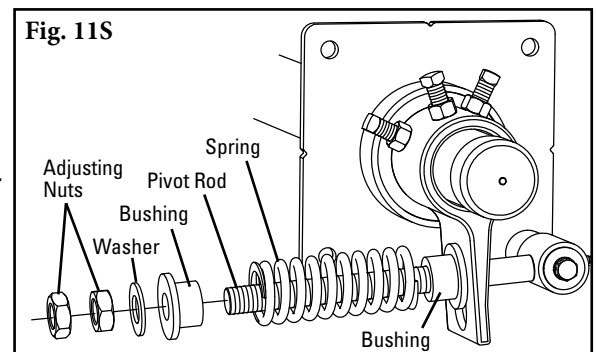

Section 4 – Installation Instructions

4.1 MHP Precleaner (cont.)

13S. Set the correct blade tension. Refer to the chart or the decal on the mounting base for the spring length required for the belt width. Lightly pull the pivot rod toward the end of the torque arm slot nearest the pole and turn the adjusting nuts until the required spring length is achieved (Fig. 13S). Complete steps 12S and 13S on the other side. For best results, recheck the spring length on the first side to insure there has been no movement.

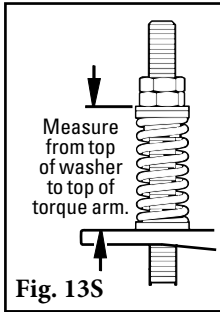

Spring Length Chart Imperial

Blade Width	White Springs	Silver Springs	Red Springs
18"	5 5/8"	N/A	N/A
24"	5 3/8"	6 1/4"	N/A
30"	5"	6 1/8"	6 1/4"
36"	4 3/4"	6"	6 1/4"
42"	N/A	6"	6 1/8"
48"	N/A	5 7/8"	6 1/8"
54"	N/A	5 3/4"	6"
60"	N/A	5 5/8"	6"
66"	N/A	5 5/8"	5 7/8"
72"	N/A	5 1/2"	5 7/8"
78"	N/A	5 3/8"	5 3/4"
84"	N/A	5 3/8"	5 3/4"
90"	N/A	5 1/4"	5 5/8"
96"	N/A	5 1/8"	5 5/8"
102"	N/A	N/A	5 1/2"
108"	N/A	N/A	5 1/2"
114"	N/A	N/A	5 3/8"

Shading indicates preferred spring option.


Spring Length Chart Metric

Blade Width	White Springs	Silver Springs	Red Springs
450	143	N/A	N/A
600	137	159	N/A
750	127	156	159
900	121	152	159
1050	N/A	152	156
1200	N/A	149	156
1350	N/A	146	152
1500	N/A	143	152
1650	N/A	143	149
1800	N/A	140	149
1950	N/A	137	146
2100	N/A	137	146
2250	N/A	133	143
2400	N/A	130	143
2550	N/A	N/A	140
2700	N/A	N/A	140
2850	N/A	N/A	137

Shading indicates preferred spring option.

14S. Test run the cleaner. Run the conveyor for at least 15 minutes and inspect cleaning performance. Check the spring lengths for proper tensioning. Make adjustments as necessary.

Portable Air Tensioner (PAT)

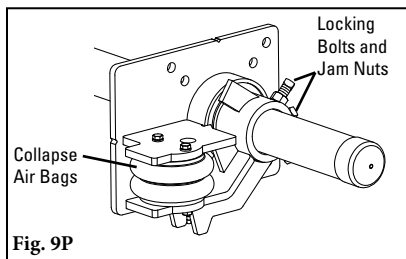


NOTE: PAT Tensioners are shipped with the air bags and torque arms attached to the mounting bases.

9P. Tension the blade to the belt. Collapse both air bags (with C-clamps) and rotate the blade until it is 1" (25mm) short of contact with the belt. Tighten the torque arm locking bolts and jam nuts (Fig. 9P). Remove C-clamps.

Pressure Chart (PAT)

Blade Width		PSI
in.	mm	
18"	450	8#
24"	600	10#
32"	800	13#
36"	900	15#
42"	1050	18#
48"	1200	20#
54"	1350	23#
60"	1500	25#
66"	1650	28#
72"	1800	31#
78"	1950	33#
84"	2100	36#
90"	2250	38#
96"	2400	41#
102"	2550	43#
108"	2700	46#
114"	2850	48#

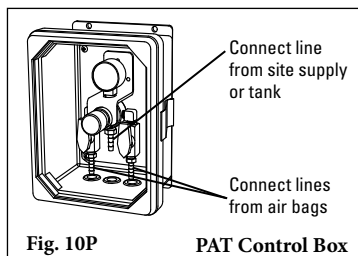

10P. Connect the supply lines and set tension pressure. With the parts supplied, attach a line to each air bag and run the lines to the outlet side of the PAT control box (Fig. 10P).

NOTE: Be sure lines are safely away from the belt. Connect a line from the inlet side of the box to the site's supply or air tank. Test the connections for leaks and set the pressure per the chart on the control box (also shown at left).

11P. Test run the cleaner. Run the conveyor for at least 15 minutes and inspect cleaning performance. Make adjustments as necessary.

Section 5 – Pre-Operation Checklist and Testing

5.1 Pre-Op Checklist

- Recheck that all fasteners are tightened properly
- Add pole caps
- Apply all supplied labels to the cleaner
- Check the blade location on the belt
- Be sure that all installation materials and tools have been removed from the belt and the conveyor area
- Re-check tension settings

5.2 Test Run the Conveyor

- Run the conveyor for at least 15 minutes and inspect the cleaning performance
- Check the tensioner spring for recommended length (proper tensioning)
- Make adjustments as necessary

NOTE: Observing the cleaner when it is running and performing properly will help to detect problems or when adjustments are needed later.

Section 6 – Maintenance

Flexco belt cleaners are designed to operate with minimum maintenance. However, to maintain superior performance some service is required. When the cleaner is installed a regular maintenance program should be set up. This program will ensure that the cleaner operates at optimal efficiency and problems can be identified and fixed before the cleaner stops working.

All safety procedures for inspection of equipment (stationary or operating) must be observed. The MHP Precleaner operates at the discharge end of the conveyor and is in direct contact with the moving belt. Only visual observations can be made while the belt is running. Service tasks can be done only with the conveyor stopped and by observing the correct lockout/tagout procedures.

6.1 New Installation Inspection

After the new cleaner has run for a few days a visual inspection should be made to ensure the cleaner is performing properly. Make adjustments as needed.

6.2 Routine Visual Inspection (every 2-4 weeks)

A visual inspection of the cleaner and belt can determine:

- If the spring length is the correct length for optimal tensioning.
- If the belt looks clean or if there are areas that are dirty.
- If the blade is worn out and needs to be replaced.
- If there is damage to the blade or other cleaner components.
- If fugitive material is built up on the cleaner or in the transfer area.
- If there is cover damage to the belt.
- If there is vibration or bouncing of the cleaner on the belt.
- If a snub pulley is used, a check should be made for material buildup on the pulley.

If any of the above conditions exist, a determination should be made on when the conveyor can be stopped for cleaner maintenance.



6.3 Routine Physical Inspection (every 6-8 weeks)

When the conveyor is not in operation and properly locked and tagged out a physical inspection of the cleaner to perform the following tasks:

- Clean material buildup off of the cleaner blade and pole.
- Closely inspect the blade for wear and any damage. Replace if needed.
- Ensure full blade to belt contact.
- Inspect the cleaner pole for damage.
- Inspect all fasteners for tightness and wear. Tighten or replace as needed.
- Replace any worn or damaged components.
- Check the tension/pressure of the cleaner blade to the belt. Adjust the tension if necessary using the chart on the cleaner or the ones on Page 10.
- When maintenance tasks are completed, test run the conveyor to ensure the cleaner is performing properly.

Section 6 – Maintenance

6.4 Blade Replacement Instructions

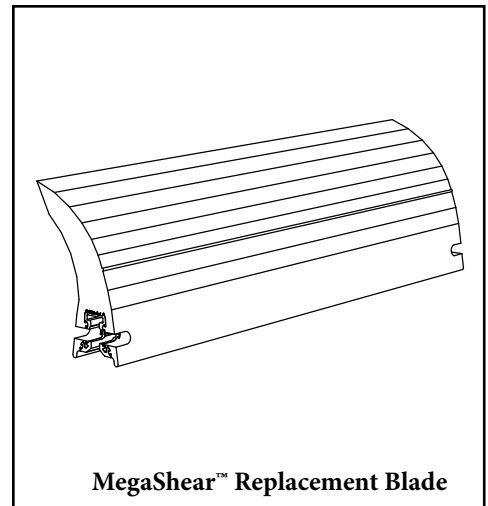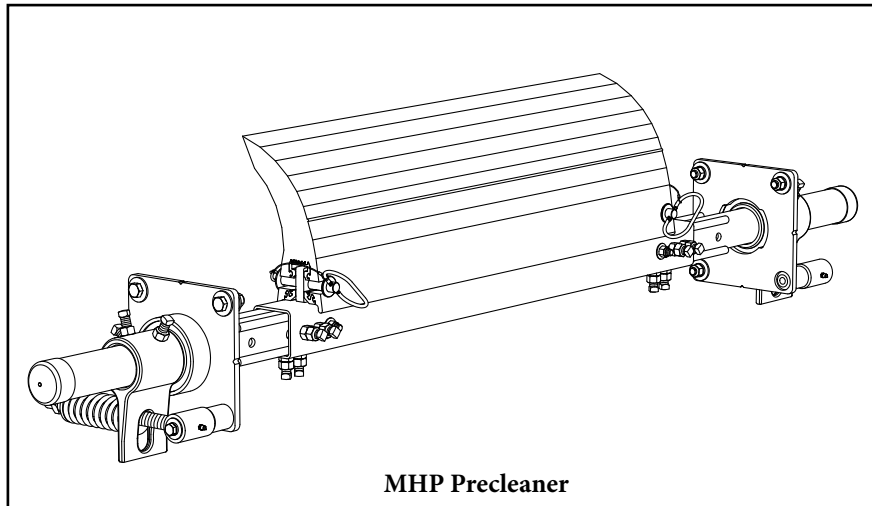



Physically lock out and tag the conveyor at the power source before you begin cleaner installation.

Tools Needed:

- Tape measure
- Hammer
- Screwdriver
- Pry bar
- Wire brush (for cleaning pole)
- Small putty knife (for cleaning pole)

1. **Remove the tension.** Loosen the adjusting nuts on both sides and turn them out until they are flush with ends of the pivot arm (Fig. 1) or release pressure from PAT control box. This releases the tension of the blade on the belt.
2. **Remove the worn blade.** Remove blade pin on each end of blade and remove the blade from the pole (Fig. 2). Clean all fugitive material from the pole.


NOTE: If blade is hard to remove use a screwdriver or hammer to loosen it and then remove.

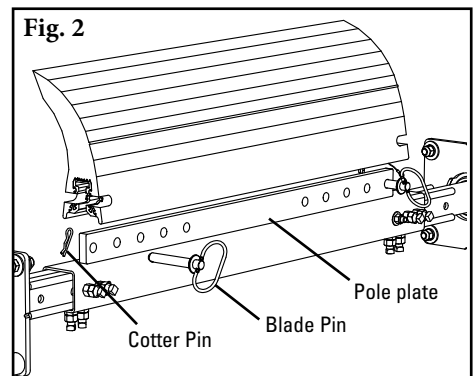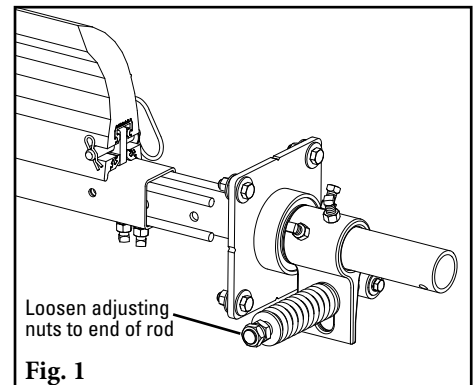

Section 6 – Maintenance

6.4 Blade Replacement Instructions (cont.)

- 3. Install the new blade.** Seat the new blade onto the pole plate. Align holes on pole and blade, then install blade pins to lock in place (Fig. 3).
- 4. Reset the correct blade tension.** Refer to the charts below for the spring length or PSI required for the belt width. For PST lightly pull the pivot arm toward the end of the torque arm slot nearest the pole and turn the adjusting nuts until the required spring length is achieved (Fig. 4). Tighten jam nut.

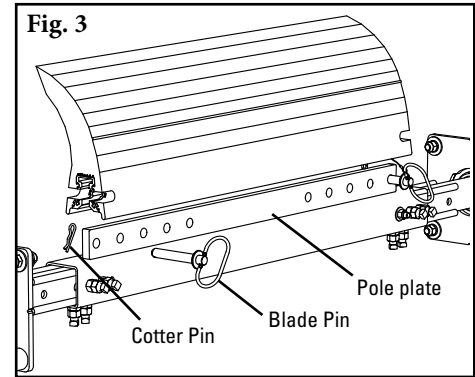

Spring Length Chart Imperial

Blade Width	White Springs	Silver Springs	Red Springs
18"	5 5/8"	N/A	N/A
24"	5 3/8"	6 1/4"	N/A
30"	5"	6 1/8"	6 1/4"
36"	4 3/4"	6"	6 1/4"
42"	N/A	6"	6 1/8"
48"	N/A	5 7/8"	6 1/8"
54"	N/A	5 3/4"	6"
60"	N/A	5 5/8"	6"
66"	N/A	5 5/8"	5 7/8"
72"	N/A	5 1/2"	5 7/8"
78"	N/A	5 3/8"	5 3/4"
84"	N/A	5 3/8"	5 3/4"
90"	N/A	5 1/4"	5 5/8"
96"	N/A	5 1/8"	5 5/8"
102"	N/A	N/A	5 1/2"
108"	N/A	N/A	5 1/2"
114"	N/A	N/A	5 3/8"

Shading indicates preferred spring option.

Spring Length Chart Metric

Blade Width	White Springs	Silver Springs	Red Springs
450	143	N/A	N/A
600	137	159	N/A
750	127	156	159
900	121	152	159
1050	N/A	152	156
1200	N/A	149	156
1350	N/A	146	152
1500	N/A	143	152
1650	N/A	143	149
1800	N/A	140	149
1950	N/A	137	146
2100	N/A	137	146
2250	N/A	133	143
2400	N/A	130	143
2550	N/A	N/A	140
2700	N/A	N/A	140
2850	N/A	N/A	137

Shading indicates preferred spring option.

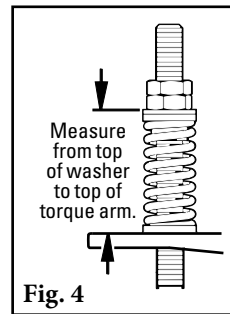


Fig. 4

Pressure Chart (PAT)

Blade Width		PSI
in.	mm	
18"	450	8#
24"	600	10#
32"	800	13#
36"	900	15#
42"	1050	18#
48"	1200	20#
54"	1350	23#
60"	1500	25#
66"	1650	28#
72"	1800	31#
78"	1950	33#
84"	2100	36#
90"	2250	38#
96"	2400	41#
102"	2550	43#
108"	2700	46#
114"	2850	48#

Test run the cleaner. Run the conveyor for at least 15 minutes and inspect the cleaning performance. Check the spring length for proper tensioning. Make adjustments as necessary.

Section 6 – Maintenance

6.5 Maintenance Log

Conveyor Name/No. _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____

Date: _____ Work done by: _____ Service Quote # _____

Activity: _____



Section 6 – Maintenance

6.6 Cleaner Maintenance Checklist

Site: _____ Inspected by: _____ Date: _____

Belt Cleaner: _____ Serial Number: _____

Beltline Information:

Beltline Number: _____ Belt Condition: _____

Belt Width: 18" 24" 30" 36" 42" 48" 54" 60" 72" 84" 96" 108" 120"
450mm 600mm 750mm 900mm 1050mm 1200mm 1350mm 1500mm 1800mm 2100mm 2400mm 2700mm 3000mm

Head Pulley Diameter (Belt & Lagging): _____ Belt Speed: _____ fpm Belt Thickness: _____

Belt Splice _____ Condition of Splice _____ Number of splices _____ Skived Unskived

Material conveyed _____

Days per week run _____ Hours per day run _____

Blade Life:

Date blade installed: _____ Date blade inspected: _____ Estimated blade life: _____

Is blade making complete contact with belt? Yes No

Distance from wear line: LEFT _____ MIDDLE _____ RIGHT _____

Blade condition: Good Grooved Smiled Not contacting belt Damaged

Measurement of spring: Required _____ Currently _____

For PAT Tensioner Only: Air/Nitrogen Pressure Required: _____ Currently: _____

Inspect air bags and lines

Was Cleaner Adjusted: Yes No

Pole Condition: Good Bent Worn

Lagging: Slide lag Ceramic Rubber Other None

Condition of lagging: Good Bad Other _____

Cleaner's Overall Performance:

(Rate the following 1 - 5, 1 = very poor - 5 = very good)

Appearance: Comments: _____

Location: Comments: _____

Maintenance: Comments: _____

Performance: Comments: _____

Other Comments: _____

Section 7 – Troubleshooting

Problem	Possible Cause	Possible Solutions
Poor cleaning performance	Cleaner under-tensioned	Adjust to correct tension – see spring length/PSI chart
	Cleaner over-tensioned	Adjust to correct tension – see spring length/PSI chart
	Cleaner installed in wrong location	Verify "C" dimension, relocate to correct dimension
	Cleaner blade worn or damaged	Replace cleaner blade
Rapid Blade Wear	Tension on cleaner too high/low	Adjust to correct tension – see spring length/PSI chart
	Cleaner not located correctly	Check cleaner location for correct dimensions
	Blade attack angle incorrect	Check cleaner location for correct dimensions
	Material too abrasive for blade	Option: switch to alternate cleaner with metal blades
	Mechanical splice damaging blade	Repair, skive or replace splice
Center wear on blade (smile effect)	Blade wider than material path	Replace blade with width to match material path
	Tension on cleaner too high/low	Adjust to correct tension – see spring length/PSI chart
	Material very thick and wet	Increase tension (consult factory)
Unusual wear or damage to blade	Mechanical splice damaging blade	Repair, skive or replace splice
	Belt damaged or ripped	Repair or replace belt
	Cleaner not correctly located	Verify "C" dimension, relocate to correct dimension
	Damage to pulley or pulley lagging	Repair or replace pulley
Vibration or noise	Cleaner not located correctly	Verify "C" dimension, relocate to correct dimension
	Blade attack angle incorrect	Verify "C" dimension, relocate to correct dimension
	Cleaner running on empty belt	Use a spray pole when the belt is empty
	Cleaner tension too high/low	Adjust to correct tension or slight adjust to diminish
	Cleaner locking bolts not secure	Check and tighten all bolts and nuts
	Cleaner not square to head pulley	Verify "C" dimension, relocate to correct dimension
	Material buildup in chute	Clean up build-up on cleaner and in chute
Cleaner being pushed away from pulley	Cleaner tension not set correctly	Ensure correct tension/increase tension slightly
	Sticky material is overburdening cleaner	Increase tension; replace with cleaner with metal tips; replace with larger size cleaner
	Cleaner not set up correctly	Confirm location dimensions are equal on both sides


Section 8 – Specs and CAD Drawings

8.1 Specifications & Guidelines - MHP

Pole Length Specifications*

Cleaner Size		Max Overall Pole Length		Center Pole Length		Maximum Conveyor Span	
in.	mm	in.	mm	in.	mm	in.	mm
24	600	78	1950	24	600	66	1650
30	750	84	2100	30	750	72	1800
36	900	90	2250	36	900	78	1950
42	1050	96	2400	42	1050	84	2100
48	1200	102	2550	48	1200	90	2250
54	1350	108	2700	54	1350	96	2400
60	1500	114	2850	60	1500	102	2550
72	1800	126	3150	72	1800	114	2850
84	2100	138	3450	84	2100	126	3150
96	2400	150	3750	96	2400	138	3450
108	2700	162	4050	108	2700	150	3750
120	3000	174	4350	120	3000	162	4050


* For special extra long pole length requirements a Pole Extender Kit (#76024) is available that provides 30" (750mm) of extended pole length.
Pole diameter 2-7/8" (73mm)

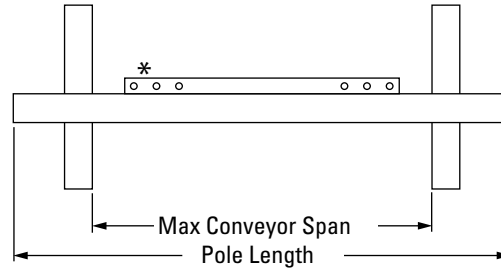

*Each pole size can be used with a blade size matched to the belt's material path (ranging from belt width -6" to belt width -36" in 6" increments). Available down to 24" blade width.

Clearance Guidelines for Installation

HORIZONTAL CLEARANCE REQUIRED		VERTICAL CLEARANCE REQUIRED	
in.	mm	in.	mm
8	200	19.5	488

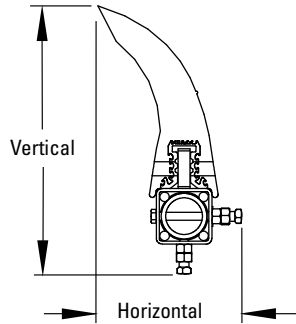

Spring Length Chart Imperial

Blade Width	White Springs	Silver Springs	Red Springs
18"	5 5/8"	N/A	N/A
24"	5 3/8"	6 1/4"	N/A
30"	5"	6 1/8"	6 1/4"
36"	4 3/4"	6"	6 1/4"
42"	N/A	6"	6 1/8"
48"	N/A	5 7/8"	6 1/8"
54"	N/A	5 3/4"	6"
60"	N/A	5 5/8"	6"
66"	N/A	5 5/8"	5 7/8"
72"	N/A	5 1/2"	5 7/8"
78"	N/A	5 3/8"	5 3/4"
84"	N/A	5 3/8"	5 3/4"
90"	N/A	5 1/4"	5 5/8"
96"	N/A	5 1/8"	5 5/8"
102"	N/A	N/A	5 1/2"
108"	N/A	N/A	5 1/2"
114"	N/A	N/A	5 3/8"

Shading indicates preferred spring option.


Spring Length Chart Metric

Blade Width	White Springs	Silver Springs	Red Springs
450	143	N/A	N/A
600	137	159	N/A
750	127	156	159
900	121	152	159
1050	N/A	152	156
1200	N/A	149	156
1350	N/A	146	152
1500	N/A	143	152
1650	N/A	143	149
1800	N/A	140	149
1950	N/A	137	146
2100	N/A	137	146
2250	N/A	133	143
2400	N/A	130	143
2550	N/A	N/A	140
2700	N/A	N/A	140
2850	N/A	N/A	137

Shading indicates preferred spring option.

Pressure Chart (PAT)

Blade Width		PSI
in.	mm	
18"	450	8#
24"	600	10#
32"	800	13#
36"	900	15#
42"	1050	18#
48"	1200	20#
54"	1350	23#
60"	1500	25#
66"	1650	28#
72"	1800	31#
78"	1950	33#
84"	2100	36#
90"	2250	38#
96"	2400	41#
102"	2550	43#
108"	2700	46#
114"	2850	48#

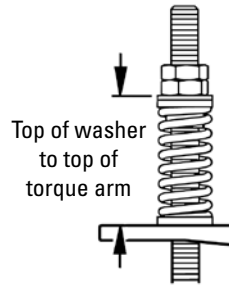

Specifications:

- Maximum Belt Speed 1500 FPM (7.5M/sec)
- Temperature Rating -30°F to 180°F (-35°C to 82°C)
- Minimum Pulley Diameter 20" (500mm)
- Blade Height 12.25" (306mm)
- Usable Blade Wear Length 8" (200mm)
- Blade Material..... Urethane (proprietary blend for abrasion resistance and long wear)
- Available for Belt Widths..... 24" to 120" (600 to 3000mm). Other sizes available upon request.
- CEMA Cleaner Rating..... Class 5


Section 8 – Specs and CAD Drawings

8.1 Specifications & Guidelines - MHP UG

Pole Length Specifications*

Cleaner Size		Max Overall Pole Length		Center Pole Length		Maximum Conveyor Span	
in.	mm	in.	mm	in.	mm	in.	mm
48	1200	144	3600	54	1350	132	3300
54	1350	150	3750	60	1500	138	3450
60	1500	156	3900	66	1650	144	3600
72	1800	168	4200	78	1950	156	3900
84	2100	180	4500	90	2250	168	4200
96	2400	192	4800	102	2550	180	4500
108	2700	204	5100	114	2850	192	4800
120	3000	216	4350	126	3150	204	5100


* For special extra long pole length requirements a Pole Extender Kit (#76024) is available that provides 30" (750mm) of extended pole length. Pole diameter 2-7/8" (73mm)

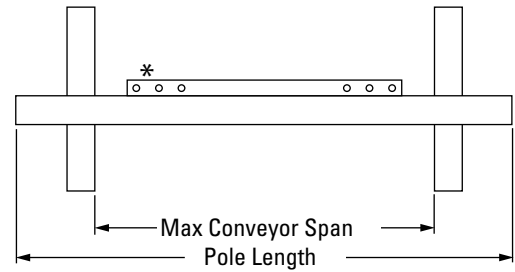

*Each pole size can be used with a blade size matched to the belt's material path (ranging from belt width -6" to belt width -36" in 6" increments). Available down to 48" blade width.

Clearance Guidelines for Installation

HORIZONTAL CLEARANCE REQUIRED		VERTICAL CLEARANCE REQUIRED	
in.	mm	in.	mm
8	200	19.5	488

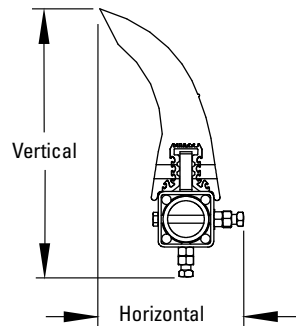

Spring Length Chart Imperial

Blade Width	White Springs	Silver Springs	Red Springs
18"	5 5/8"	N/A	N/A
24"	5 3/8"	6 1/4"	N/A
30"	5"	6 1/8"	6 1/4"
36"	4 3/4"	6"	6 1/4"
42"	N/A	6"	6 1/8"
48"	N/A	5 7/8"	6 1/8"
54"	N/A	5 3/4"	6"
60"	N/A	5 5/8"	6"
66"	N/A	5 5/8"	5 7/8"
72"	N/A	5 1/2"	5 7/8"
78"	N/A	5 3/8"	5 3/4"
84"	N/A	5 3/8"	5 3/4"
90"	N/A	5 1/4"	5 5/8"
96"	N/A	5 1/8"	5 5/8"
102"	N/A	N/A	5 1/2"
108"	N/A	N/A	5 1/2"
114"	N/A	N/A	5 3/8"

Shading indicates preferred spring option.


Spring Length Chart Metric

Blade Width	White Springs	Silver Springs	Red Springs
450	143	N/A	N/A
600	137	159	N/A
750	127	156	159
900	121	152	159
1050	N/A	152	156
1200	N/A	149	156
1350	N/A	146	152
1500	N/A	143	152
1650	N/A	143	149
1800	N/A	140	149
1950	N/A	137	146
2100	N/A	137	146
2250	N/A	133	143
2400	N/A	130	143
2550	N/A	N/A	140
2700	N/A	N/A	140
2850	N/A	N/A	137

Shading indicates preferred spring option.

Pressure Chart (PAT)

Blade Width		PSI
in.	mm	
18"	450	8#
24"	600	10#
32"	800	13#
36"	900	15#
42"	1050	18#
48"	1200	20#
54"	1350	23#
60"	1500	25#
66"	1650	28#
72"	1800	31#
78"	1950	33#
84"	2100	36#
90"	2250	38#
96"	2400	41#
102"	2550	43#
108"	2700	46#
114"	2850	48#

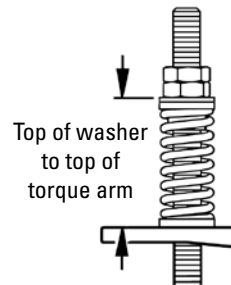


Specifications:

- Maximum Belt Speed 1500 FPM (7.5M/sec)
- Temperature Rating -30°F to 180°F (-35°C to 82°C)
- Minimum Pulley Diameter 20" (500mm)
- Blade Height 12.25" (306mm)
- Usable Blade Wear Length 8" (200mm)
- Blade Material..... Urethane (proprietary blend for abrasion resistance and long wear)
- Available for Belt Widths..... 48" to 120" (1200 to 3000mm). Other sizes available upon request.
- CEMA Cleaner Rating..... Class 5

Section 8 – Specs and CAD Drawings

8.1 Specifications & Guidelines (cont.)

Pole Location Specs

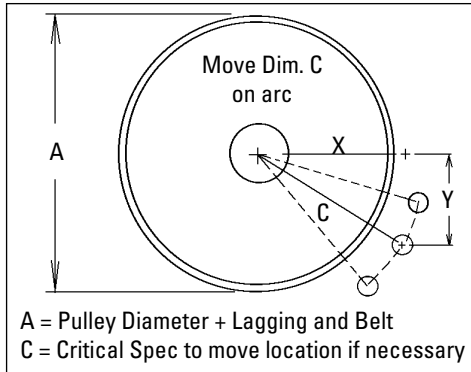

X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
20"	10"	14 3/8"	17 1/2"
21"	10 1/2"	14 3/8"	17 3/4"
22"	11"	14 3/8"	18 1/8"
23"	11 1/2"	14 3/8"	18 3/8"
24"	12"	14 3/8"	18 3/4"
25"	12 1/2"	14 3/8"	19"
26"	13"	14 3/8"	19 3/8"
27"	13 1/2"	14 3/8"	19 3/4"
28"	14"	14 3/8"	20 1/8"
29"	14 1/2"	14 3/8"	20 3/8"
30"	15"	14 3/8"	20 3/4"
31"	15 1/2"	14 3/8"	21 1/8"
32"	16"	14 3/8"	21 1/2"
33"	16 1/2"	14 3/8"	21 7/8"
34"	17"	14 3/8"	22 1/4"
35"	17 1/2"	14 3/8"	22 5/8"
36"	18"	14 3/8"	23"
37"	18 1/2"	14 3/8"	23 3/8"
38"	19"	14 3/8"	23 7/8"
39"	19 1/2"	14 3/8"	24 1/4"
40"	20"	14 3/8"	24 5/8"
41"	20 1/2"	14 3/8"	25"
42"	21"	14 3/8"	25 1/2"
43"	21 1/2"	14 3/8"	25 7/8"
44"	22 1/4"	14 3/8"	26 1/2"

X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
45	22 7/8"	14 3/8"	27 "
46	23 1/2"	14 3/8"	27 1/2"
47	24"	14 3/8"	28"
48	24 5/8"	14 3/8"	28 1/2"
49	25 1/8"	14 3/8"	29"
50	25 3/4"	14 3/8"	29 1/2"
51	26 3/8"	14 3/8"	30"
52	26 7/8"	14 3/8"	30 1/2"
53	27 1/2"	14 3/8"	31"
54	28"	14 3/8"	31 1/2"
55	28 5/8"	14 3/8"	32"
56	29 1/8"	14 3/8"	32 1/2"
57	29 3/4"	14 3/8"	33"
58	30 1/4"	14 3/8"	33 1/2"
59	30 3/4"	14 3/8"	34"
60	31 3/8"	14 3/8"	34 1/2"
61	31 7/8"	14 3/8"	35"
62	32 1/2"	14 3/8"	35 1/2"
63	33"	14 3/8"	36"
64	33 1/2"	14 3/8"	36 1/2"
65	34 1/8"	14 3/8"	37"
66	34 5/8"	14 3/8"	37 1/2"
67	35 1/8"	14 3/8"	38"
68	35 3/4"	14 3/8"	38 1/2"
69	36 1/4"	14 3/8"	39"





X & Y Chart for Pole Location

Pulley Diameter (including belt and lagging)	X	Y	C
70	36 3/4"	14 3/8"	39 1/2"
71	37 3/8"	14 3/8"	40"
72	37 7/8"	14 3/8"	40 1/2"
73	38 3/8"	14 3/8"	41"
74	38 7/8"	14 3/8"	41 1/2"
75	39 1/2"	14 3/8"	42"
76	40"	14 3/8"	42 1/2"
77	40 1/2"	14 3/8"	43"
78	41"	14 3/8"	43 1/2"
79	41 5/8"	14 3/8"	44"
80	42 1/8"	14 3/8"	44 1/2"
81	42 5/8"	14 3/8"	45"
82	43 1/8"	14 3/8"	45 1/2"
83	43 3/4"	14 3/8"	46"
84	44 1/4"	14 3/8"	46 1/2"

Section 8 – Specs and CAD Drawings

8.2 CAD Drawing - MHP PST2





SPECIFICATIONS		MHP CLEANER ASSY		ITEM NUMBER 1 CIR POLE		ITEM NUMBER 2 MRB BLADE	
BELT WIDTH "A" (in)	MAX POLE LENGTH "B" (mm)	ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE
24	600	MHP-624	77703	MMPCP24	76458	MRB18	77531
30	750	MHP-630	77704	MMPCP30	76459	MRB24	77532
36	900	MHP-636	77705	MMPCP36	76460	MRB30	77533
42	1050	MHP-642	77706	MMPCP42	76461	MRB36	77534
48	1200	MHP-648	77707	MMPCP48	76462	MRB42	77535
54	1350	MHP-654	77708	MMPCP54	76463	MRB48	77536
60	1500	MHP-660	77709	MMPCP60	76464	MRB54	77537
72	1800	MHP-672	77710	MMPCP72	76465	MRB66	77539
84	2100	MHP-684	77711	MMPCP84	76466	MRB78	77541
96	2400	MHP-696	77712	MMPCP96	77722	MRB90	77543
108	2700	MHP-6108	90151	MMPCP108	90326	MRB102	77545

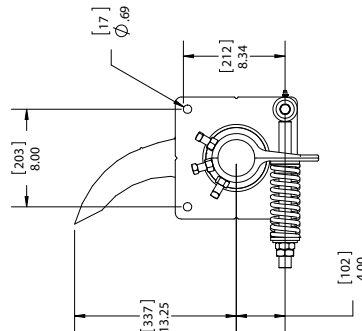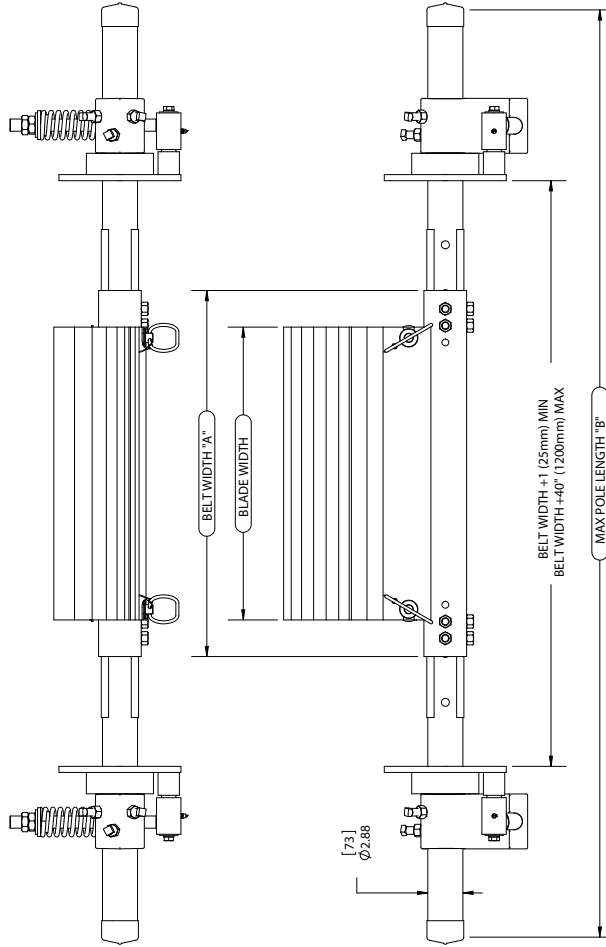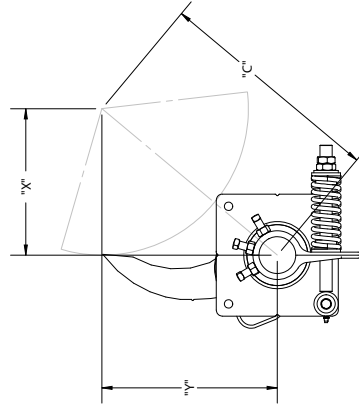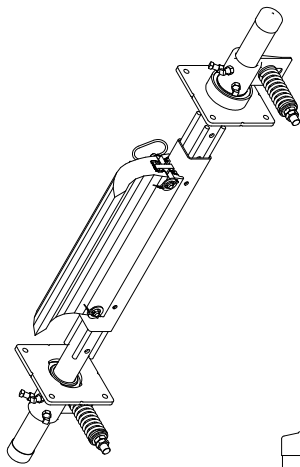

Section 8 – Specs and CAD Drawings

8.2 CAD Drawing - MHP PAT (no Control Box)


SPECIFICATIONS		MHP CLEANER ASSY		ITEM NUMBER 1 CTR POLE		ITEM NUMBER 2 MRB BLADE	
BELT WIDTH 'A' (in)	MAX POLE LENGTH 'B' (mm)	ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE
24	78	MHP-624P	78599	MMPCP24	76458	MRB18	77531
30	84	MHP-630P	78600	MMPCP30	76459	MRB24	77532
36	90	MHP-636P	78601	MMPCP36	76460	MRB30	77533
42	105	MHP-642P	78602	MMPCP42	76461	MRB36	77534
48	120	MHP-648P	78603	MMPCP48	76462	MRB42	77535
54	135	MHP-654P	78604	MMPCP54	76463	MRB48	77536
60	150	MHP-660P	78605	MMPCP60	76464	MRB54	77537
72	180	MHP-672P	78606	MMPCP72	76465	MRB66	77539
84	210	MHP-684P	78607	MMPCP84	76466	MRB78	77541
96	240	MHP-696P	78608	MMPCP96	77722	MRB90	77543
108	270	MHP-6108P	90159	MMPCP108	90326	MRB102	77545

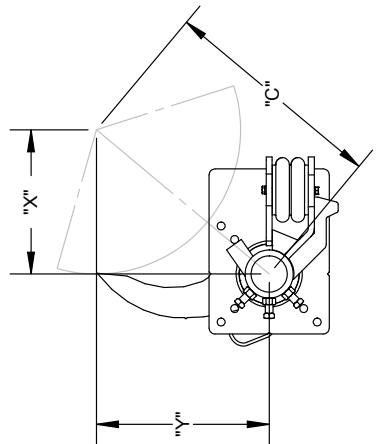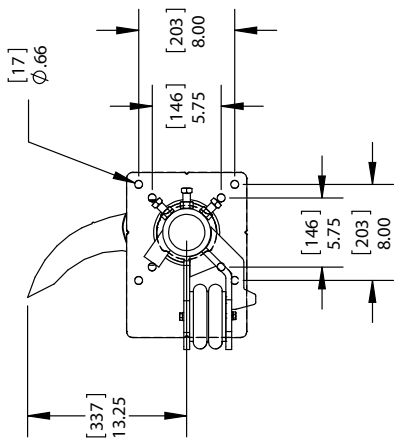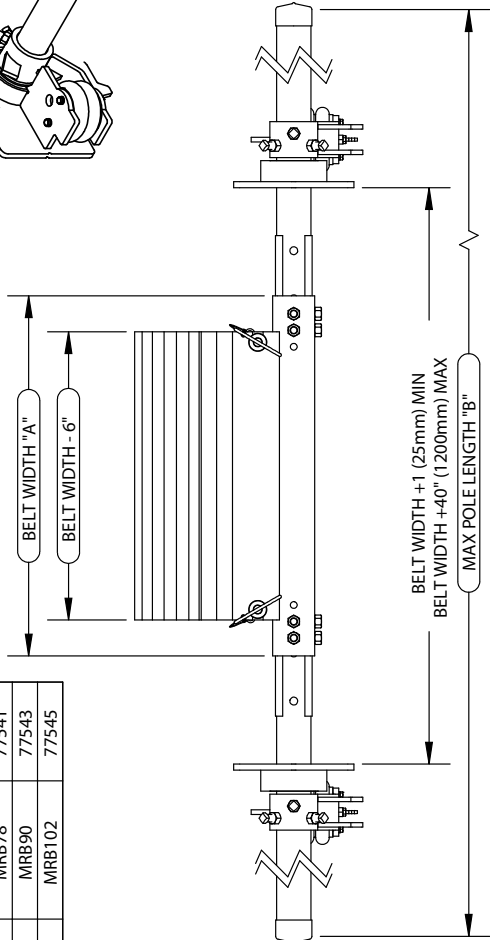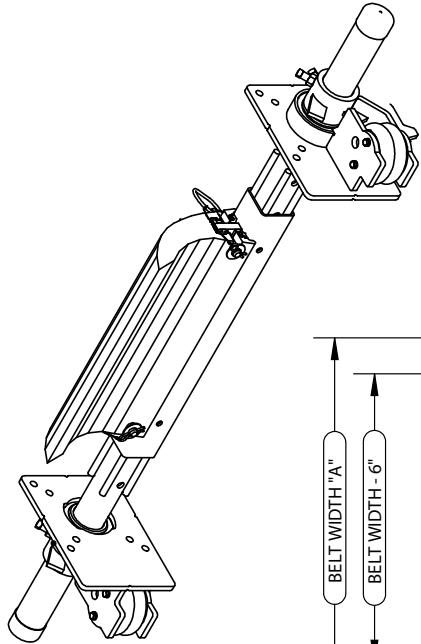

Section 8 – Specs and CAD Drawings


8.2 CAD Drawing - MHP UG PST2

SPECIFICATIONS		MHP CLEANER ASSY		ITEM NUMBER 1 CTR POLE		MRB BLADE							
BELT WIDTH (in)	BLADE WIDTH 'A' (mm)	CENTER POLE LENGTH 'B' (in)	MAX POLE LENGTH 'C' (mm)	ORDER NUMBER	ITEM CODE	ORDER NUMBER	ITEM CODE						
48	1200	42	1350	54	1350	144	3600	MHP-648-UG	92061	MMPCP54	76463	MRB42	77535
54	1350	48	1500	60	1500	150	3750	MHP-654-UG	92062	MMPCP60	76464	MRB48	77536
60	1500	54	1650	66	1650	156	3900	MHP-660-UG	92063	MMPCP66	91937	MRB54	77537
72	1800	66	1850	78	1850	168	4200	MHP-672-UG	92064	MMPCP78	91938	MRB66	77539
84	2100	78	1950	90	2250	180	4500	MHP-684-UG	92065	MMPCP90	91939	MRB78	77541
96	2400	90	2250	102	2550	192	4800	MHP-696-UG	92066	MMPCP102	91940	MRB90	77543
108	2700	102	2550	114	2850	204	5100	MHP-6108-UG	92067	MMPCP114	91941	MRB102	77545
120	3000	114	2850	126	3150	216	5400	MHP-6120-UG	93440	MMPCP120	90327	MRB114	77547

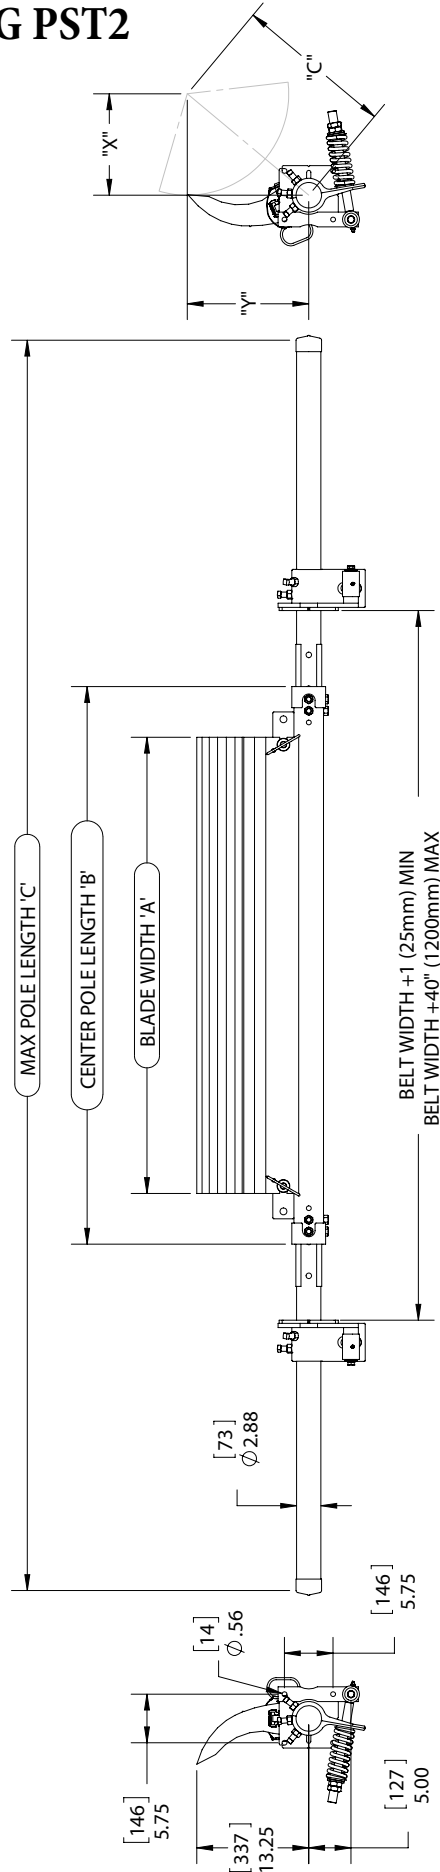


Section 8 – Specs and CAD Drawings

8.2 CAD Drawing - MHP UG PAT (no Control Box)

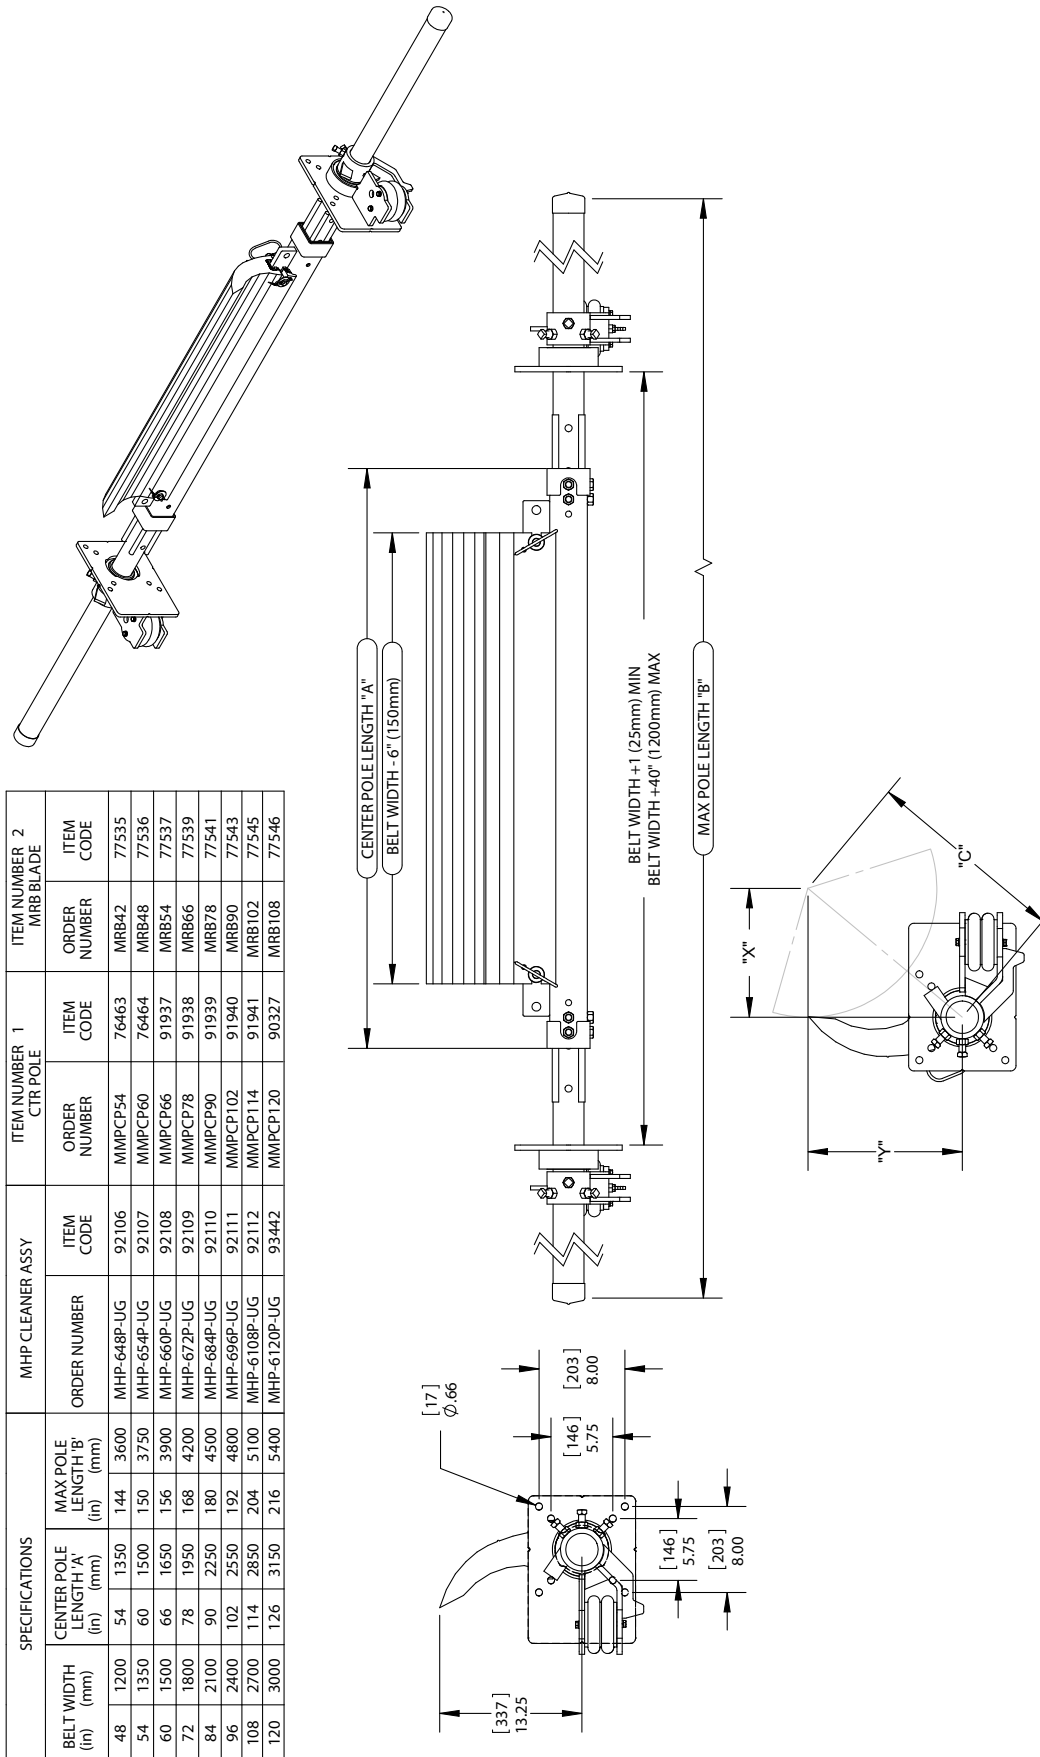

Section 9 – Replacement Parts


9.1 Replacement Parts List - MHP

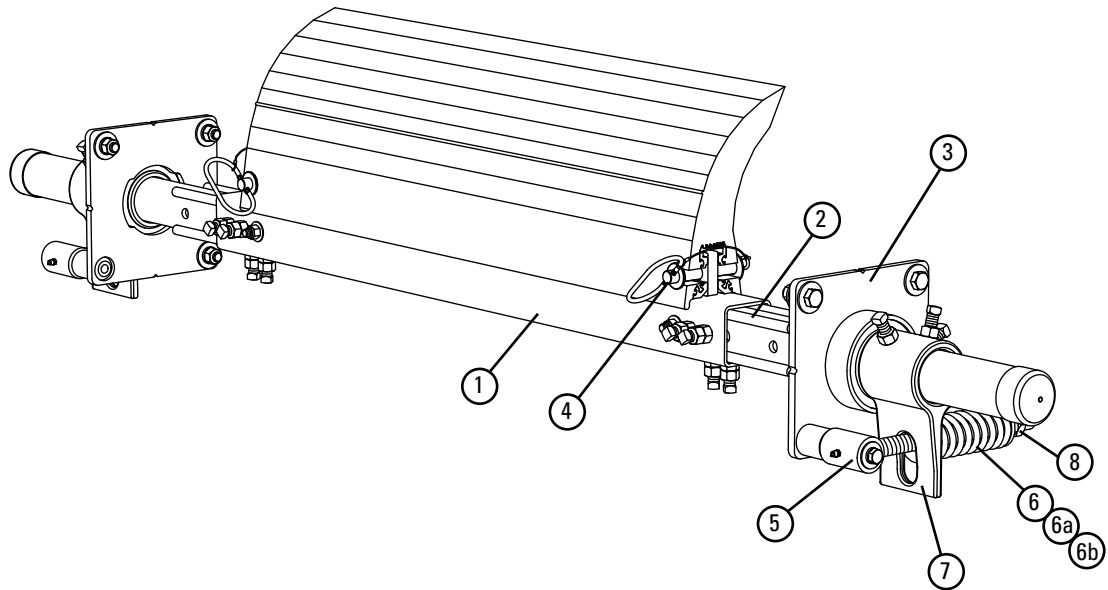

Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	24" (600mm) Center Pole	MMPCP24	76458	34.4
	30" (750mm) Center Pole	MMPCP30	76459	43.0
	36" (900mm) Center Pole	MMPCP36	76460	51.6
	42" (1050mm) Center Pole	MMPCP42	76461	60.1
	48" (1200mm) Center Pole	MMPCP48	76462	68.7
	54" (1350mm) Center Pole	MMPCP54	76463	77.3
	60" (1500mm) Center Pole	MMPCP60	76464	85.9
	72" (1800mm) Center Pole	MMPCP72	76465	103.1
	84" (2100mm) Center Pole	MMPCP84	76808	120.3
	96" (2400mm) Center Pole	MMPCP96	77722	137.5
	108" (2700mm) Center Pole	MMPCP108	90326	154.7
120" (3000mm) Center Pole	MMPCP120	90327	171.9	
2	Extender Pole Kit (2 ea.)	MHP-EP	76392	54.0
3	Mounting Plate Kit* (2 ea.)	MHPMPK	77727	44.4
4	Blade Pin Kit* (1 ea.)	MHPBPK	77728	0.8
5	Torque Pivot Kit* (1 ea.)	PTPK	75897	7.0
6	Tension Spring - White (1 ea.) for blades 18" - 42" (450 - 1050mm)	PSTS-W	75898	1.7
6a	Tension Spring - Silver (1 ea.) for blades 48" - 78" (1200 - 1950mm)	PSTS-S	75899	3.0
6b	Tension Spring - Red (1 ea.) for blades 84" - 114" (2100 - 2850mm)	PSTS-R	77726	4.3
7	Torque Arm Kit* (1 ea.)	PSTA	75896	11.4
8	Bushing Kit (2 ea.)	QMTBK-W	76098	0.2
9	Jam Nut Kit PST Tensioner	JNK-D	79894	0.3
-	PST Spring Tensioner* - White (incl. 2 ea. Items 3, 5, 6, 7, & 8) for blades 18" - 42" (450 - 1050mm)	PST2-W	77723	86.1
-	PST Spring Tensioner* - Silver (incl. 2 ea. Items 3, 5, 6a, 7a, & 8) for blades 48" - 78" (1200 - 1950mm)	PST2-S	77724	87.4
-	PST Spring Tensioner* - Red (incl. 2 ea. Items 3, 5, 6b, 7b, & 8) for blades 84" - 114" (2100 - 2850mm)	PST2-R	77725	88.8

*Hardware Included
Lead Time: 1 working day

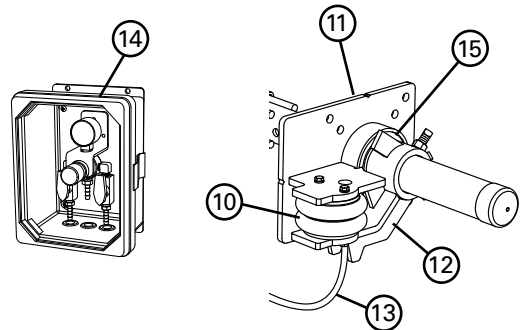

PAT Air & Nitrogen Tensioner Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
10	Air/Water Bag (1 ea.)	AWTB	75905	3.8
11	Mounting Base (1 ea.)	AWTMB	75906	22.9
12	Torque Arm * (1 ea.)	AWTA	75907	11.6
13	Hose Kit (50' of hose and 6 hose clamps)	AWTHK	75909	6.7
14	PAT Control Box	PACB	78683	11.0
15	AWT Pole Bearing Assy (for cleaners shipped after 4/2016)	AWTPBA	90000	2.3
-	PAT Kit- AWT Tensioner w/Control Box (includes 2 ea. items 9, 10, 11 & 1 ea. items 12, 13)	PAK	78705	86.2
-	AWT Air/Water Tensioner w/o Control Box (includes 2 each items 9, 10, 11 & 1 ea. item 12)	AWTNCB	76069	75.2


*Hardware Included
Lead time: 1 working day

Spring Tensioner Selection Chart

CLEANER BLADE WIDTH	77723 PST2-W	77724 PST2-S	77725 PST2-R
MegaShear 18" - 42" (450 - 1050mm)	X		
MegaShear 48" - 78" (1200 - 1950mm)		X	
MegaShear 84" - 114" (2100 - 2850mm)			X

Section 9 – Replacement Parts


9.1 Replacement Parts List - MHP UG

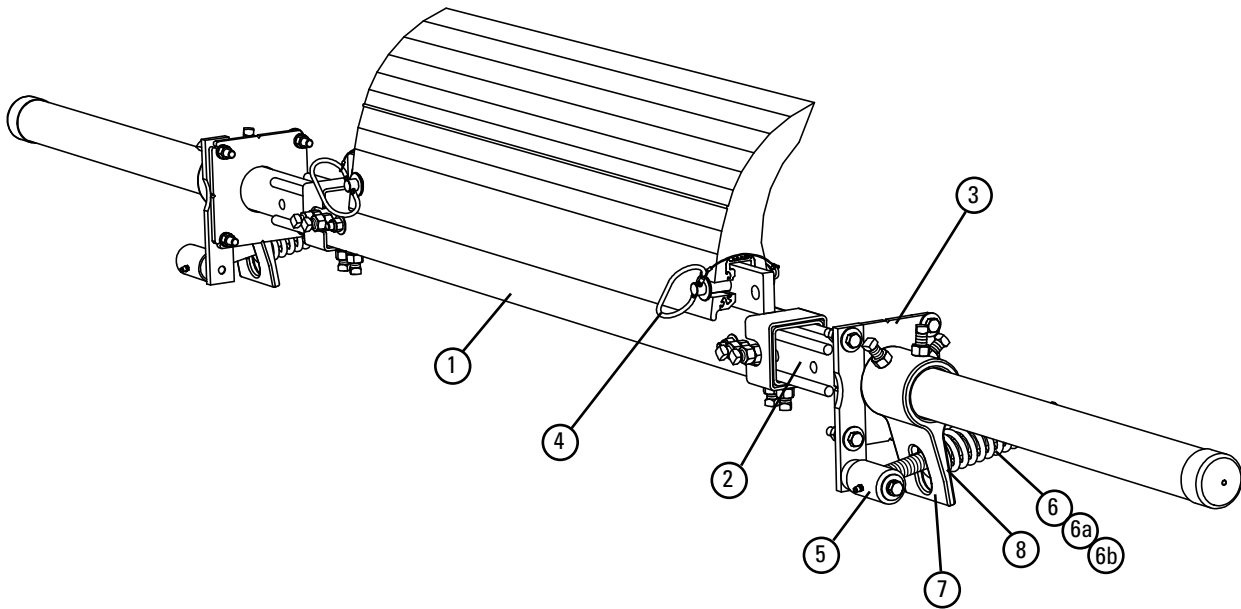

Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	48" (1200mm) UG Center Pole	MMPCP48UG	91918	68
	54" (1350mm) UG Center Pole	MMPCP54UG	91919	75
	60" (1500mm) UG Center Pole	MMPCP60UG	91920	82
	72" (1800mm) UG Center Pole	MMPCP72UG	91921	119
	84" (2100mm) UG Center Pole	MMPCP84UG	91922	137
	96" (2400mm) UG Center Pole	MMPCP96UG	91923	156
	108" (2700mm) UG Center Pole	MMPCP108UG	91924	174
	120" (3000mm) UG Center Pole	MMPCP120UG	91925	192
2	Extender Pole HD Kit (2 ea.)	MHP-EPHD-54	91347	126
3	Mounting Plate Kit* (2 ea.)	MHPMPK	77727	44.4
4	Blade Pin Kit* (1 ea.)	MHPBPK	77728	0.8
5	Torque Pivot Kit* (1 ea.)	PTPK	75897	7
6	Tension Spring - White (1 ea.) for blades 18" - 42" (450 - 1050mm)	PSTS-W	75898	1.7
6a	Tension Spring - Silver (1 ea.) for blades 48" - 78" (1200 - 1950mm)	PSTS-S	75899	3
6b	Tension Spring - Red (1 ea.) for blades 84" - 114" (2100 - 2850mm)	PSTS-R	77726	4.3
7	Torque Arm Kit* (1 ea.)	PSTA	75896	11.4
8	Bushing Kit (2 ea.)	QMTBK-W	76098	0.2
9	Jam Nut Kit PST Tensioner	JNK-D	79894	0.3
-	PST Spring Tensioner* - White (incl. 2 ea. Items 3, 5, 6, 7, & 8) for blades 18" - 42" (450 - 1050mm)	PST2-W	77723	86.1
-	PST Spring Tensioner* - Silver (incl. 2 ea. Items 3, 5, 6a, 7a, & 8) for blades 48" - 78" (1200 - 1950mm)	PST2-S	77724	87.4
-	PST Spring Tensioner* - Red (incl. 2 ea. Items 3, 5, 6b, 7b, & 8) for blades 84" - 114" (2100 - 2850mm)	PST2-R	77725	88.8

*Hardware Included
Lead Time: 1 working day

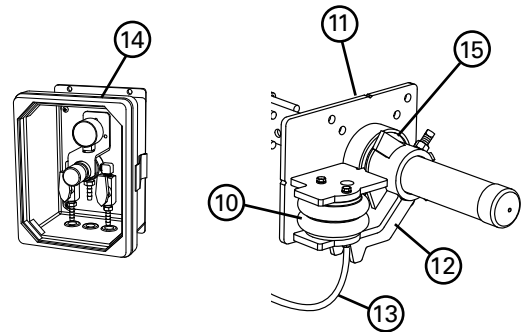

PAT Air & Nitrogen Tensioner Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
10	Air/Water Bag (1 ea.)	AWTBA	75905	3.8
11	Mounting Base (1 ea.)	AWTMB	75906	22.9
12	Torque Arm * (1 ea.)	AWTA	75907	11.6
13	Hose Kit (50' of hose and 6 hose clamps)	AWTHK	75909	6.7
14	PAT Control Box	PACB	78683	11.0
15	AWT Pole Bearing Assy (for cleaners shipped after 4/2016)	AWTPBA	90000	2.3
-	PAT Kit- AWT Tensioner w/Control Box (includes 2 ea. items 9, 10, 11 & 1 ea. items 12, 13)	PAK	78705	86.2
-	AWT Air/Water Tensioner w/o Control Box (includes 2 each items 9, 10, 11 & 1 ea. item 12)	AWTNCB	76069	75.2

*Hardware Included
Lead time: 1 working day

Spring Tensioner Selection Chart

CLEANER BLADE WIDTH	77723 PST2-W	77724 PST2-S	77725 PST2-R
MegaShear 18" - 42" (450 - 1050mm)	X		
MegaShear 48" - 78" (1200 - 1950mm)		X	
MegaShear 84" - 114" (2100 - 2850mm)			X

Section 10 – Other Flexco Conveyor Products

Flexco provides many conveyor products that help your conveyors to run more efficiently and safely. These components solve typical conveyor problems and improve productivity. Here is a quick overview on just a few of them:

EZP1 Precleaner



- Patented ConShear™ blade renews its cleaning edge as it wears
- Visual Tension Check™ for optimal blade tensioning and simple retensioning
- Quick and easy one-pin blade replacement Material Path Option™ for optimal cleaning and reduced maintenance

DRX Impact Beds




- Exclusive Velocity Reduction Technology™ to better protect the belt
- Slide-Out Service™ gives direct access to all impact bars for change-out
- Impact bar supports for longer bar life
- 4 models to custom fit to the application

EZS2 Secondary Cleaner



- Long-wearing tungsten carbide blades for superior cleaning efficiency
- Patented FormFlex™ cushions independently tension each blade to the belt for consistent, constant cleaning power
- Easy to install, simple to service
- Works with Flexco mechanical belt splices

PT Max™ Belt Trainer

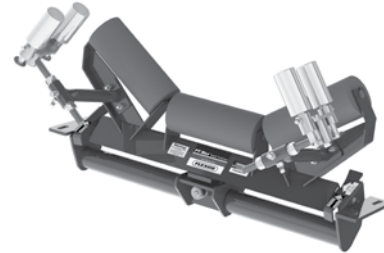

- Patented “pivot & tilt” design for superior training action
- Dual sensor rollers on each side to minimize belt damage
- Pivot point guaranteed not to freeze or seize up
- Available for topside and return side belts

Flexco Specialty Belt Cleaners



- “Limited space” cleaners for tight conveyor applications
- High Temp cleaners for severe, high heat applications
- A rubber fingered cleaner for chevron and raised rib belts
- Multiple cleaner styles in stainless steel for corrosive applications

Belt Plows



- A belt cleaner for the tail pulley
- Exclusive blade design quickly spirals debris off the belt
- Economical and easy to service
- Available in vee or diagonal models



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2022 Flexible Steel Lacing Company. 08/22/22. For Reorder: X2552

