


WHEN TECHNOLOGY DELIVERS CONNECTIVITY OPERATIONS OPTIMIZE

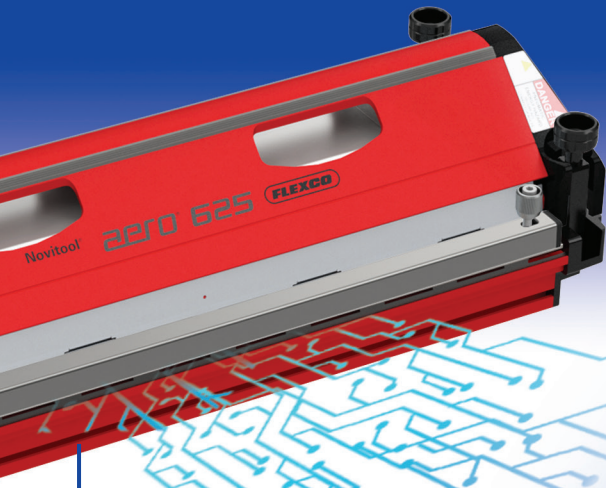

CONNECTIVITY

Enhance the productivity of your press and improve splice reliability.

Utilizing Bluetooth® technology, the Novitool® Aero® Splice Press connects through a simple-to-use mobile app to access and evaluate splice cycle data and manage updates to firmware for ongoing press advancements.

OPERATIONAL EFFICIENCY

Keep up-to-date on all the latest technological improvements to the Aero® Press.

Ongoing updates and improvements to press operation—based on customer feedback and technology innovations—means your press is continually optimized for the most efficient operation and consistent endless splicing.

SPLICE RELIABILITY

The Aero® Dashboard allows operators easy access to splice cycle data for evaluation and troubleshooting.

Managing one press or many is easy, plus operators can work directly with Flexco Aero® Press experts for advanced splicing support and assistance.

INTUITIVE AERO® PRESS TECHNOLOGY



● Simply add your press to the Aero® Dashboard


● Download the Aero® Mobile App

● Connect to your press

FLEXCO


NOVITool® AERO® SPLICE PRESS CONNECTIVITY QUICK START GUIDE

Connecting your Aero® Splice Press is easy.
Just follow the simple steps below.

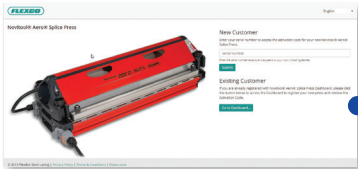


INITIALIZE PRESS

Initialize your new Aero Splice Press by registering the unique serial number at www.flexco.com/code.

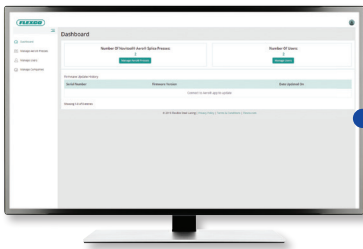

ACCESS DASHBOARD

Immediately following the online registration, you will receive an email inviting you to log-in and add presses and users to the custom Dashboard.
<https://Novitool.Flexco.cloud>

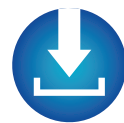

DOWNLOAD the AERO® MOBILE APP

Using your smart device, search your Apple or Android App Store for "Novitool® Aero® Splice Press".

Download the Aero® Mobile App and log-in using your Dashboard user name and password.



MAKE the CONNECTION

Use the Aero® Mobile App and connect via the Bluetooth® wireless technology dongle provided with your Aero® Press package.




TRANSMIT

Send your splice cycle data to the Dashboard on a regular basis to help with troubleshooting and improved splice reliability.



UPDATE

You will receive notifications from Flexco when it is time to update Firmware.

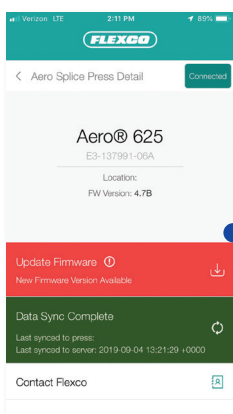

Authorised Distributor:

Flexco Europe GmbH • Maybachstrasse 9 • 72348 Rosenfeld • Germany
Tel: +49-7428-9406-0 • Fax: +49-7428-9406-260 • E-mail: europe@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2019 Flexible Steel Lacing Company. Novitool® is a registered trademark. 11/18/20. For Reorder: X6311

