


# WHEN TECHNOLOGY DELIVERS CONNECTIVITY OPERATIONS OPTIMIZE

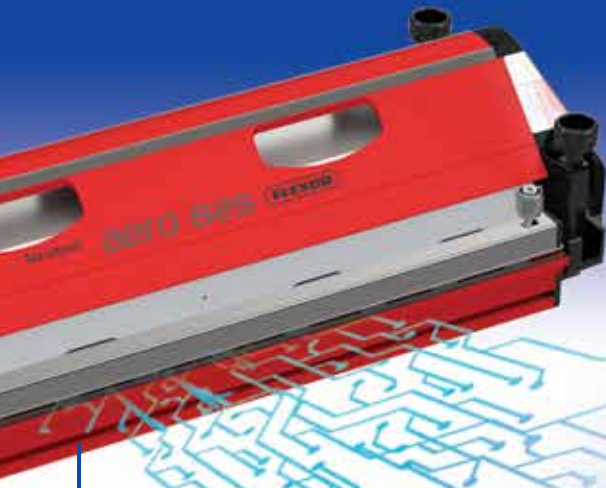

## CONNECTIVITY

*Enhance the productivity of your press and improve splice reliability.*

Utilizing Bluetooth® technology, the Novitool® Aero® Splice Press connects through a simple-to-use mobile app to access and evaluate splice cycle data and manage updates to firmware for ongoing press advancements.

## OPERATIONAL EFFICIENCY

*Keep up-to-date on all the latest technological improvements to the Aero® Press.*

Ongoing updates and improvements to press operation—based on customer feedback and technology innovations—means your press is continually optimized for the most efficient operation and consistent endless splicing.

## SPLICE RELIABILITY

*The Aero® Dashboard allows operators easy access to splice cycle data for evaluation and troubleshooting.*

Managing one press or many is easy, plus operators can work directly with Flexco Aero® Press experts for advanced splicing support and assistance.

## INTUITIVE AERO® PRESS TECHNOLOGY



- Simply add your press to the Aero® Dashboard
- Download the Aero® Mobile App
- Connect to your press



# NOVITool® AERO® SPLICE PRESS CONNECTIVITY QUICK START GUIDE

Connecting your Aero® Splice Press is easy.  
Just follow the simple steps below.



 
## INITIALIZE PRESS

Initialize your new Aero Splice Press by registering the unique serial number at [www.flexco.com/code](http://www.flexco.com/code).



## ACCESS DASHBOARD

Immediately following the online registration, you will receive an email inviting you to log-in and add presses and users to the custom Dashboard.  
<https://Novitool.Flexco.cloud>



## DOWNLOAD the AERO® MOBILE APP

Using your smart device, search your Apple or Android App Store for "Novitool® Aero® Splice Press".

Download the Aero® Mobile App and log-in using your Dashboard user name and password.



## MAKE the CONNECTION

Use the Aero® Mobile App and connect via the Bluetooth® wireless technology dongle provided with your Aero® Press package.



## TRANSMIT

Send your splice cycle data to the Dashboard on a regular basis to help with troubleshooting and improved splice reliability.



## UPDATE

You will receive notifications from Flexco when it is time to update Firmware.



Authorised Distributor:

Flexco (Aust.) Pty. Ltd • 10 Solent Circuit, Norwest • NSW, Australia, 2153 • Australia  
Tel: 612-8818-2000 • Fax: 612-8824-6333 • E-mail: [salesau@flexco.com](mailto:salesau@flexco.com)

Visit [www.flexco.com](http://www.flexco.com) for other Flexco locations and products.

©2019 Flexible Steel Lacing Company. Novitool® is a registered trademark. 03/26/21. For Reorder: X6428

