


Belt Driven Brush Cleaner

Installation, Operation and Maintenance Manual

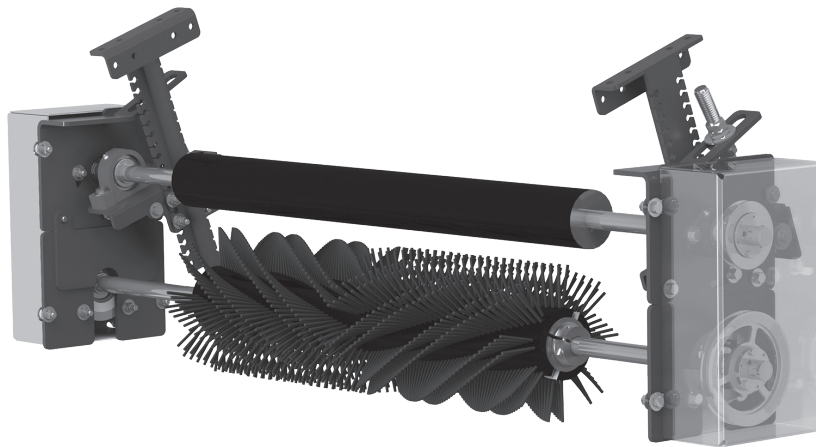

Belt Driven Brush Cleaner

Serial Number: _____
Purchase Date: _____
Purchased From: _____
Installation Date: _____

Serial number information can be found on the Serial Number Label included in the Information Packet shipped in the cleaner carton.

This information will be helpful for any future inquiries or questions about belt cleaner replacement parts, specifications or troubleshooting.

Table of Contents

Section 1 – Important Information	4
1.1 General Introduction	4
1.2 User Benefits.....	4
1.3 Service Options.....	4
Section 2 – Section 2 – Safety Considerations and Precautions.....	5
2.1 Stationary Conveyors	5
2.2 Operating Conveyors	5
2.3 Other Hazards	
Section 3 – Pre-Installation Checklist	6
3.1 Checklist	6
Section 4 – Installation Instructions	7
Section 5 – Pre-Operation Checklist and Testing.....	12
5.1 Pre-Op Checklist	12
5.2 Test Run the Conveyor.....	12
Section 6 – Maintenance	13
6.1 New Installation Inspection	13
6.2 Routine Visual Inspection	13
6.3 Routine Physical Inspection.....	13
6.4 Brush Replacement Instructions	14
6.5 Maintenance Log	16
6.5 CleanrMaintenance Checklist.....	17
Section 7 – Troubleshooting	18
Section 8 – Specs and CAD Drawings	19
8.1 Specs and Guidelines.....	19
8.2 CAD Drawing	20
Section 9 – Replacement Parrts	21
9.1 Replacement Parts	21
Section 10 – Other Flexco Conveyor Products	23



Section 1 - Important Information

1.1 General Introduction

We at Flexco are very pleased that you have selected a Belt Driven Brush Cleaner for your conveyor system.

This manual will help you to understand the operation of this product and assist you in making it work up to its maximum efficiency over its lifetime of service.

It is essential for safe and efficient operation that the information and guidelines presented be properly understood and implemented. This manual will provide safety precautions, installation instructions, maintenance procedures and troubleshooting tips.

If, however, you have any questions or problems that are not covered, please contact your field representative or our Customer Service Department:

Customer Service: 1-800-541-8028

Visit www.flexco.com for other Flexco locations and products.

Please read this manual thoroughly and pass it on to any others who will be directly responsible for installation, operation and maintenance of this product. While we have tried to make the installation and service tasks as easy and simple as possible, **it does however require correct installation and regular inspections and adjustments to maintain top working condition.**

1.2 User Benefits

Correct installation and regular maintenance will provide the following benefits for your operation:

- Reduced conveyor downtime
- Reduced man-hour labor
- Lower maintenance budget costs
- Increased service life for the belt cleaner and other conveyor components

1.3 Service Option

The Belt Driven Brush Cleaner is designed to be easily installed and serviced by your on-site personnel. However, if you would prefer complete turn-key factory service, please contact your local Flexco Field Representative.

Section 2 - Safety Considerations and Precautions

Before installing and operating the Belt Driven Brush Cleaner, it is important to review and understand the following safety information.

There are set-up, maintenance and operational activities involving both **stationary** and **operating** conveyors. Each case has a safety protocol.

2.1 Stationary Conveyors

The following activities are performed on stationary conveyors:

- Installation
- Drum replacement
- Repairs
- Tension adjustments
- Cleaning

DANGER

It is imperative that OSHA/MSHA Lockout/Tagout (LOTO) regulations, 29 CFR 1910.147, be followed before undertaking the preceding activities. Failure to use LOTO exposes workers to uncontrolled behavior of the belt cleaner caused by movement of the conveyor belt. Severe injury or death can result.

Before working:

- Lockout/Tagout the conveyor power source
- Disengage any takeups
- Clear the conveyor belt or clamp securely in place

WARNING

Use Personal Protective Equipment (PPE):

- Safety eyewear
- Hardhats
- Safety footwear

Close quarters, springs and heavy components create a worksite that compromises a worker's eyes, feet and skull. PPE must be worn to control the foreseeable hazards associated with conveyor belt cleaners. Serious injuries can be avoided.

2.2 Operating Conveyors

There are two routine tasks that must be performed while the conveyor is running:

- Inspection of the cleaning performance
- Dynamic troubleshooting

DANGER

Every belt cleaner is an in-running nip hazard. Never touch or prod an operating cleaner. Cleaner hazards cause instantaneous amputation and entrapment.

WARNING

Belt cleaners can become projectile hazards. Stay as far from the cleaner as practical and use safety eyewear and headgear. Missiles can inflict serious injury.

WARNING

Never adjust anything on an operating cleaner. Unforeseeable belt projections and tears can catch on cleaners and cause violent movements of the cleaner structure. Flailing hardware can cause serious injury or death.

2.3 Other Hazards

WARNING


This cleaner is not intended for use in locations where fire or explosion hazards may exist due to flammable gases or vapors, flammable liquids, combustible dust, or ignitable fibers of flyings.

Section 3 - Pre-Installation Checks and Options

3.1 Checklist

- Check that the cleaner size is correct for the beltline width
- Check the belt cleaner carton and make sure all the parts are included
- Review the “Tools Needed” list on the top of the installation instructions
- Check the conveyor site:
 - Will the cleaner be installed on a chute
 - Is the install on an open head pulley requiring mounting structure




Section 4 - Installation Instructions - Belt Driven Brush Cleaner

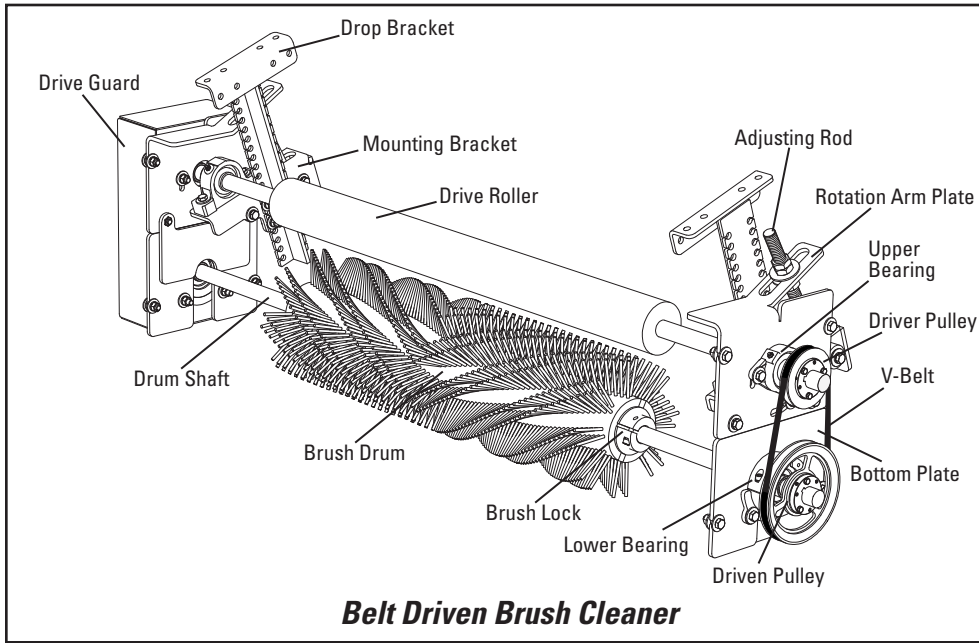

Tools Needed

- Impact Driver
- 3/4" (19mm) Impact Socket
- 3/4" (19mm) Combination Wrench
- 1-3/8" (35mm) Combination Wrench
- Adjustable Wrench (Up to 1-3/8" [35mm])
- 5/16" (8mm) Allen Wrench
- 7/16" (11mm) Combination Wrench or Impact Socket
- 5/32" (4mm) Allen Wrench
- Level
- Tape Measure/Ruler


PHYSICALLY LOCK OUT AND TAG THE CONVEYOR AT THE POWER SOURCE BEFORE YOU BEGIN CLEANER INSTALLATION.

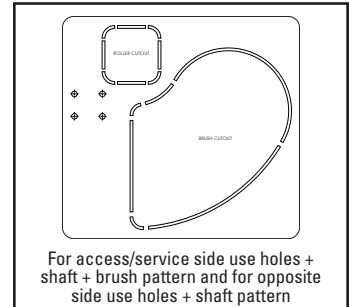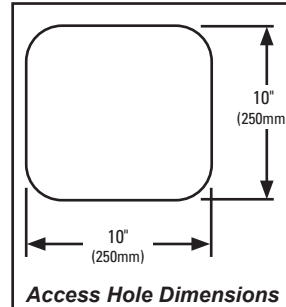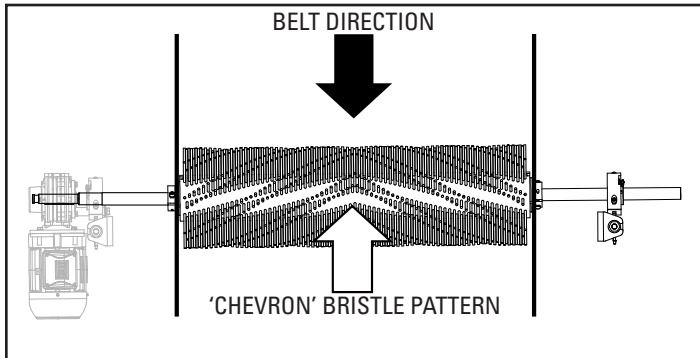

Section 4 - Installation Instructions - Belt Driven Brush Cleaner


1

Install Drop Brackets. Measure from a fixed point on both sides of the conveyor to establish alignment and ensure the brackets are plumb to one another

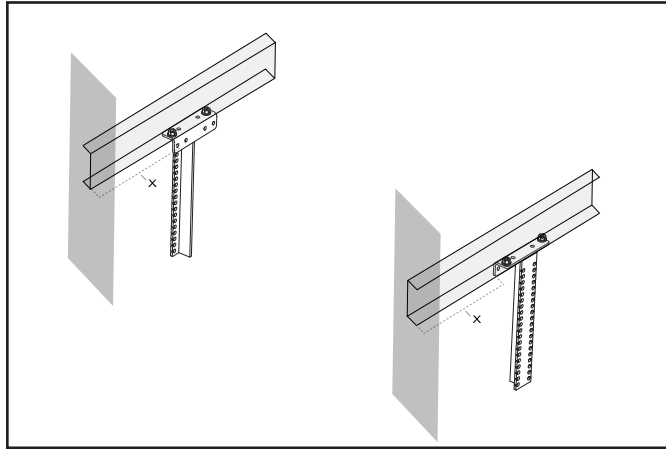


2

Assemble spacers onto mounting brackets and attach mounting brackets to drop brackets. Line up mounting bracket such that the top of the bracket is approximately 1.75" (45mm) below the belt line. The mounting brackets may be installed so that the spacer is into or away from the belt direction. The brush will pivot into the belt toward the side with the spacer.

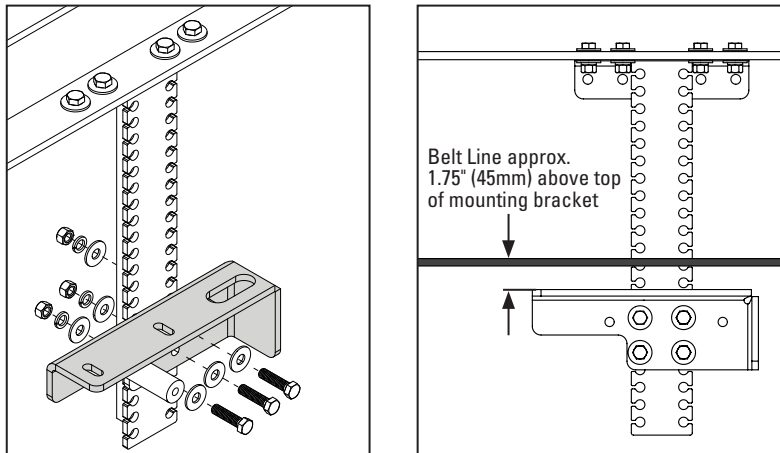

3


Install Drop Brackets. Measure from a fixed point on both sides of the conveyor to establish alignment and ensure the brackets are plumb to one another

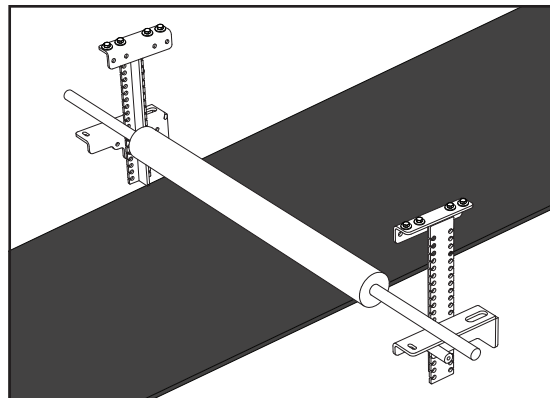

Section 4 - Installation Instructions - Belt Driven Brush Cleaner


4-1

Install pillow block bearings onto drive roller, ensuring the set screw are facing out for easy adjustment later. Tighten bolts to mounting bracket

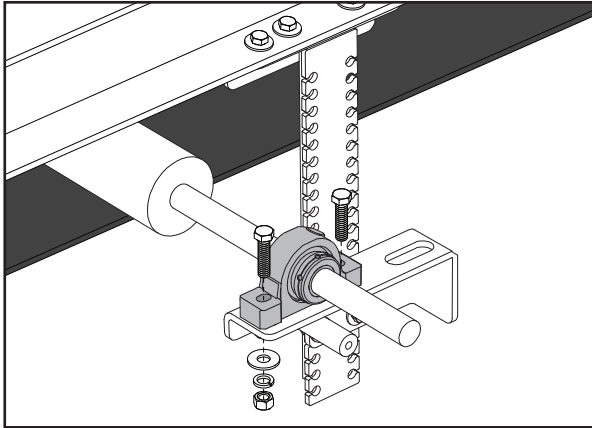


4-2

NOTE: Ensure the drive roller is making full contact with the belt. Adjust the bracket/bearing/roller assembly downward until the drive roller has full contact.

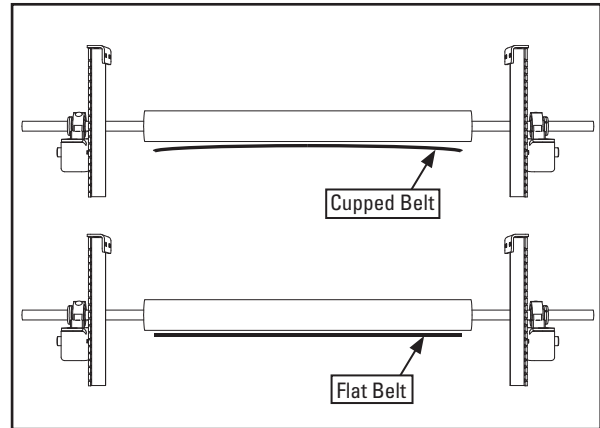


5

Slide shaft left/right until centered with the belt, ensuring the shaft on the drive side overhangs the bearing by 7" (175mm) or more to provide room for bearing/drive system. Tighten bearing set screws.

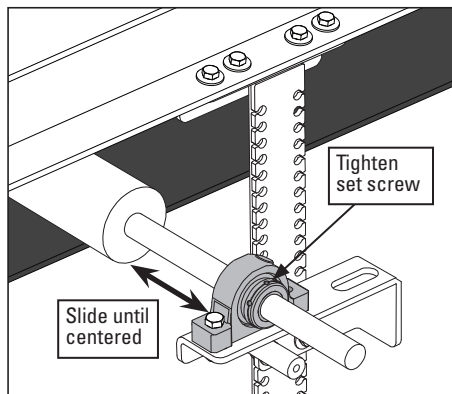

6


Slightly loosen the cleaner main bearing nuts (17mm socket) each side.

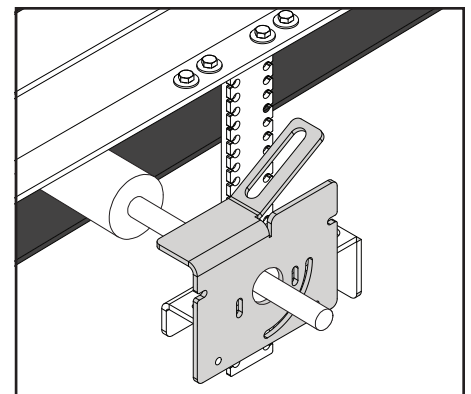

7

Install upper bearing assemblies onto both drive roller shaft ends


Hardware used:
 (4) 1/2-13 x 2" Hex Head Bolt
 (4) 1/2-13 Hex Nut
 (4) 1/2" Lock Washer
 (8) 1/2" Flat Washer

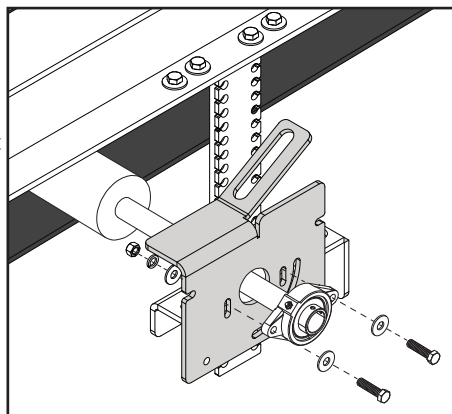

8

Install bottom plates and slide brush drum, shaft, and lock assembly to rest inside of the slot


Hardware used:
 (4) 1/2-13 x 1.5" Hex Head Bolt
 (4) 1/2" Lock Washer
 (4) 1/2" Flat Washer
 (4) 3/8-16 x 1.5" Socket Head Screw
 (4) 3/8" Flat Washer

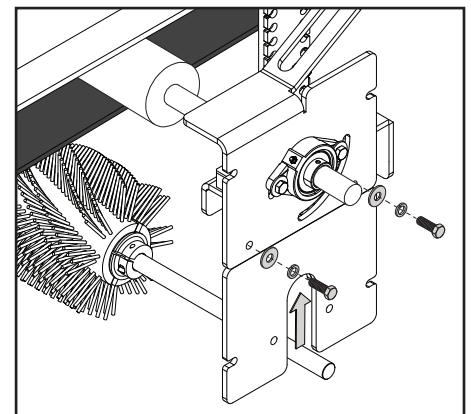

Section 4 - Installation Instructions - Belt Driven Brush Cleaner

9

Install lower bearing assembly to brush shaft

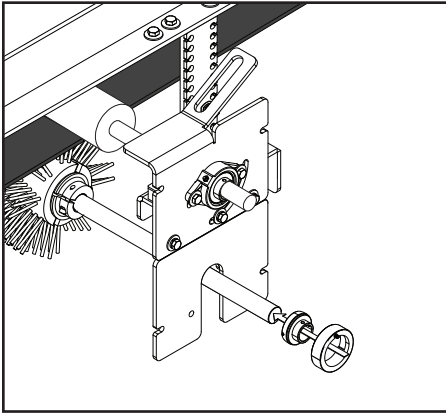


10

Install bottom collars on lower bearings. Rotate both bearings such that each zerk fitting is oriented with the precut notch in the collar

Hardware used:

- (4) 1/2-13 x 2" Hex Head Bolt
- (4) 1/2-13 Hex Nut
- (4) 1/2" Lock Washer
- (8) 1/2" Flat Washer
- (4) 3/8-16 x 1.5" Socket Head Screw
- (4) 3/8" Lock Washer

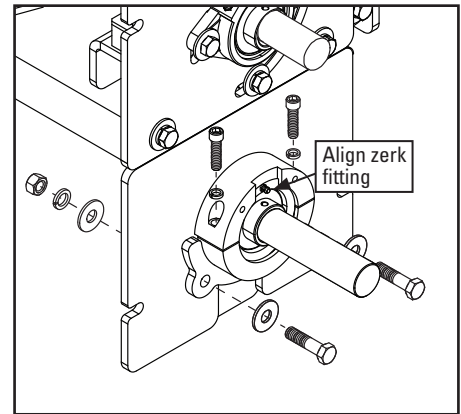


11

Install adjusting rod on both sides of cleaner.


Hardware used:

- (4) 1/2-13 x 1.25" Hex Head Bolt
- (4) 1/2" Lock Washer
- (4) 1/2" Flat Washer
- (8) 1-5" ACME Hex Nut
- (4) 1" Flat Washer

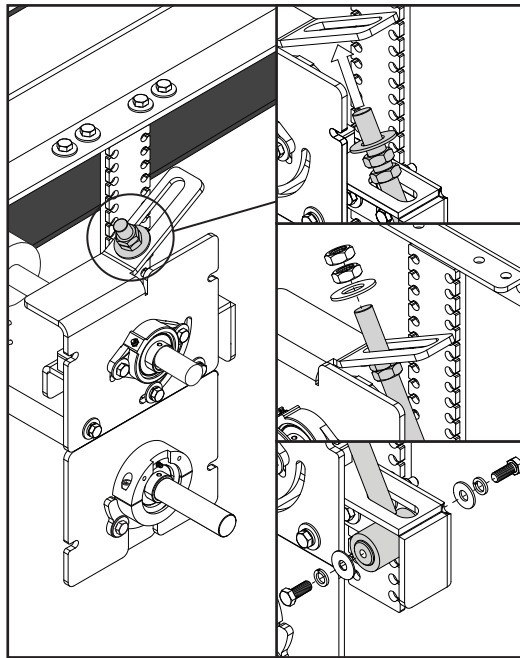

12


Tighten the set screws on upper and lower bearings.

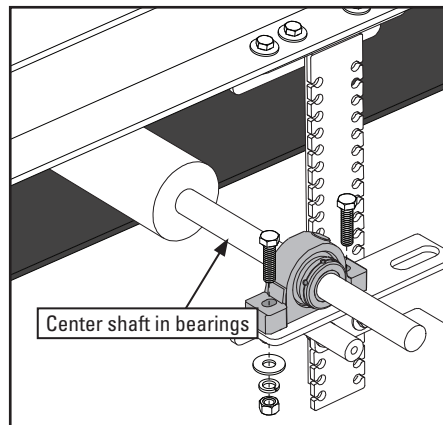

Section 4 - Installation Instructions - Belt Driven Brush Cleaner


13-1

Center brush to the belt, ensuring that the pins of both brush locks are firmly inserted into the notches of the brush.

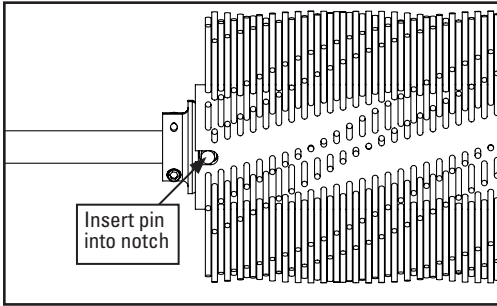


13-2

Once the brush is aligned, fasten one brush lock to the shaft using the brush lock screws. Seat the brush lock pins into the brush notches while fastening the second brush lock onto the shaft.

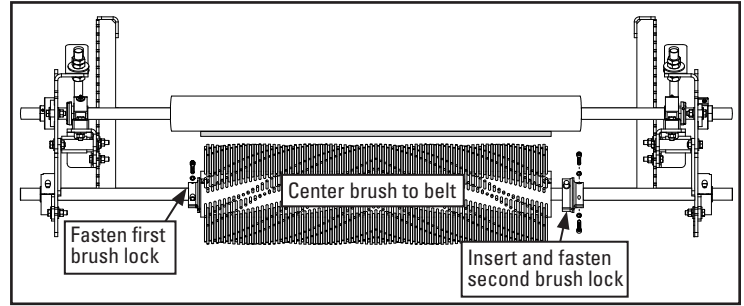


14

Install quick-disconnect bushings and drive pulley. Put QD bushing/small pulley on drive shaft (roller) using hardware included with QD bushing. Then line up the QD bushing/drive pulley to match, using level or alignment tool to assist

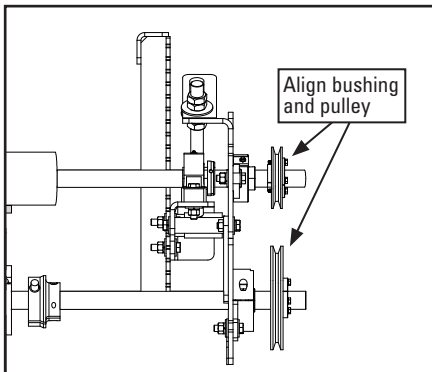


15

Install V-belt. If necessary, loosen the bolts on the top flange bearing to lower the bearing in the slots, allowing for easier V-belt installation. **Ensure that the V-belt is correct by sliding the bearings as far apart as possible after installation.**

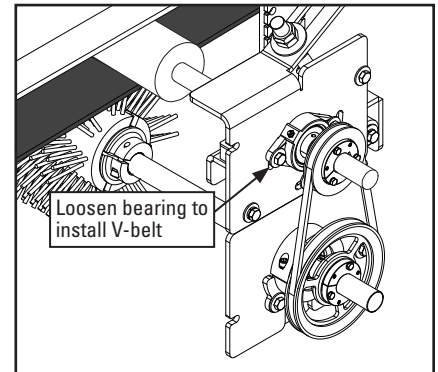

16

Tighten all hardware. Adjust each threaded adjustment rod until there is a 3" (75mm) gap between the belt and the brush drum. Tighten the rod locking nuts and spacer guide bolts to secure the brush in place.

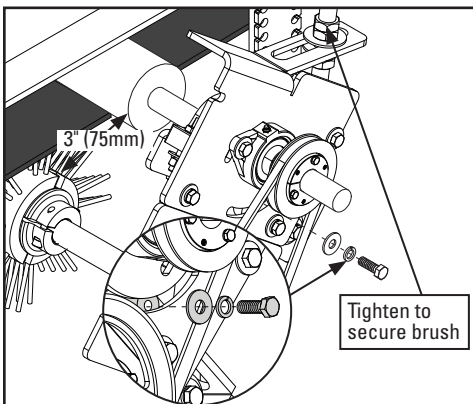


17

Ensure that rod locking nuts and spacer guide bolts are firmly tightened, then install drive guards.

Hardware used:

- (8) ½-13 x 1.5" Hex Head Bolt
- (8) ½-13 Hex Nut
- (8) ½" Lock Washer
- (16) ½" Flat Washer

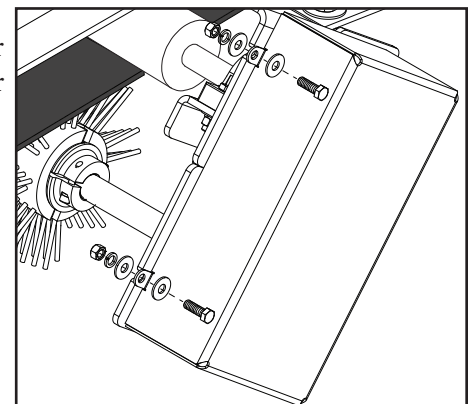

Section 5 - Pre-Operation Checklist and Testing

5.1 Pre-Op Checklist

- Recheck that all fasteners are tightened properly
- Apply all supplied labels to the cleaner
- Check the drum location on the belt
- Be sure that all installation materials and tools have been removed from the belt and the conveyor area

5.2 Test Run the Conveyor

- Run the conveyor for at least 15 minutes and inspect the cleaning performance
- Check the drum and bristles for proper tensioning
- Make adjustments as necessary

Initial troubleshooting:

1. If neither brush or hold-down roller are turning: Reduce brush interference with the belt. If the brush is not contacting the belt, then move the cleaner down to improve belt wrap and pressure on the conveyor belt.
2. If the hold-down roller is turning, but not the brush: First ensure the V-belt is properly tensioned with the top flange bearing as high in the slots as possible. Second, if the V-belt is tensioned properly then reduce the interference of the brush on the conveyor belt.

NOTE: Observing the cleaner when it is running and performing properly will help to detect problems or when adjustments are needed later.

Section 6 - Maintenance

Flexco belt cleaners are designed to operate with minimum maintenance. However, to maintain superior performance some service is required. When the cleaner is installed a regular maintenance program should be set up. This program will ensure that the cleaner operates at optimal efficiency and problems can be identified and fixed before the cleaner stops working.

All safety procedures for inspection of equipment (stationary or operating) must be observed. The Belt Driven Brush Cleaner operates at the discharge end of the conveyor and is in direct contact with the moving belt. Only visual observations can be made while the belt is running. Service tasks can be done only with the conveyor stopped and by observing the correct lockout/tagout procedures.

6.1 New Installation Inspection

After the new cleaner has run for a few days a visual inspection should be made to ensure the cleaner is performing properly. Make adjustments as needed.

6.2 Routine Visual Inspection (every 2-4 weeks)

A visual inspection of the cleaner and belt should look for:

- If belt looks clean or if there are areas that are dirty
- If cleaner is worn out and needs to be replaced
- If there is damage to the cleaner or other cleaner components
- If fugitive material is built up on cleaner or in the transfer area
- If there is cover damage to the belt
- If a snub pulley is used, a check should be made for material buildup on the pulley
- Significant signs of carryback
- If any of the above conditions exist, a determination should be made on when the conveyor can be stopped for cleaner maintenance.

6.3 Routine Physical Inspection (every 6-8 weeks)

When the conveyor is not in operation and properly locked and tagged out, a physical inspection of the cleaner to perform the following tasks:

- Clean material buildup off of the cleaner
- Closely inspect the cleaner for wear and any damage. Replace if needed.
- Ensure full cleaner to belt contact
- Inspect the cleaner for damage
- Inspect all fasteners for tightness and wear. Tighten or replace as needed.
- Grease bearings
- Replace any worn or damaged components

Relube bearings with lithium complex base grease per table below

Lubrication Schedule - Period in Weeks


Belt Speed (fpm)	100	200	300	400	500	600	700
8 Hours Run per Day	12	12	12	10	10	7	7
16 Hours Run per Day	12	7	7	5	5	4	4
24 Hours Run per Day	10	5	5	3	3	2	2

Use a No. 2 Lithium complex base grease or equivalent

- When maintenance tasks are completed, test run the conveyor to ensure the cleaner is performing properly.

Section 6 - Maintenance

6.4 Brush Replacement Instructions

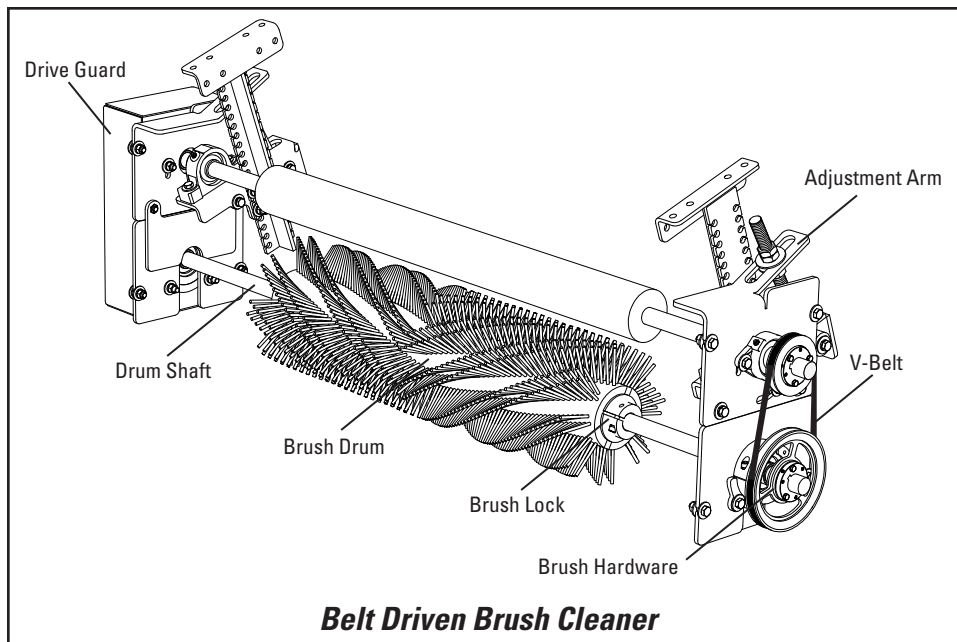


Tools Needed

- Impact Driver
- 3/4" (19mm) Impact Socket
- 3/4" (19mm) Combination Wrench
- 5/16" (8mm) Allen Wrench
- 7/16" (11mm) Combination Wrench or Impact Socket

PHYSICALLY LOCK OUT AND TAG THE CONVEYOR AT THE POWER SOURCE BEFORE YOU BEGIN BRUSH REPLACEMENT.


1

Remove Drive Guards. Where practical, plan to extract brush from the non-drive side.

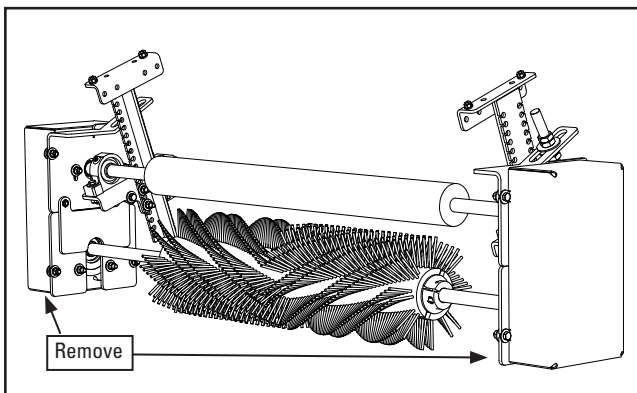

2

Remove tension completely to create room for the replacement brush by loosening locking bolt and threading the nuts on the tension rod to the farthest point

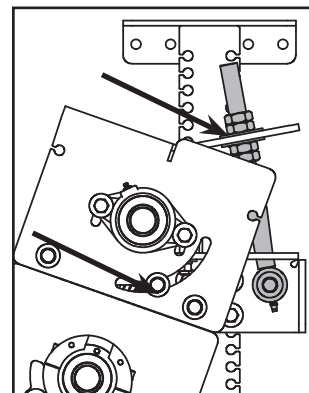


Section 6 - Maintenance

6.4 Brush Replacement Instructions


3-1

Remove bottom collar from Brush Bearing.

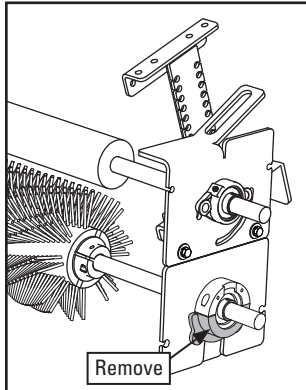

3-2

Remove the bottom plate to extract the worn brush

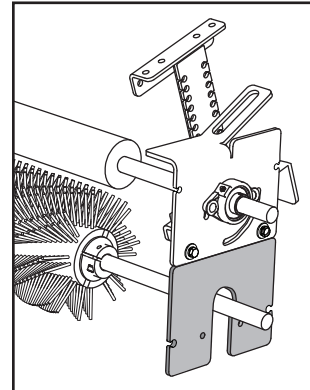

4

Remove brush locks and slide the worn brush out and over the bearings. Slide new brush over the bearings and onto the shaft, sliding it to the same center location. Re-install brush locks

5



Re-install bottom plate and collar for the Brush Bearing, ensuring that the zerk fitting is located at the bottom of the collar in the notch.

6

Tension brush to the belt. Adjust the threaded rod until there is a 3" (75mm) gap between the belt and the brush drum. Tighten locking nut and the guide bolt (between the two shafts). **Tighten all hardware.**

7

Install drive guards.

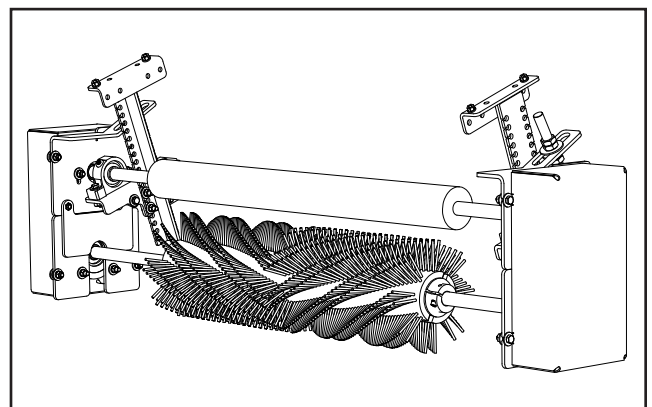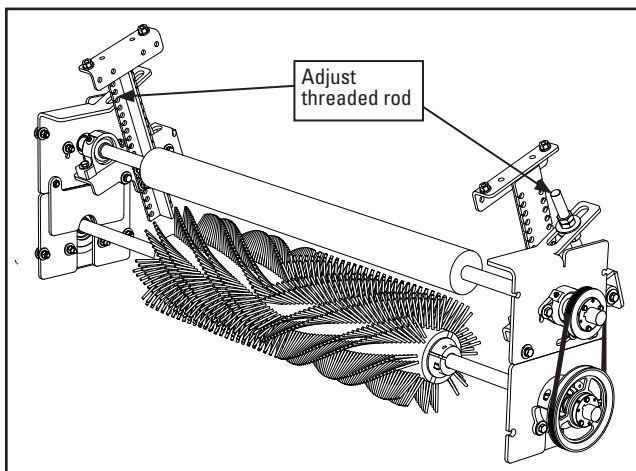

Section 6 - Maintenance

6.5 Maintenance Log

Conveyor Name/No. _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ – _____ Work done by: _____ Service Quote #: _____

Activity: _____

Section 6 - Maintenance

6.6 Cleaner Maintenance Checklist

Belt Cleaner: _____ **Serial Number:** _____

Beltline Information:

Beltline Number: _____ Belt Condition: _____

Belt Width: 24" 30" 36" 42" 48" 54" 60" 72"
 (600mm) (750mm) (900mm) (1050mm) (1200mm) (1350mm) (1500mm) (1800mm)

Head Pulley Diameter (Belt & Lagging): _____ Belt Speed: _____ fpm Belt Thickness: _____

Belt Splice: _____ Condition of Splice: _____ Number of Splices: _____ Skived Unskived

Material conveyed: _____

Days per week run: _____ Hours per day run: _____

Drum Life:

Date installed: _____ Date inspected: _____ Estimated life: _____

Is cleaner making complete contact with belt? Yes No

Drum condition: Good Not contacting belt Damaged

Was Cleaner Adjusted: Yes No

Shaft Condition: Good Bent Worn

Lagging: Side Lag Ceramic Rubber Other None

Condition of lagging: Good Bad Other _____

Cleaner's Overall Performance: (Rate the following 1 - 5, 1= very poor - 5 = very good)

Appearance: Comments: _____

Location: Comments: _____

Maintenance: Comments: _____

Performance: Comments: _____

Other comments _____



Section 7 - Troubleshooting




Problem	Possible Cause	Possible Solutions
Vibration	Cleaner secure bolts not set	Ensure all locking nuts are tight (Loctite)
	Cleaner not set up correctly	Ensure cleaner set up properly
	Belt tension too high	Ensure cleaner can conform to belt, or replace with alternate Flexco secondary cleaner
	Belt flap	Introduce hold-down roller to flatten belt
	Cleaner over-tensioned	Ensure cleaner is correctly tensioned
	Cleaner under-tensioned	Ensure cleaner is correctly tensioned
Material buildup on cleaner	Cleaner not set up correctly	Ensure cleaner set up properly
	Buildup on chute	Ensure cleaner is not located too close to back of chute, allowing buildup
	Cleaner being overburdened	Introduce Flexco precleaner (if not a chevron belt)
	Excessive sticky material	Frequently clean unit of buildup
Damaged belt cover	Cleaner over-tensioned	Ensure cleaner is correctly tensioned
	Cleaner bristles damaged	Check bristles for wear, damage and chips, replace where necessary
	Material buildup in chute	Frequently clean unit of buildup
Cleaner not conforming to belt	Cleaner not set up correctly	Ensure cleaner set up properly
	Belt tension too high	Ensure cleaner can conform to belt, or replace with alternate Flexco secondary cleaner
	Belt flap	Introduce hold-down roller to flatten belt
	Cleaner cannot conform	Ensure cleaner can conform to belt, or replace with alternate Flexco secondary cleaner
Material passing cleaner	Cleaner not set up correctly	Ensure cleaner set up properly
	Cleaner tension too low	Ensure cleaner is correctly tensioned
	Cleaner bristles worn/damaged	Check bristles for wear, damage and chips, replace where necessary
	Cleaner being overburdened	Introduce Flexco precleaner
	Belt flap	Introduce hold-down roller to flatten belt
	Cleaner cannot conform	Ensure cleaner can conform to belt, or replace with alternate Flexco secondary cleaner
Missing material in belt center only	Cleaner shaft located too high	Ensure cleaner set up properly
	Cleaner bristles worn/damaged	Check bristles for wear, damage and chips, replace where necessary
Missing material on outer edges only	Cleaner shaft located too low	Ensure cleaner set up properly
	Cleaner bristles worn/damaged	Check bristles for wear, damage and chips, replace where necessary

Section 8 - Specs and CAD Drawings

8.1 Specs and Guidelines

Specifications

Belt Speed	Up to 700 fpm (3.5 m/s)
Vertical Clearance	24.5" (622mm)
Horizontal Clearance	28.38" (720mm)
Temperature Range	-20°F to 180°F (-30°C to 82°C)
Maximum Chevron or Cleat Height	1/2" (13mm)
Bristle Length	3-1/4" (83mm)
Overall Diameter	12" (305mm)
Shaft Length (Brush and Roller)	Belt Width plus 42" (1067mm)
Shaft Diameter	1" (25mm)
CEMA Cleaner Rating	Class 4

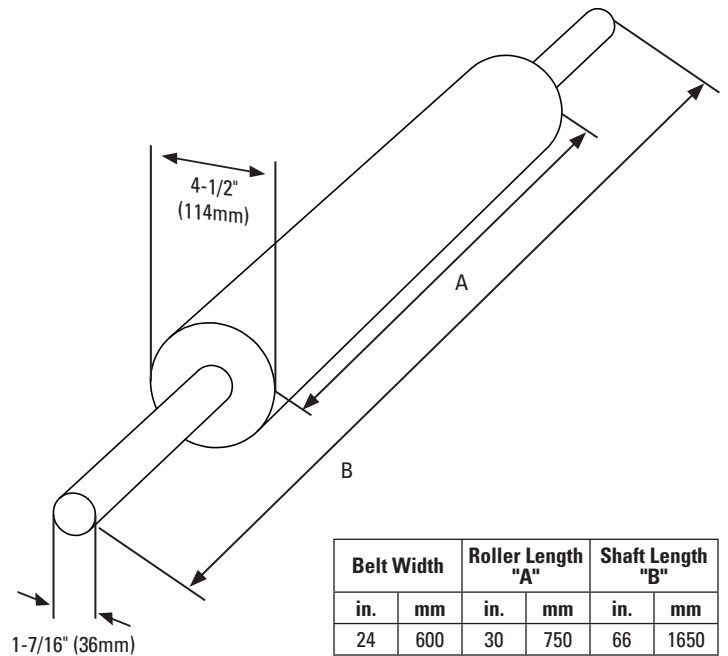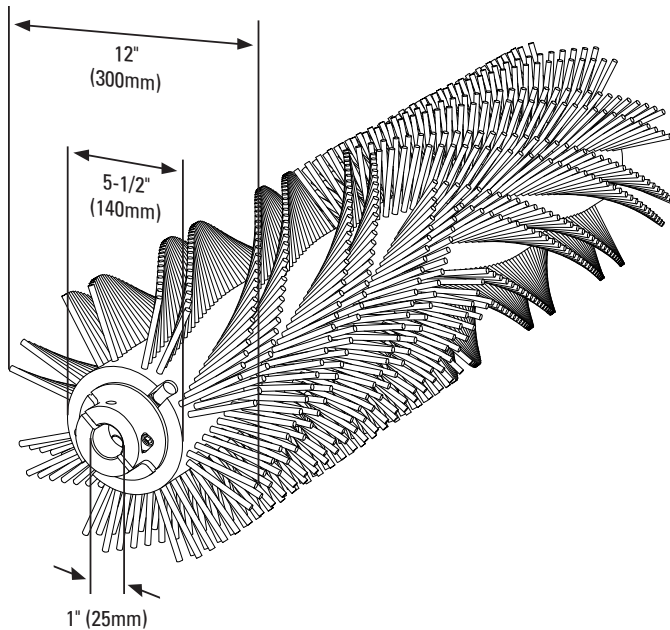
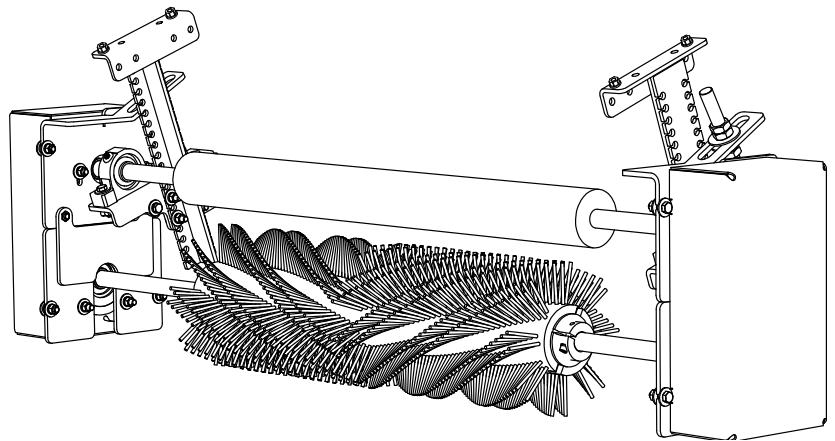


Belt Width		Roller Length "A"		Shaft Length "B"	
in.	mm	in.	mm	in.	mm
24	600	30	750	66	1650
30	750	36	900	72	1800
36	900	42	1050	78	1950
42	1050	48	1200	84	2100
48	1200	54	1350	90	2250
54	1350	60	1500	96	2400
60	1500	66	1650	102	2550
72	1800	78	1950	114	2850

Section 8 - Specs and CAD Drawings


8.1 CAD Drawing

Belt Width "A"		Shaft Length "B"		Item Code
in.	mm	in.	mm	
30	750	66	1650	BD8C-24
36	900	72	1800	BD8C-30
42	1050	78	1950	BD8C-36
48	1200	84	2100	BD8C-42
44	1350	90	2250	BD8C-48
60	1500	96	2400	BD8C-54
66	1650	102	2550	BD8C-60
78	1950	114	2850	BD8C-72

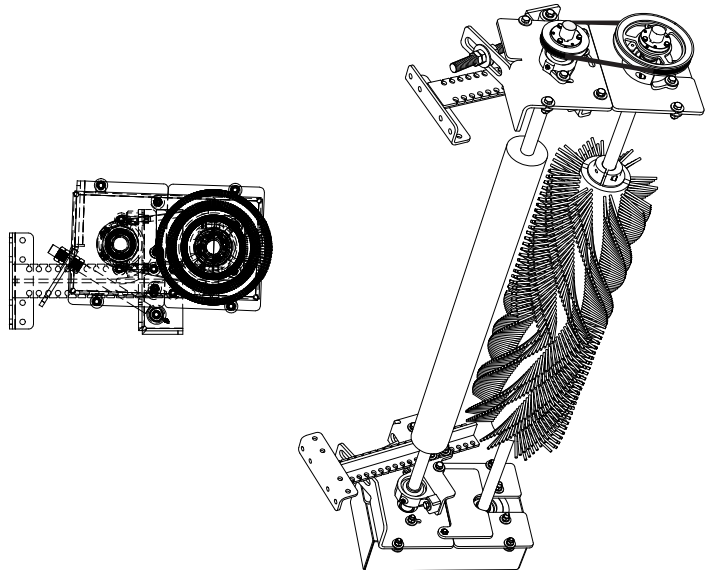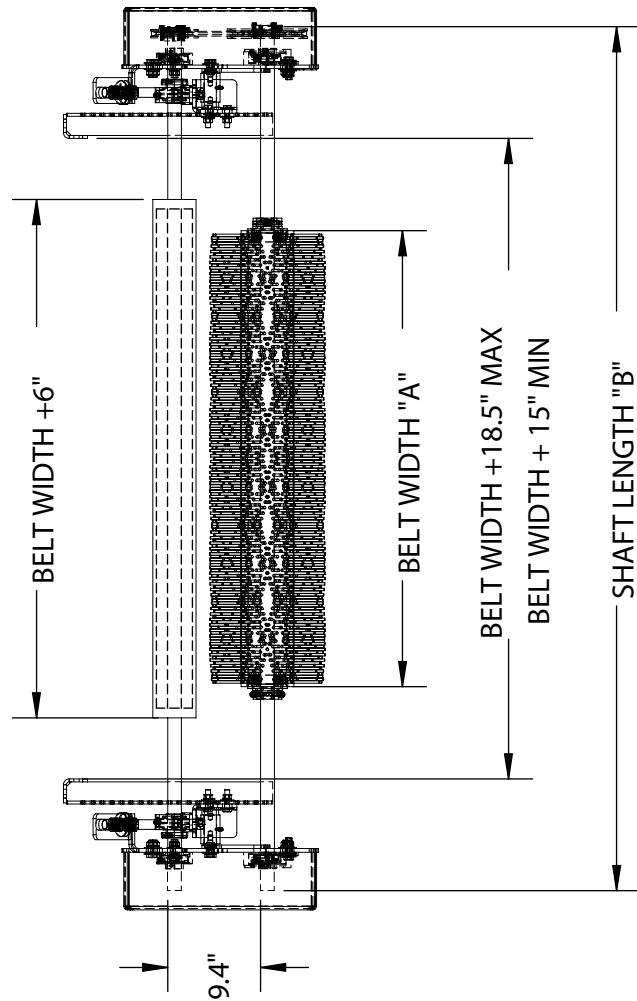

Section 9 - Replacement Parts

9.1 Replacement Parts List

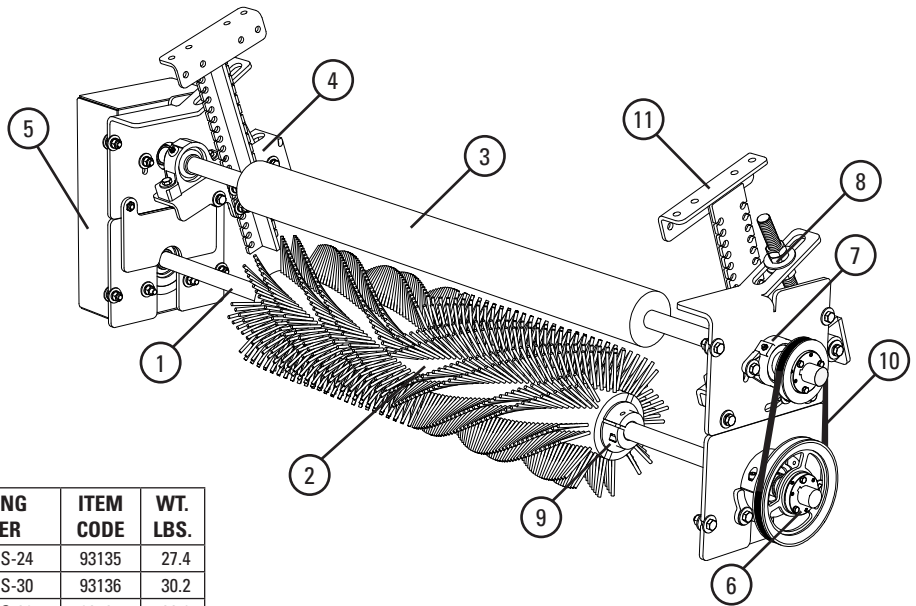

Replacement Parts

REF	DESCRIPTION	ORDERING NUMBER	ITEM CODE	WT. LBS.
1	18" (450mm) Brush Drum Shaft	BDBCR-BS-24	93135	27.4
	24" (600mm) Brush Drum Shaft	BDBCR-BS-30	93136	30.2
	30" (750mm) Brush Drum Shaft	BDBCR-BS-36	93137	32.9
	36" (900mm) Brush Drum Shaft	BDBCR-BS-42	93138	35.7
	42" (1050mm) Brush Drum Shaft	BDBCR-BS-48	93139	38.4
	48" (1200mm) Brush Drum Shaft	BDBCR-BS-54	93140	41.2
	54" (1350mm) Brush Drum Shaft	BDBCR-BS-60	93141	43.9
2	60" (1500mm) Brush Drum Shaft	BDBCR-BS-72	93142	46.6
	24" (600mm) Replacement Brush Drum	MBRD-24	79515	13.5
	30" (750mm) Replacement Brush Drum	MBRD-30	79516	17.1
	36" (900mm) Replacement Brush Drum	MBRD-36	79517	20.5
	42" (1050mm) Replacement Brush Drum	MBRD-42	79518	23.7
	48" (1200mm) Replacement Brush Drum	MBRD-48	79519	26.8
	54" (1350mm) Replacement Brush Drum	MBRD-54	79520	30.7
3	60" (1500mm) Replacement Brush Drum	MBRD-60	79521	33.9
	72" (1800mm) Replacement Brush Drum	MBRD-72	79522	41.0
	24" (600mm) Replacement Roller	BDBCR-HDR-24	93127	79.5
	30" (750mm) Replacement Roller	BDBCR-HDR-30	93128	91.0
	36" (900mm) Replacement Roller	BDBCR-HDR-36	93129	102.6
	42" (1050mm) Replacement Roller	BDBCR-HDR-42	93130	113.3
	48" (1200mm) Replacement Roller	BDBCR-HDR-48	93131	124.7
4	54" (1350mm) Replacement Roller	BDBCR-HDR-54	93132	136.2
	60" (1500mm) Replacement Roller	BDBCR-HDR-60	93133	147.6
	72" (1800mm) Replacement Roller	BDBCR-HDR-72	93134	170.5
	Support Spacer Kit	BDBDR-SPACER	93370	1.7
5	Drive Guard Kit	BDBDR-GUARD	93371	20.6
6	Brush Shaft Bearing/Drive Hardware	BDBCR-B-HW	93372	8.0
7	Roller Shaft Bearing/Drive Hardware	BDBCR-R-HW	93373	23.3
8	Adjustment Arm Kit	BDBCR-ADJARM	93374	8.5
9	Brush Lock Kit	MBCBL	79532	1.5
10	Replacment V-Belt	BDBCR-VBELT	93376	0.3
11	Brush Cleaner Drop Brackets* (2)	MBCDBK	79536	28.9

*Hardware included.

Section 10 - Other Flexco Conveyor Products

Flexco provides many conveyor products that help your conveyors to run more efficiently and safely. These components solve typical conveyor problems and improve productivity. Here is a quick overview on just a few of them:

MMP Precleaner




- Extra cleaning power right on the head pulley
- A 10" (250mm) TuffShear™ blade provides increased blade tension on the belt to peel off abrasive materials
- The unique Visual Tension Check™ ensures optimal blade tensioning and quick, accurate retensioning
- Easy to install and simple to service

DRX Impact Beds



- Exclusive Velocity Reduction Technology™ to better protect the belt
- Slide-Out Service™ gives direct access to all impact bars for change-out
- Impact bar supports for longer bar life
- Four models to custom fit to the application

MHS Secondary Cleaner with Service Advantage Cartridge

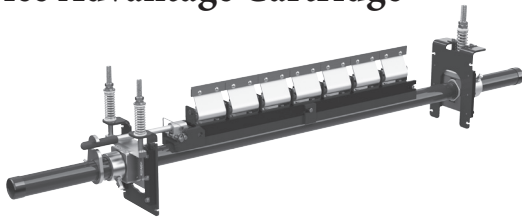

- An easy slide-out cartridge for service
- Cartridge design to speed up blade-change maintenance
- Patented PowerFlex™ Cushions for superior cleaning performance
- Compatible with Flexco mechanical splices

PT Max™ Belt Trainer



- Patented “pivot & tilt” design for superior training action
- Dual sensor rollers on each side to minimize belt damage
- Pivot point guaranteed not to seize or freeze up
- Available for topside and return side belts

Flexco Specialty Belt Cleaners



- “Limited space” cleaners for tight conveyor applications
- High Temp cleaners for severe, high heat applications
- Multiple cleaner styles in stainless steel for corrosive applications

Belt Plows



- A belt cleaner for the tail pulley
- Exclusive blade design quickly spirals debris off the belt
- Economical and easy to service
- Available in vee or diagonal models

Visit www.flexco.com for other Flexco locations and products, or to find an authorized distributor.

©2023 Flexible Steel Lacing Company. 02-10-25. X6484

