



Turtle® Rip Repair Fasteners


For Temporary Repair of Tears or Longitudinal Belt Rips
 (NOT for use in joining the ends of conveyor or transmission belts)

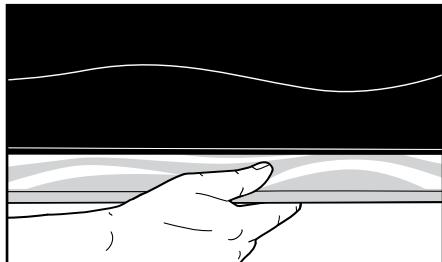


1. Place a wood support under belt where rip is to be repaired. Do not install Turtle® fasteners using the conveyor pulley or other metal surface as support, as fastener teeth would not be properly cinched.

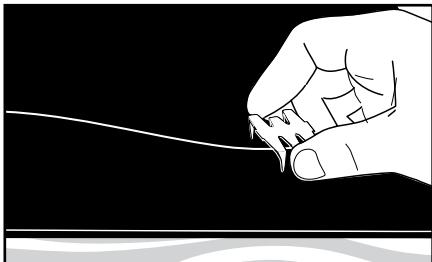

2. While holding ripped edges together place plates 4-6° apart with the fastener straddling both sides of the rip. A Turtle fastener may also be used at the end of a rip to prevent continued tearing.

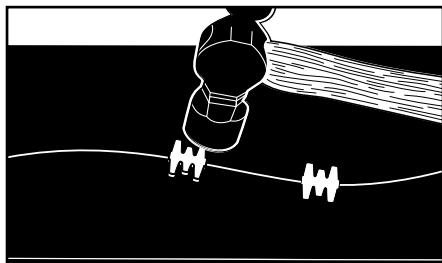

3. Drive fastener teeth into the belt and supporting board with a hammer. Avoid hitting the center of the plate.

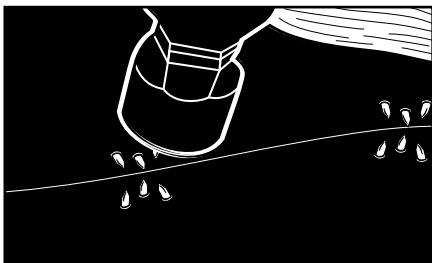

4. After plates are driven, cinch teeth from underside, inward toward rip.
 NOTE: When fastener teeth are cinched, **do not continue to hammer**—excessive hammering will weaken the repair.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
 Tel: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com


Visit www.flexco.com for other Flexco locations and products.

©2012 Flexible Steel Lacing Company. Turtle® is a registered trademark. 12-13.
 For Reorder: X0060




Turtle® Rip Repair Fasteners


For Temporary Repair of Tears or Longitudinal Belt Rips
 (NOT for use in joining the ends of conveyor or transmission belts)

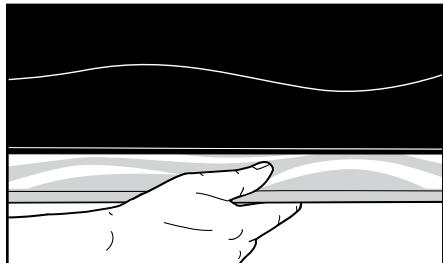


1. Place a wood support under belt where rip is to be repaired. Do not install Turtle® fasteners using the conveyor pulley or other metal surface as support, as fastener teeth would not be properly cinched.

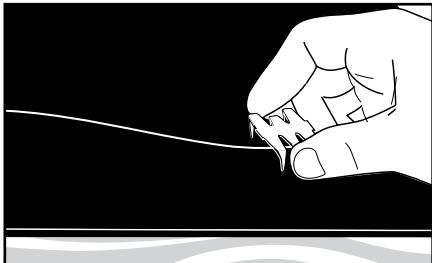

2. While holding ripped edges together place plates 4-6° apart with the fastener straddling both sides of the rip. A Turtle fastener may also be used at the end of a rip to prevent continued tearing.

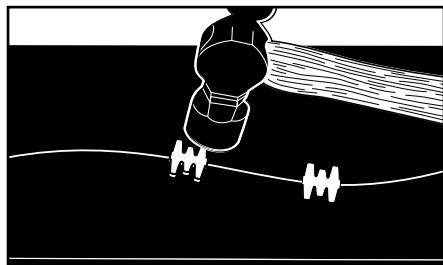

3. Drive fastener teeth into the belt and supporting board with a hammer. Avoid hitting the center of the plate.

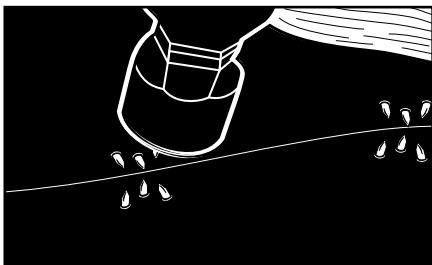

4. After plates are driven, cinch teeth from underside, inward toward rip.
 NOTE: When fastener teeth are cinched, **do not continue to hammer**—excessive hammering will weaken the repair.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
 Tel: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2012 Flexible Steel Lacing Company. Turtle® is a registered trademark. 12-13.
 For Reorder: X0060

