


TATCH-A-CLEAT®

Tatch-A-Cleat® Tatch-A-Guide® Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

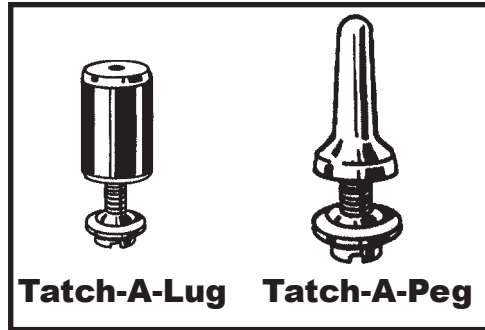

INSTRUCTIONS:

1. Punch 1/4" hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2017 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 01/25/17. X4045




TATCH-A-CLEAT®

Tatch-A-Cleat® Tatch-A-Guide® Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

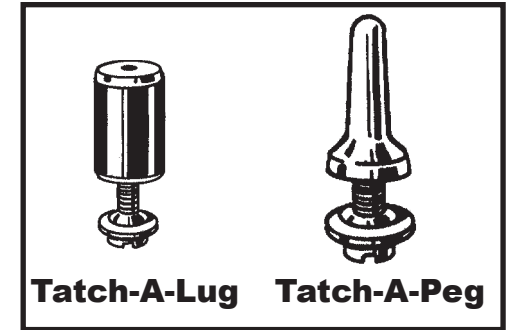

INSTRUCTIONS:

1. Punch 1/4" hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2017 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 01/25/17. X4045

