

Pun M™ NDX Mobile Finger Punch

Cam Roller Bearing Upgrade Kit Instructions

General Information

Pun M NDX 114: Item Code 104639

Pun M NDX 200: Item Code 104640

Tools Needed:


4mm Hex Key

5mm Hex Key

Large Pliers

Rubber Mallet (optional)


Cam Roller Bearing Upgrade Kit

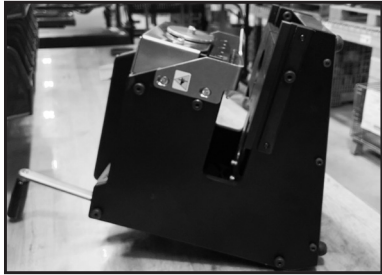

Step 1. Lock crank handle in the up position and lay punch on its back.



Step 2a. Remove cam guard cover.

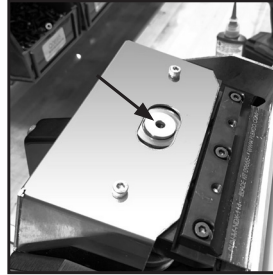

Step 2b. Remove bearing spacer.



Step 3. Remove the two fasteners on the cover plate. Save for reuse. Remove cover plate.



Step 4. Remove bearing (pliers may be required).




Step 5. If necessary, replace cover plate spacers on either side of blade holder assembly.



Step 6. Install new bearing (rubber mallet may be required).



Step 7. Install new cover plate. Secure with the two fasteners removed in Step 3.

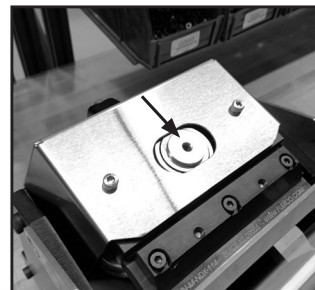

Step 8. Install new bearing spacer. Install cam guard cover over bearing spacer, securing with one fastener. Return Pun M NDX to upright position.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2022 Flexible Steel Lacing Company. 08/05/22. For reorder: 104030

