



FSK™ Power Belt Skiver (FSK2MP)


Right Angle Clamp and Drill Adapter Replacement Kit

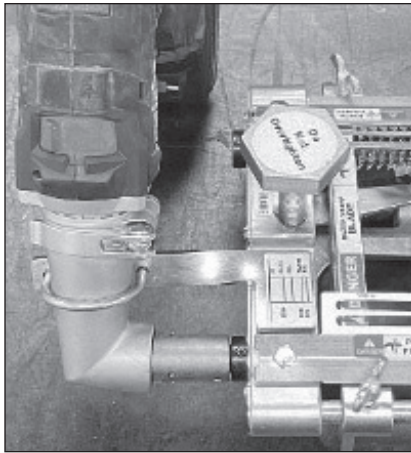


Skiver with original parts.

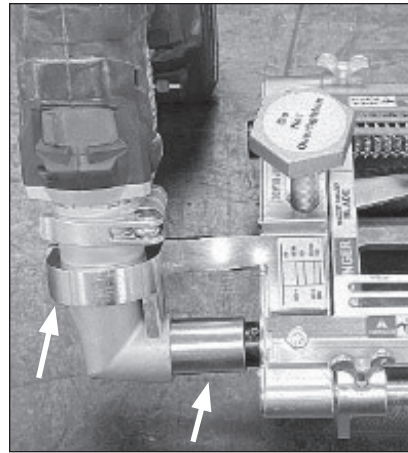

Skiver after replacement parts.

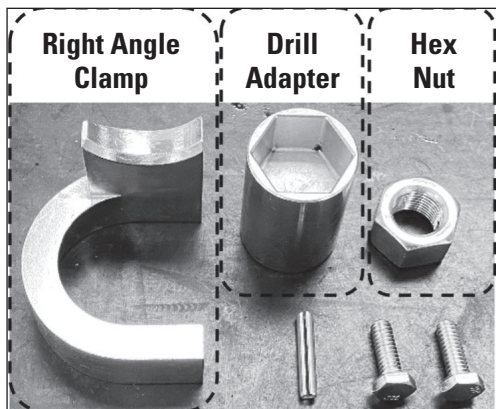

106652 FSK2MP-MUK

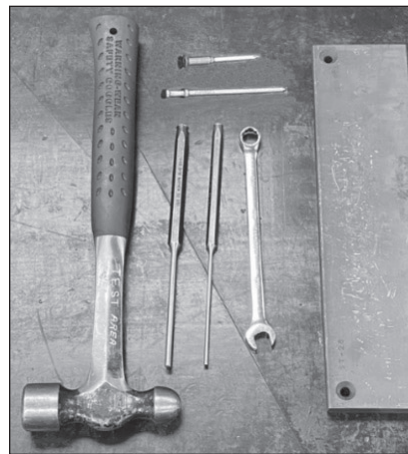

Tools Required

Hammer, Drive Punches or Rivet and Duplex Nail, 7/16 Wrench, Flat Steel Plate or Vice (optional).




1. Position spring pins upright, then remove the battery.




2. Drive the two small spring pins out with punch or rivet.




3. Drive the large spring pin out with punch or duplex nail.

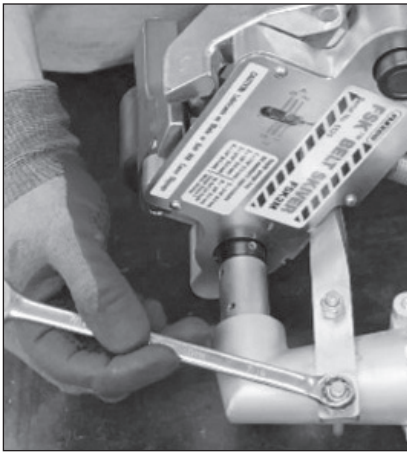


4. Remove the two hex nuts and U-bolt.

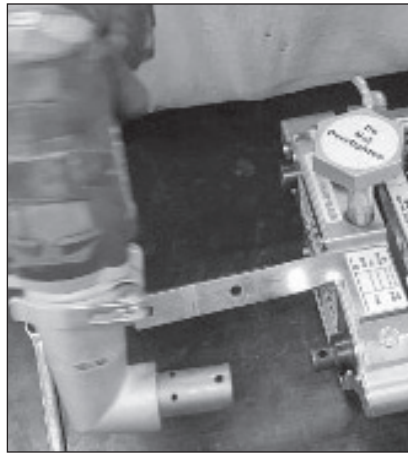


5. Detach the drill from skiver

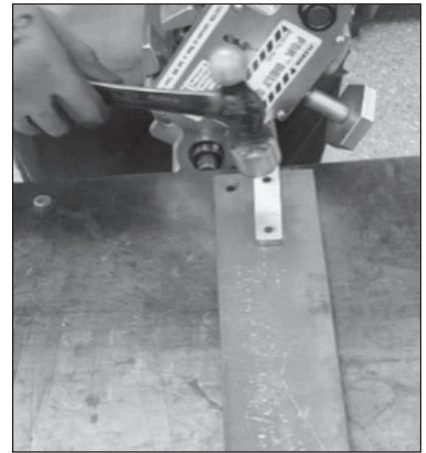


6. Straighten the mounting bracket.

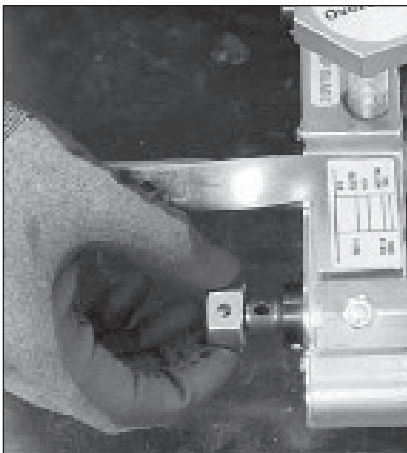

7. Attach the hex nut and make sure the holes align.

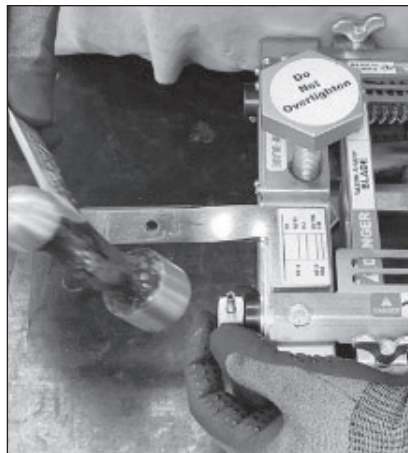


8. Insert the new spring pin.

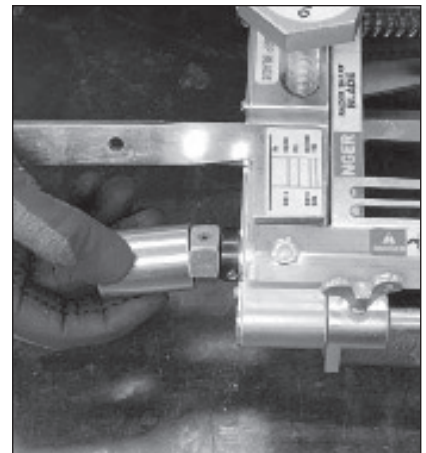

9. Attach the new drill adapter.



10. Remove the old drill adapter and attach the drill to the new adapter.

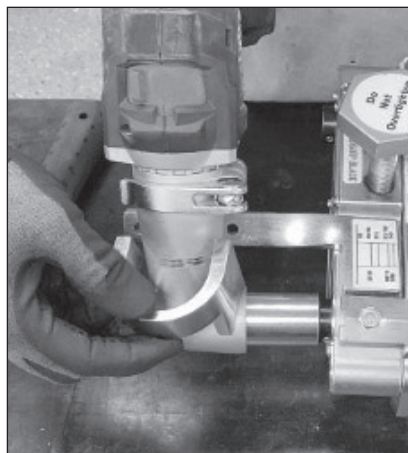

11. Attach the new right angle clamp and the hex bolts.



12. HAND tighten the hex bolts securely with the 7/16 wrench.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
Telephone: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2023 Flexible Steel Lacing Company. Flexco® are registered trademarks. 01-04-23. For Reference: 106676

