



# FGP-ES WIDE V BRACKET KIT

## Instructions for Installation


Reference Food Grade Secondary Cleaner IOM (X6380) or Food Grade Primary Cleaner with External Spring IOM (103689) for full installation details. This sheet is intended to guide the installation of the optional wide V mounting bracket (111386).

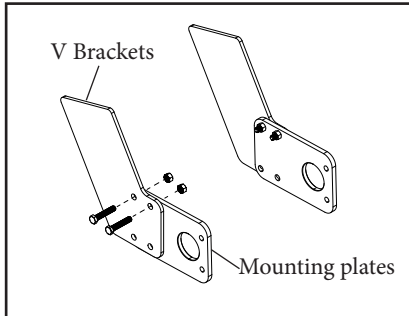


1. Bolt or clamp wide V brackets to the mounting plates included with the cleaner assembly.

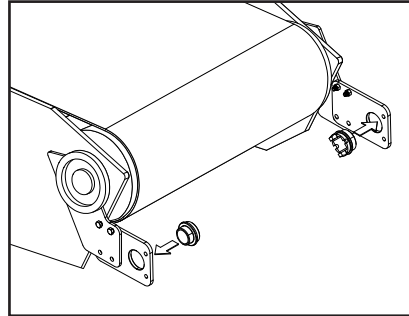


2. Position V bracket on conveyor structure so that the shaft hole of the mounting plates meets the X, Y, and C dimensions, per the cleaner IOM. Trim brackets as necessary, then temporarily clamp brackets to conveyor structure. This will allow for future adjustments.

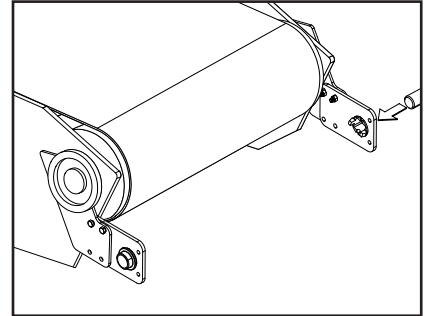


3. Test fit cleaner without blade. Pole should be parallel to the pulley.

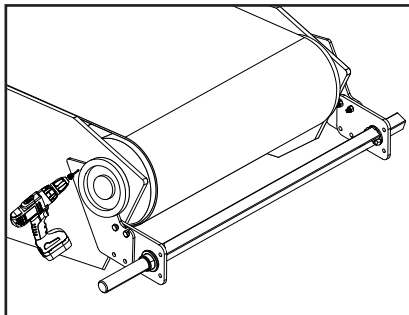

4. If the pole is in the correct position, bolt or weld V brackets to each side of the conveyor. **NOTE:** When bolting, at least two bolts must be used per side.

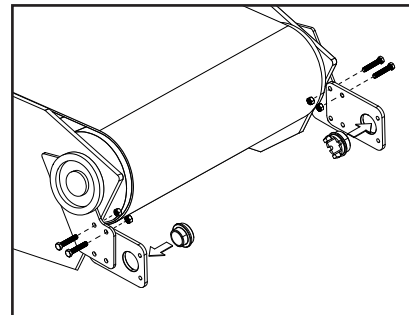

5. Bolt mounting plate to bracket on each side of conveyor if not done in step 1.

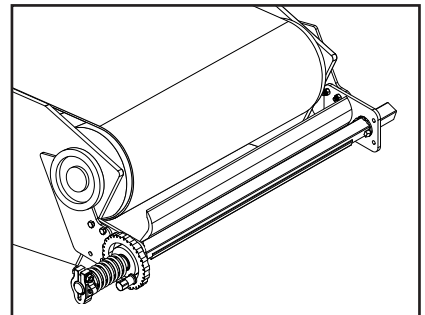

6. Install cleaner and tension blade appropriately, following the instructions in the cleaner IOM.