



NARROW GAP TOP MOUNT BRACKET KIT (115130)


Installation Instructions

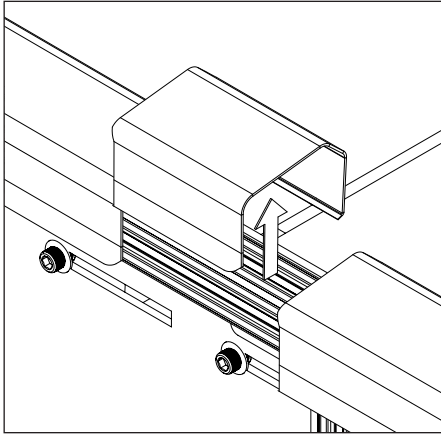


1. Remove the guarding of the conveyor to access the OEM finger guard bracket. Remove the OEM finger guard and its fasteners.

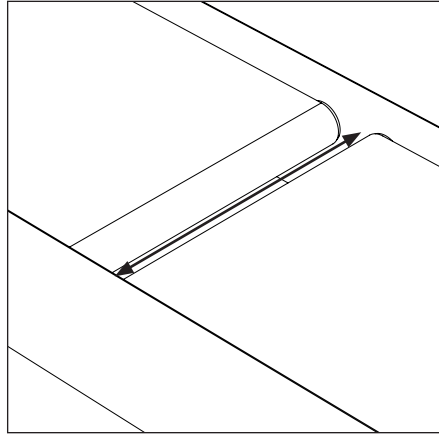


2. Measure the width of the conveyor structure and cut the Narrow Gap STP aluminum bar 1/8" less than the width.

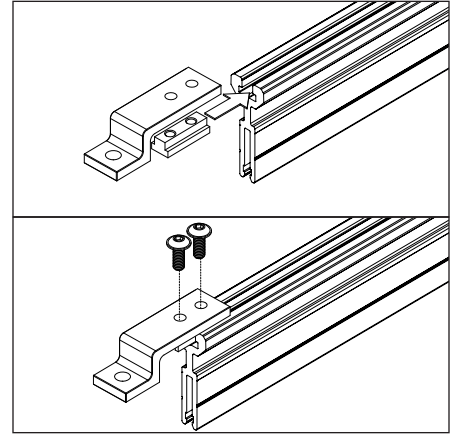


3. Assemble the bracket and nut plate, into the Narrow Gap STP aluminum bar.

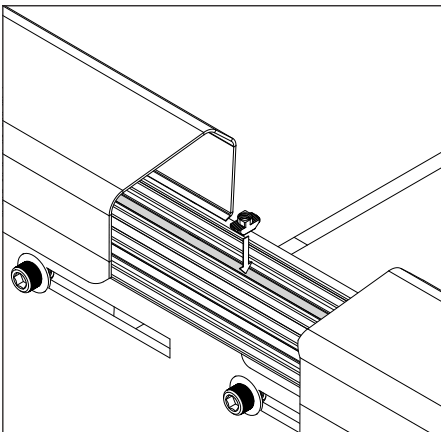


4. Place the Hammer Nut in the channel and attach the bracket to the hammer nut using the button head screw.

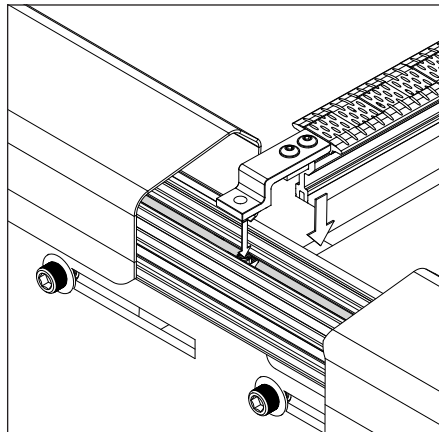

5. Position the Narrow Gap STP as normal using the cardboard shims. Reference Narrow Gap Segmented Transfer Plate IOM (X4657) for full installation details. Note: Do not let the Narrow Gap STP or bracket rub against the drive belt.

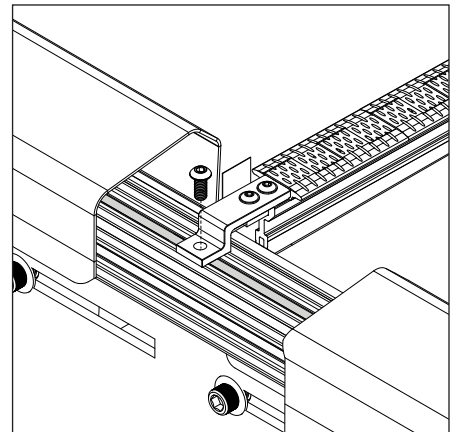

6. Once the Narrow Gap STP is in its final position, tighten all fasteners. Verify proper clearances between the segments and incoming belt, and the Narrow Gap STP and drive belt.

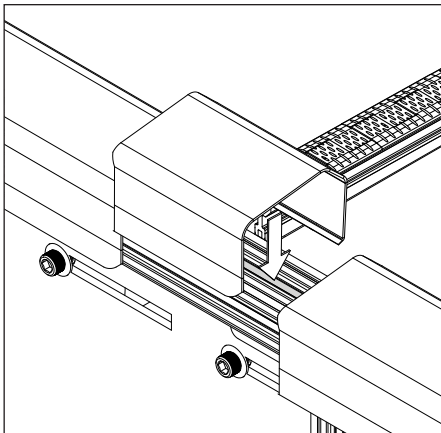

7. Reattach the guarding.