

Molded Lacer Pin Handle Assembly Instructions

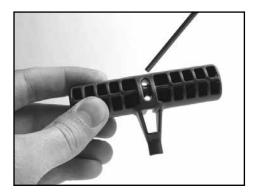




1. Insert pin into outer hole in handle.

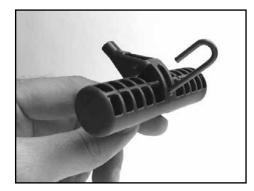

2. Slide pin through handle and engage looped end into handle as shown.



3. Rotate pin 90 degrees in handle.

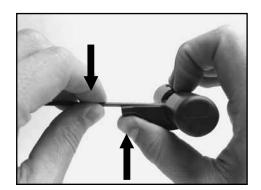

4. Snap pin into handle using right thumb to support handle neck.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA Tel: (800) 541-8028 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

