


TATCH-A-CLEAT®

Tatch-A-Cleat® Tatch-A-Guide® Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

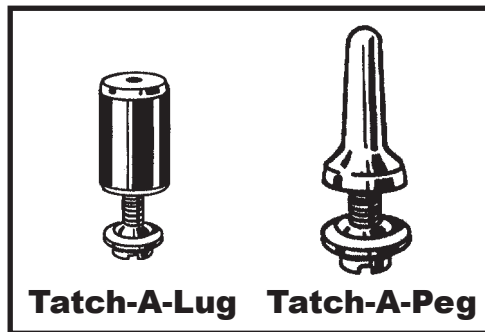

INSTRUCTIONS:

1. Punch 6mm (1/4") hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)

240 Macpherson Road • #02-01 • Singapore 348574
Tel: +65-6484-1533 • Fax: +65-6484-1531 • E-mail: asiasales@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2019 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 080519. X4835


FLEXCO

TATCH-A-CLEAT®

Tatch-A-Cleat® Tatch-A-Guide® Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

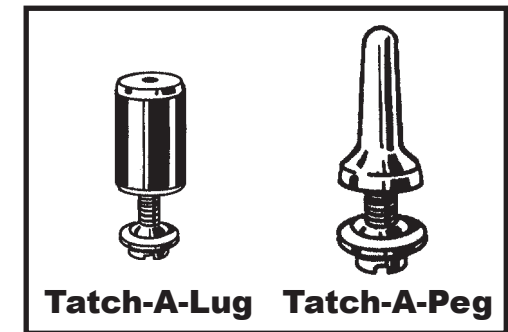

INSTRUCTIONS:

1. Punch 6mm (1/4") hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)

240 Macpherson Road • #02-01 • Singapore 348574
Tel: +65-6484-1533 • Fax: +65-6484-1531 • E-mail: asiasales@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2019 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 080519. X4835

FLEXCO