

TATCH-A-CLEAT®


Tatch-A-Lug®

Tatch-A-Peg®

Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

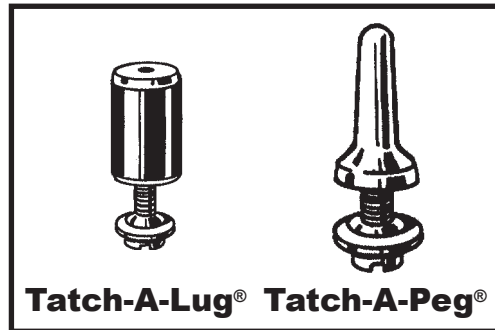

INSTRUCTIONS:

1. Punch 6mm (1/4") hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)

Visit www.flexco.com for other Flexco locations and products, or to find an authorised distributor.

©2017 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 11-13-24. X4045



TATCH-A-CLEAT®


Tatch-A-Lug®

Tatch-A-Peg®

Installation Instructions

TOOLS REQUIRED:

- Hammer
- Flexco® #1 Punch or Drill
- Screwdriver

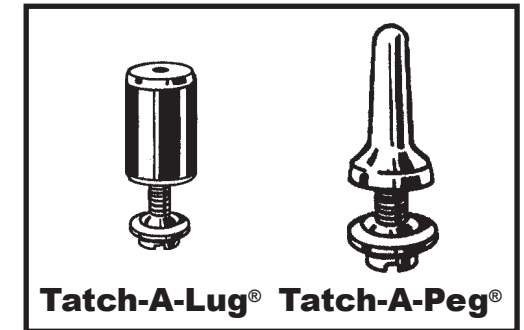

INSTRUCTIONS:

1. Punch 6mm (1/4") hole in belt with Flexco #1 punch or drill.
2. Attach Peg or Lug with fastener set; #10-24 zinc plated machine screw and special countersunk washer. (Also available in stainless steel.)

Visit www.flexco.com for other Flexco locations and products, or to find an authorised distributor.

©2017 Flexible Steel Lacing Company. Tatch-A-Cleat®, Tatch-A-Lug® and Tatch-A-Peg® are registered trademarks. 11-13-24. X4045

