


Data Log Retrieval

Supplemental Instructions to the Novitool® Aero® Splice Press Safety and Operation Manual Firmware Version 2.11 & Prior

Novitool® Aero® Splice Press Data Log Retrieval Instructions

1. Plug in and turn on press.

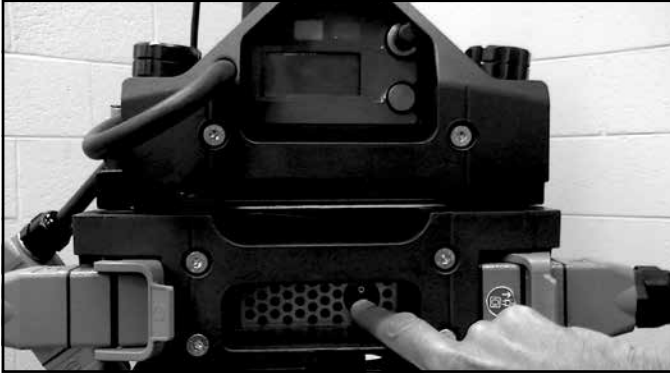

2. Go to the home screen.



3. Insert a USB flash drive into USB port in top beam of press.



4. Display reads “USB Device Detected”. Select the option [Export Data Log] by depressing the rotary knob.



5. Display reads “Exporting Data Log”.


Note: the transfer of the data from the press to the USB may take up to 10 minutes.



Data Log Retrieval

Supplemental Instructions to the Novitool® Aero® Splice Press Safety and Operation Manual Firmware Version 2.11 & Prior

5. After the data transfer is complete, it will revert back to the press display reading “USB Device Detected”. Remove the USB flash drive and plug it into a computer USB port and navigate to your presses serial number in the folder: “AERO PRESS USB -> Data -> Press 11111111”

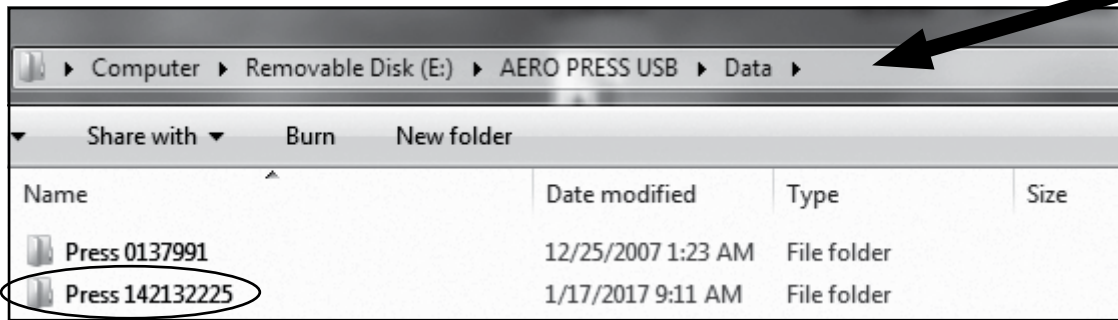

6. The Cycle and Event Log files are called {detailedCycles.csv and EventLog.csv} and are to be emailed to GRNovitool@flexco.com.

