### **Segmented Transfer Plates**

## **Prevent Costly, Unscheduled Downtime During Sortation**

Flexco recognizes transferring product safely from one belt to another, or from belt to chute or other structure, is often one of the biggest problems for parcel handling operations. FOD anywhere along the line has the potential to damage the belt, compound product loss, or even worse, shut down the system completely. Segmented Transfer Plates provide a safe transition of products throughout the sortation process to help prevent unscheduled downtime, increase operator safety, and reduce pinch hazards at the transfer point. Individual segments snap onto the mounting bar to accommodate belts up to 1500 mm and gaps from 100 mm to 250 mm. Segments quickly release under pressure of trapped objects and the bright yellow color makes them easy to monitor for replacement.



#### Features and Benefits:


- Bright yellow color makes segments easy to monitor for replacement.
- Compatible with both endless and mechanical belt splices.
- Ideal for package handling and airport applications.
- Precision-molded segments ensure accurate fit of transfer in gap.
- Durable HDPE segments ensure long term protection.
- Beveled plastic segments positioned directly on the belt prevent product ingestion and reduce pinch points.



Provides a **smooth transition** at the transfer point.



HDPE segments lock together and provide a low coefficient of friction so **product** slides easily across the transfer.

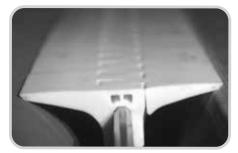

Increase the safety of your conveyor by **reducing pinch points.** 




www.flexco.com



#### SEGMENTED TRANSFER PLATES

### 100-250 mm Gaps

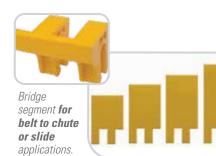

Segments are available in 25 mm increments from (50 mm to 125 mm) lengths.



Different segment lengths can be paired together to provide **options for offset mounting** to accommodate structure variations.




Bar Mounted Segments are easy to install and quickly release under pressure of trapped objects.



The two piece mounting bracket allows for **easy mounting and removal**.


#### How To Order

- Specify belt width. Mounting bar is
  50 mm longer than specified belt width.
- 2. Determine transfer size required.
- 3. Determine mounting bar location and if offset is required.




For horizontal to horizontal belt applications. Measure distance between pulleys at a point no more than 25% of

the pulley diameter (including belt thickness) down from the crown of both pulleys.



**For waterfall applications.** Measure distance from about 45° from the top of the upper pulley to the top point on the lower pulley.



For belt to chute or slide applications. On pulley side, position no higher than 12 mm below the crown with bridge segment positioned roughly 3 to 12 mm above the top of the chute or slide back wall.

#### For Horizontal to Horizontal or Waterfall Applications and Gaps from 100 mm to 250 mm **Belt Widths** Mounting Transfer 610 mm 914 mm 1067 mm 1219 mm 1524 mm Bar Width Offset ltem Ordering Ordering Ordering Ordering Ordering Item Item Item Item Code Number Code Number Code Number Code Number Code Number mm mm TGB-4/102-2/2-24/610 TGB-4/102-2/2-36/914 TGB-4/102-2/2-42/1067 TGB-4/102-2/2-48/1219 TGB-4/102-2/2-60/1524 102 none 56100 56101 56181 56102 56103 56104 TGB-5/127-2/3-24/610 TGB-5/127-2/3-36/914 TGB-5/127-2/3-42/1067 TGB-5/127-2/3-48/1219 56107 TGB-5/127-2/3-60/1524 127 13 56105 56182 56106 25 56108 TGB-6/152-2/4-24/610 56109 TGB-6/152-2/4-36/914 56183 TGB-6/152-2/4-42/1067 56110 TGB-6/152-2/4-48/1219 56111 TGB-6/152-2/4-60/1524 152 56112 TGB-6/152-3/3-24/610 56113 TGB-6/152-3/3-36/914 56184 TGB-6/152-3/3-42/1067 56114 TGB-6/152-3/3-48/1219 56115 TGB-6/152-3/3-60/1524 none 38 56116 TGB-7/178-2/5-24/610 56117 TGB-7/178-2/5-36/914 56185 TGB-7/178-2/5-42/1067 56118 TGB-7/178-2/5-48/1219 56119 TGB-7/178-2/5-60/1524 178 TGB-7/178-3/4-36/914 TGB-7/178-3/4-48/1219 TGB-7/178-3/4-60/1524 13 56120 TGB-7/178-3/4-24/610 56121 56186 TGB-7/178-3/4-42/1067 56122 56123 TGB-8/203-3/5-36/914 56128 TGB-8/203-3/5-24/610 TGB-8/203-3/5-42/1067 TGB-8/203-3/5-48/1219 TGB-8/203-3/5-60/1524 25 56129 56187 56130 56131 203 56132 TGB-8/203-4/4-48/1219 TGB-8/203-4/4-60/1524 TGB-8/203-4/4-24/610 56133 TGB-8/203-4/4-36/914 56188 TGB-8/203-4/4-42/1067 56134 56135 none TGB-9/229-4/5-24/610 TGB-9/229-4/5-36/914 TGB-9/229-4/5-42/1067 TGB-9/229-4/5-48/1219 TGB-9/229-4/5-60/1524 56140 56141 56189 56142 56143 229 13 56148 TGB-10/254-5/5-24/610 56149 TGB-10/254-5/5-36/914 56190 TGB-10/254-5/5-42/1067 56150 TGB-10/254-5/5-48/1219 56151 TGB-10/254-5/5-60/1524 254 none

For Belt to Chute or Slide Applications and Gaps from 75 mm to 150 mm													
Iransfer	Mounting Bar Offset	Belt Widths											
		610 mm			914 mm		1067 mm		1219 mm		1524 mm		
Width		Item	Ordering	Item	Ordering	Item	Ordering	Item	Ordering	Item	Ordering		
mm	mm	Code	Number	Code	Number	Code	Number	Code	Number	Code	Number		
76	12	56206	TGB-3/76-2/B-24/610	56207	TGB-3/76-2/B-36/914	56208	TGB-3/76-2/B-42/1067	56209	TGB-3/76-2/B-48/1219	56210	TGB-3/76-2/B-60/1524		
102	25	56211	TGB-4/102-3/B-24/610	56212	TGB-4/102-3/B-36/914	56213	TGB-4/102-3/B-42/1067	56214	TGB-4/102-3/B-48/1219	56215	TGB-4/102-3/B-60/1524		
127	38	56216	TGB-5/127-4/B-24/610	56217	TGB-5/127-4/B-36/914	56218	TGB-5/127-4/B-42/1067	56219	TGB-5/127-4/B-48/1219	56220	TGB-5/127-4/B-60/1524		
152	51	56221	TGB-6/152-5/B-24/610	56222	TGB-6/152-5/B-36/914	56223	TGB-6/152-5/B-42/1067	56224	TGB-6/152-5/B-48/1219	56225	TGB-6/152-5/B-60/1524		

www.flexco.com

### SEGMENTED TRANSFER PLATES

### **38-75 mm Gaps**

A Segmented Transfer Plate option is available for narrower **gaps from (38 mm to 75 mm)**.

Combinations of **paired segments lock together** inside the support bar to create the span required for the application.





**Raised Ribs help reduce the surface friction** on the shorter transitions – especially important for the consistency in metered spacing when lighter parcels and packages are being conveyed.


Easy to configure mounting plates provide **flexibility in installation** options.






#### How To Order

- Specify belt width. Mounting bar is
  mm longer than specified belt width.
- 2. Determine transfer size required.
- 3. Determine mounting bar location.
- 4. Segmented Transfer Plate 38 to 75 mm gaps are not recommended for belt to chute/slide applications.



For horizontal to horizontal belt applications. Measure distance between pulleys at a point no more than 25% of the pulley diameter (including belt thickness) down from the crown of both pulleys.



**For waterfall applications.** Measure distance from about 45° from the top of the upper pulley to the top point on the lower pulley.

Transfer Width	Mounting Bar Offset	Belt Widths									
			610 mm	914 mm			1067 mm				
		Item	Ordering	Item	Ordering	Item					
mm	mm	Code	Number	Code	Number	Code	Ordering Number				
38	none	56227	TGB-1.5/3875/.75-24/610	56228	TGB-1.5/3875/.75-36/914	56229	TGB-1.5/3875/.75-42/1067				
44	3.2	56232	TGB-1.75/44-1/.75-24/610	56233	TGB-1.75/44-1/.75-36/914	56234	TGB-1.75/44-1/.75-42/1067				
51	none	56237	TGB-2/51-1/1-24/610	56238	TGB-2/51-1/1-36/914	56239	TGB-2/51-1/1-42/1067				
57	9.5	56242	TGB-2.25/57-1.5/.75-24/610	56243	TGB-2.25/57-1.5/.75-36/914	56244	TGB-2.25/57-1.5/.75-42/1067				
64	6.4	56247	TGB-2.5/64-1.5/1-24/610	56248	TGB-2.5/64-1.5/1-36/914	56249	TGB-2.5/64-1.5/1-42/1067				
76	none	56252	TGB-3/76-1.5/1.5-24/610	56253	TGB-3/76-1.5/1.5-36/914	56254	TGB-3/76-1.5/1.5-42/1067				

For Horizontal to Horizontal or Waterfall Applications and Gaps from (38 mm to 75 mn

#### For Horizontal to Horizontal or Waterfall Applications and Gaps from (38 mm to 75 mm)

		Belt Widths							
Transfer	Mounting Bar		1219 mm	1524 mm					
Width	Offset	Item	Ordering	Item	Ordering				
mm	mm	Code	Number	Code	Number				
38	none	56230	TGB-1.5/3875/.75-48/1219	56231	TGB-1.5/3875/.75-60/1524				
44	3.2	56235	TGB-1.75/44-1/.75-48/1219	56236	TGB-1.75/44-1/.75-60/1524				
51	none	56240	TGB-2/51-1/1-48/1219	56241	TGB-2/51-1/1-60/1524				
57	9.5	56245	TGB-2.25/57-1.5/.75-48/1219	56246	TGB-2.25/57-1.5/.75-60/1524				
64	6.4	56250	TGB-2.5/64-1.5/1-48/1219	56251	TGB-2.5/64-1.5/1-60/1524				
76	none	56255	TGB-3/76-1.5/1.5-48/1219	56256	TGB-3/76-1.5/1.5-60/1524				



# Unique, patented design



**Easy to install:** Mount the Hitch Guard to your conveyor with simple brackets and hardware, then install segments with a light mallet tap.



**Snap-fit design:** The 3" segments are designed to release under pressure if small objects become lodged between belt and segments.



**Protection and Safety:** UHMW plastic segments have a beveled design that prevents progressive belt damage and reduces pinch points.


#### Hitch Guard

The Hitch Guard from Flexco is engineered to provide a smooth transition of product, increasing safety at the conveyor hitch and reducing pinch hazards at the transfer point. The Hitch Guard prevents small objects from becoming lodged in the hitch which can cause longitudinal conveyor belt tears, damage to conveyed products, and costly periods of unscheduled downtime. Designed to permit individual segments to release from the support bar, objects are quickly dislodged while remaining segments stay secured for continued operation.

Choose from a Universal Mounting System that fits most applications or a Scanner Eye Mounting System that doesn't interfere with electronic scanner eyes, but still keeps hitch protected.

Each Hitch Guard comes with a specially designed gauge for proper positioning in the hitch allowing for optimal installation and performance. See Hitch Guard Installation Specifications chart below to determine if the Flexco Hitch Guard is appropriate for your conveyor hitch.

Hitch Guard Installation Specifications										
Pulley Diameter (including belt)	63.5 mm	76.2 mm	88.9 mm	101.6 mm	114.3 mm	127 mm	139.7 mm	152.4 mm	165.1 mm	
Minimum Gap Required	20.32 mm	12.7 mm	2.54 mm	0	0	0	0	0	0	
Maximum Gap	40.64 mm	35.56 mm	30.48 mm	25.4 mm	20.32 mm	15.24 mm	10.16 mm	5.08 mm	0	

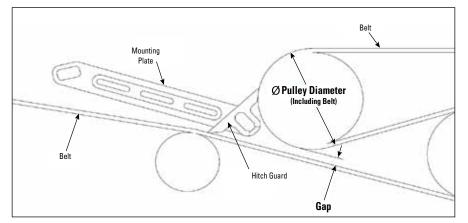

Hitch Guard Ordering Information										
Maximum	Universal Mou	unting Bracket	Scanner Eye Mounting Bracket							
Conveyor Width	Ordering	ltem	Ordering	ltem						
mm	Number	Code	Number	Code						
900	HITCHGD-V3-KIT-36IN	04442	HITCHGD-V1-KIT-36IN	04322						
1050	HITCHGD-V3-KIT-42IN	04443	HITCHGD-V1-KIT-42IN	04321						
1200	HITCHGD-V3-KIT-48IN	04444	HITCHGD-V1-KIT-48IN	04320						
1500	HITCHGD-V3-KIT-60IN	04445	HITCHGD-V1-KIT-60IN	04319						
1800	HITCHGD-V3-KIT-72IN	04988	HITCHGD-V1-KIT-72IN	04973						

Authorised Distributor:

Flexco (Aust.) Pty. Ltd • 10 Solent Circuit, Norwest • NSW, Australia, 2153 • Australia Tel: 612-8818-2000 • Fax: 612-8824-6333 • E-mail: salesau@flexco.com



4

Visit www.flexco.com for other Flexco locations and products.

©2017 Flexible Steel Lacing Company. 12-28-21. X5283