


# Data Log Retrieval

## Supplemental Instructions to the Novitool® Aero® Splice Press Safety and Operation Manual Firmware Version 2.11 & Prior

### Novitool® Aero® Splice Press Data Log Retrieval Instructions

1. Plug in and turn on press.

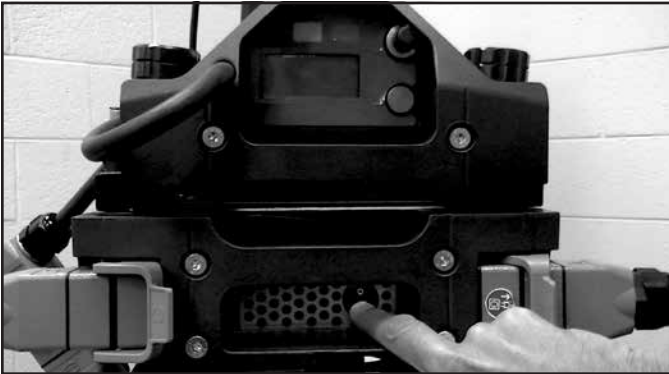

2. Go to the home screen.



3. Insert a USB flash drive into USB port in top beam of press.



4. Display reads “USB Device Detected”. Select the option [Export Data Log] by depressing the rotary knob.



5. Display reads “Exporting Data Log”.


**Note:** the transfer of the data from the press to the USB may take up to 10 minutes.




# Data Log Retrieval

## Supplemental Instructions to the Novitool® Aero® Splice Press Safety and Operation Manual Firmware Version 2.11 & Prior

5. After the data transfer is complete, it will revert back to the press display reading “USB Device Detected”. Remove the USB flash drive and plug it into a computer USB port and navigate to your presses serial number in the folder: “AERO PRESS USB -> Data -> Press 111111111”

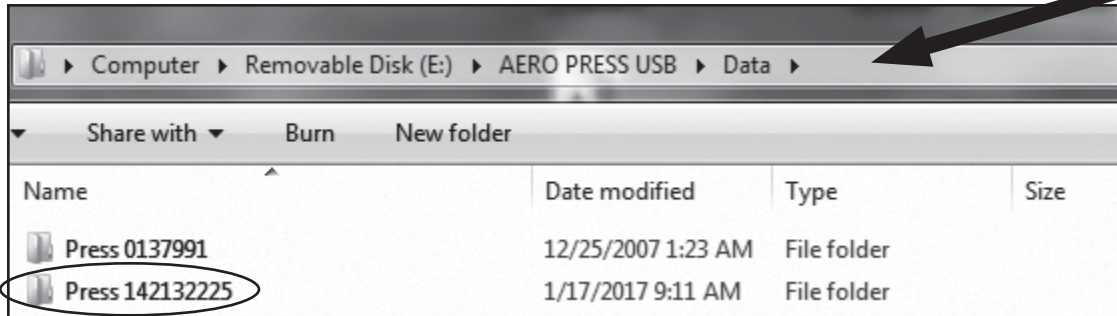

6. The Cycle and Event Log files are called {detailedCycles.csv and EventLog.csv} and are to be emailed to GRNovitool@flexco.com.

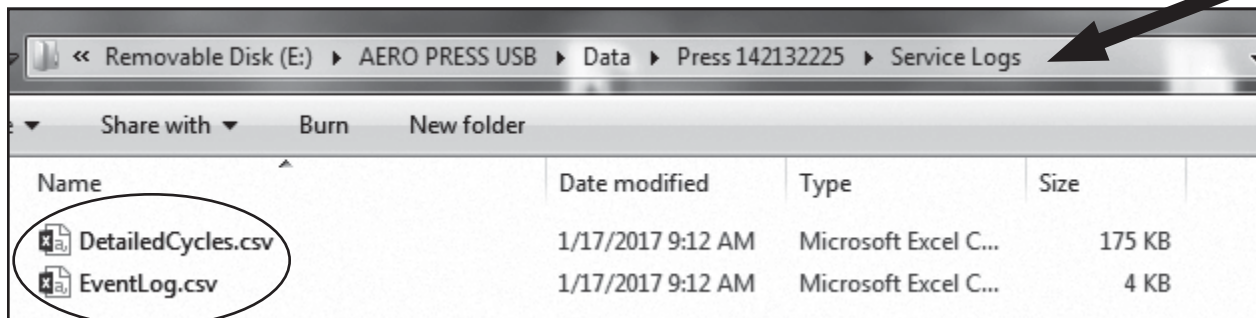

2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA  
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit [www.flexco.com](http://www.flexco.com) for other Flexco locations and products.

©2017 Flexible Steel Lacing Company, 04/17/17. For reorder: W521

