



FGP Two-Piece Mount (56588)

Instructions

1. Reference FGP Food Grade Precleaner IOM (X3646) for full installation details. This sheet is only to guide the installation of the optional mounting bracket.

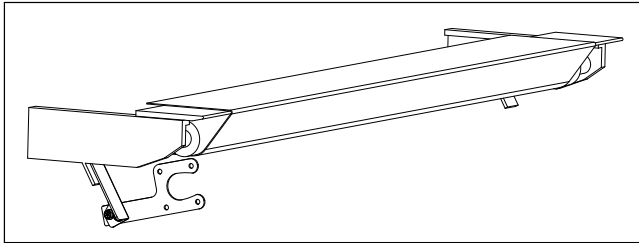


(2 pieces used for bracket)

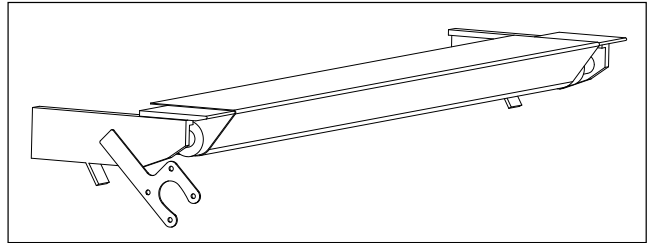


(Single piece used for bracket)

2. Position 2-piece bracket set so FGP Pole center is at correct XYZ position. **NOTE:** it is not always necessary to use both brackets.


3. Trim brackets as necessary, then temporarily clamp or tack-weld the brackets in place. This will allow for future adjustments.

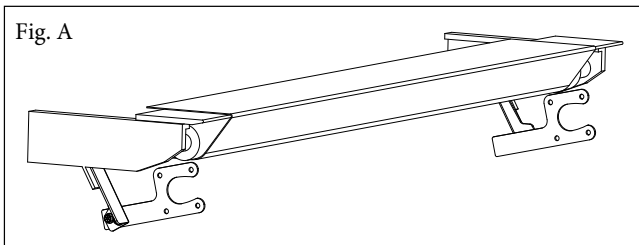


4. Temporarily mount brackets onto opposite side of conveyor (Fig. A).

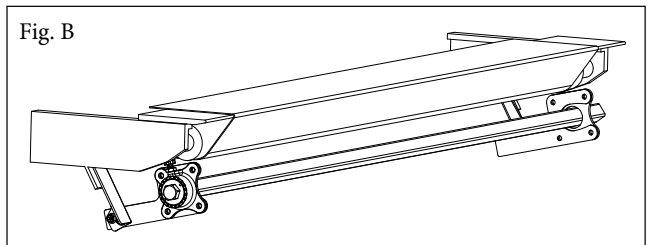

5. Test fit cleaner without blade. Pole should be parallel to the pulley (Fig. B).

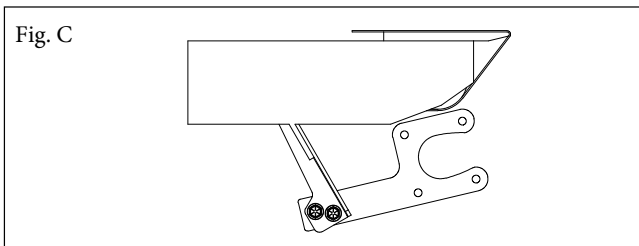

6. If the pole is in correct position, then finish weld (or bolt-mount) brackets to conveyor. The 2-piece bracket can be welded or bolted together using 2 bolts per side (Fig. C).

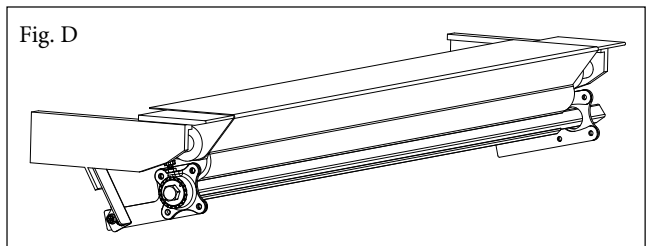

7. Install cleaner and tension blade appropriately (Fig. D).



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 U.S.A.
Telephone: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2018 Flexible Steel Lacing Company. 02-28-18. For Reorder: X5012

