

Heavy Duty Super Seal Door

Installation, Operation and Maintenance Manual



Flexco Heavy Duty Super Seal Door

Purchase Date: _____
Purchased From: _____
Installation Date: _____

Table of Contents

Section 1 - Important Information	4
1.1 General Introduction	4
1.2 User Benefits	4
1.3 Service Option	4
Section 2 - Safety Considerations and Precautions	5
2.1 Stationary Conveyors.....	5
2.2 Operating Conveyors.....	5
Section 3 - Pre-Installation Checks and Options.....	6
3.1 Checklist.....	6
Section 4 - Installation Instructions.....	7
Section 5 - Pre-Operation Checklist and Testing.....	9
5.1 Pre-Op Checklist.....	9
Section 6 - Maintenance.....	10
6.1 Routine Visual Inspection.....	10
6.2 Maintenance Log.....	11
Section 7 - Troubleshooting	12
Section 8 - Specifications and CAD Drawing	13
8.1 Specs and Guidelines	13
8.2 CAD Drawing.....	14
Section 9 - Other Flexco® Conveyor Products.....	15

Section 1 - Important Information

1.1 General Introduction

We at Flexco are very pleased that you have selected a Flexco Heavy Duty Super Seal Door for your conveyor system.

This manual will help you to understand the operation of this product and assist you in making it work properly over its lifetime of service.

It is essential for safe and efficient operation that the information and guidelines presented be properly understood and implemented. This manual will provide safety precautions, installation instructions, maintenance procedures and troubleshooting tips.

If, however, you have any questions or problems that are not covered in this manual, please contact your field representative or our Customer Service Department:

Customer Service: 1-800-541-8028

Visit www.flexco.com for other Flexco locations and products.

Please read this manual thoroughly and pass it on to any others who will be directly responsible for installation, operation or maintenance of this product. While we have tried to make the installation and service tasks as easy and simple as possible, it does however require correct installation and regular inspections and adjustments to maintain top working condition.

1.2 User Benefits

Flexco Heavy Duty Super Seal Doors can be used to visually inspect and/or service conveyor equipment. They may also serve as an access point for cleaning material buildup off conveyor belt cleaners or other equipment.

1.3 Service Option

The Heavy Duty Super Seal Door is designed to be easily installed and serviced by your on-site personnel. However, if you would prefer complete turn-key factory service, please contact your local Flexco Field Representative.

Section 2 - Safety Considerations and Precautions

Before installing the Flexco Heavy Duty Super Seal Door, it is important to review and understand the following safety information.

There are set-up, maintenance and operational activities involving both stationary and operating conveyors. Each case has a safety protocol.

2.1 Stationary Conveyors

The following activities are performed on stationary conveyors:

- Installation
- Blade Replacement
- Repairs
- Cleaning

DANGER

It is imperative that OSHA/MSHA Lockout/Tagout (LOTO) regulations, 29 CFR 1910.147, be followed before undertaking the preceding activities. Failure to use LOTO exposes workers to hazards that may result in severe injury or death. Never install or service equipment with the power turned on.

Before working:

- Lockout/Tagout the conveyor power source

WARNING

Use Personal Protective Equipment (PPE):

- Safety eyewear
- Hardhats
- Safety footwear

Close quarters and heavy components create a worksite that could compromise a worker's eyes, feet and skull.

PPE must be worn to control the foreseeable hazards associated with conveyor belt equipment inspections. Serious injuries can be avoided.

2.2 Operating Conveyors

There are two routine tasks that must be performed while the conveyor is running:

- Inspection of the conveyor belt equipment
- Dynamic troubleshooting

DANGER

Every belt cleaner and pulley is an in-running nip hazard. Never touch or prod equipment on an operating conveyor belt. Nip hazards cause instantaneous amputation and entrapment. If using the optional screen as a safety device, follow all site rules and regulations for access to hazards. Otherwise, mount the door no closer than 6.5" (165mm) from a hazard (ANSI B11-Series Safety Standards for Machine Tools and ISO 1819 for Continuous Mechanical Handling Equipment).

WARNING

Conveyor chutes contain projectile hazards. Use safety eyewear and headgear. Missiles can inflict serious injury.

WARNING

Never adjust anything inside chute/enclosure on an operating conveyor belt. Unforeseeable materials falling into the chute and flailing hardware can cause serious injury or death.


Section 3 - Pre-Installation Checks and Options

3.1 Checklist

- Make sure door is the correct model and size
- Review the “Tools Needed” list on the top of the installation instructions
- Verify that desired door location is an appropriate distance from hazard per site safety regulations.
- Identify and remove any obstructions

Section 4 - Installation Instructions

4.1 Heavy Duty Super Seal Door

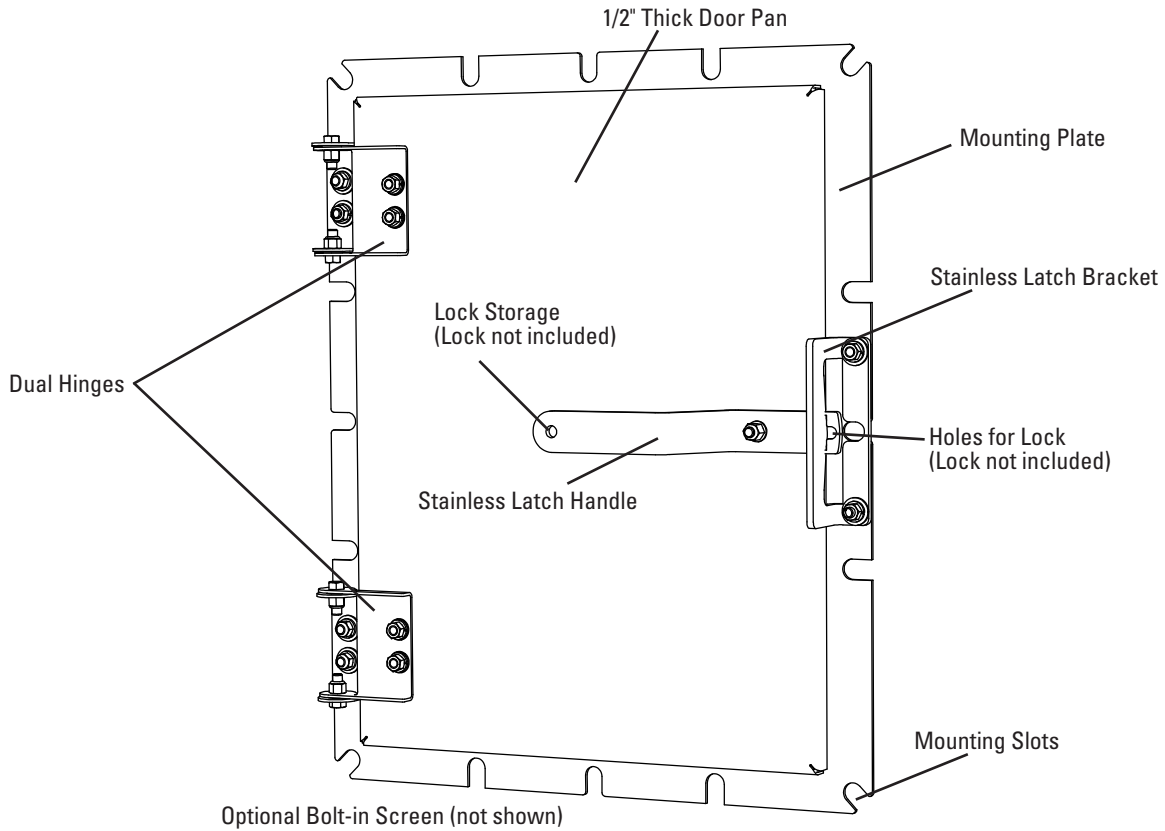

Physically lock out and tag the conveyor at the power source before you begin heavy duty super seal door installation.

Before You Begin:

- Identify mounting location. Verify that the desired door location is an appropriate distance from hazard per site safety regulations.
- Be aware of flying debris when selecting door location and do not mount door in material path. This could damage the door and cause personal injury when opened.
- Identify the orientation needed for the door (which way to open).
- Verify swing clearance - ensure door can be opened as needed in the desired location.
- Read and follow all appropriate safety precautions.

Tools Needed:


- Tape measure
- 3/4" (19mm) wrench
- Medium or Large Adjustable Wrench
- Drill with 5/8" (16mm) bit
- Cutting equipment
- Marker
- Tape (for mounting template)
- Silicone Sealant (if desired)

Section 4 - Installation Instructions


1. Select a suitable location for the Heavy Duty Super Seal Door. See Section 8 for unit dimensions.

NOTE: Verify that the desired door location is an appropriate distance from hazard per site safety regulations.

2. Layout and cut door opening and holes where door will be mounted using appropriate cutting tools.
3. Bolt the door firmly to the chute. If silicone seal is preferred, apply solid ring around mounting plate before bolting to the chute (Fig. 2).
4. After attachment to the chute wall, open, close and latch the door to ensure fit and function.

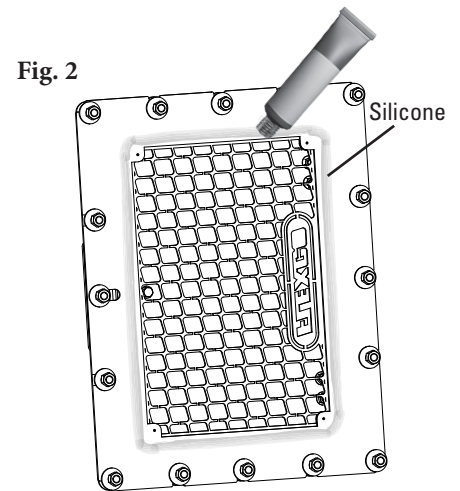

5. If needed, the door can be locked by placing a padlock (not included) through the holes in the handle and door (Fig. 3).

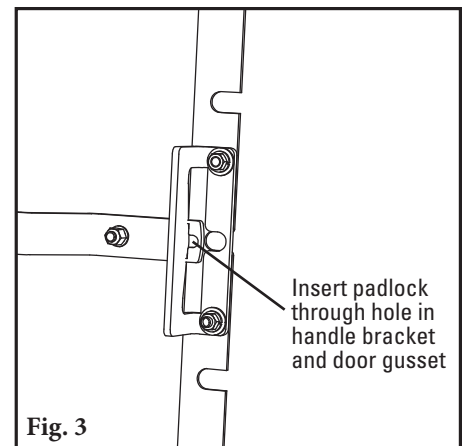

Section 5 - Pre-Operation Checklist and Testing

5.1 Pre-Op Checklist

- Recheck that all fasteners are tight
- Check latch/screen operation. Make sure door opens and closes properly
- Be sure that all installation materials and tools have been removed from the belt and the conveyor area

Section 6 - Maintenance

6.1 Routine Visual Inspection

- Periodically check Heavy Duty Super Seal Door for damage.
- Make sure fasteners are tight and the warning label is clearly visible.
- If material is escaping through the door or around the frame, ensure the door is firmly fastened to the chute, the door seal is not damaged, and the latch is tight.
- If screen is included, periodically check for damage and replace if needed.

Section 6 - Maintenance

6.2 Maintenance Log

Conveyor Name/No. _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ - _____ Work done by: _____ Service Quote #: _____

Activity: _____

Date: _____ - _____ Work done by: _____ Service Quote #: _____

Activity: _____

Section 7 - Troubleshooting


Problem	Possible Cause	Possible Solutions
Screen (optional component) is damaged	Material damaging the screen	Replace the screen, reconsider door location
Excessive dust escaping through door	Seal worn or damaged	Replace seal
Door not latching correctly or at all	Hinge damaged	Replace hinge
	Latch damaged	Replace latch

Section 8 - Specs and CAD Drawings

8.1 Specifications and Guidelines

Unit Dimensions

Size (Opening)		Dimensions (Outside)	
in.	mm	in.	mm
6 x 6	152 x 152	10.5 x 9.75	267 x 248
12 x 12	305 x 305	16.5 x 15.75	419 x 400
12 x 18	305 x 457	16.5 x 21.75	419 x 552
18 x 18	457 x 457	22.5 x 21.75	572 x 552
18 x 24	457 x 610	22.5 x 27.75	572 x 705
24 x 24	610 x 610	28.5 x 27.75	724 x 705

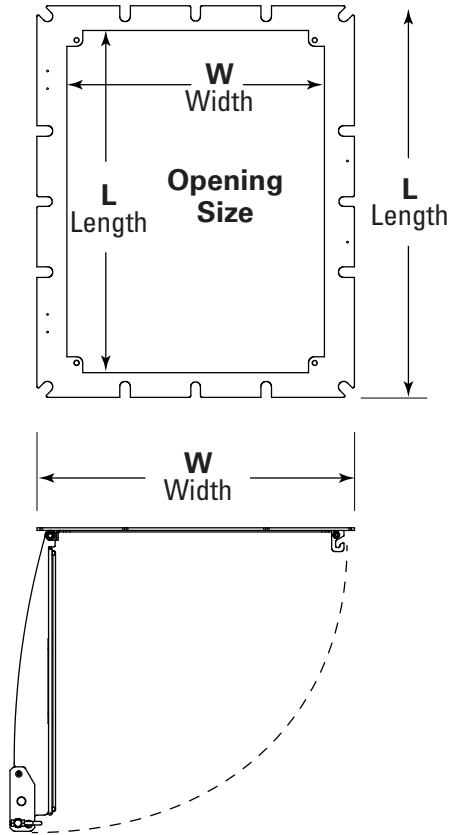

Screen (Optional)


Screen serves as a guard that helps keep hands and tools from being placed into the chute/enclosure, but still allows visual access. A wrench is required to remove the four nuts that hold the screen in place as a safety feature.

Specifications:


- Temperature Rating -70°F to 350°F (-55°C to 175°C)

Section 8 - Specs and CAD Drawings


8.2 CAD Drawings

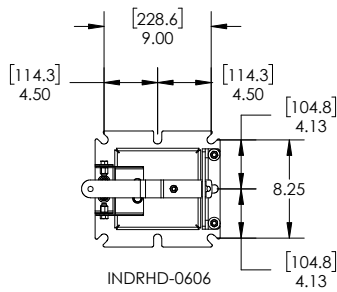


6" x 6" Super Seal Door

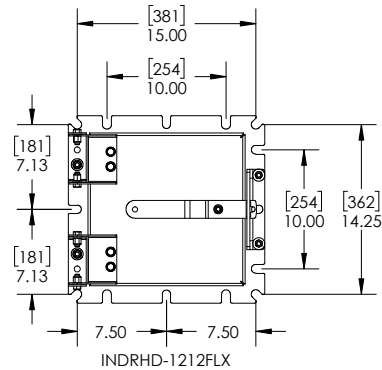


12" x 12" Super Seal Door

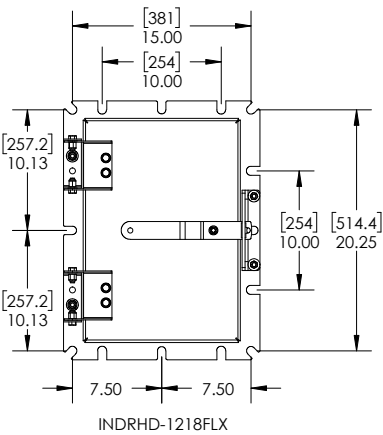


12" x 18" Super Seal Door

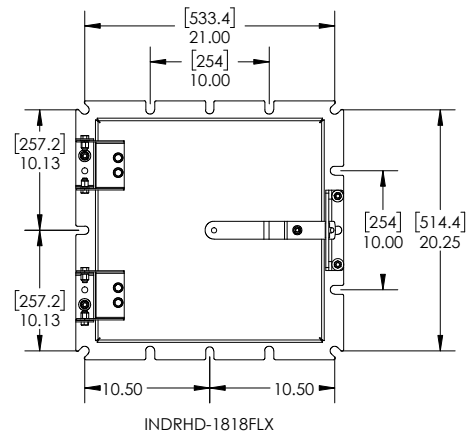

18" x 18" Super Seal Door

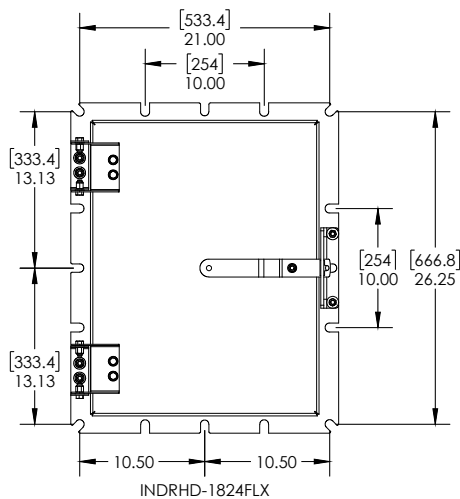

18" x 24" Super Seal Door

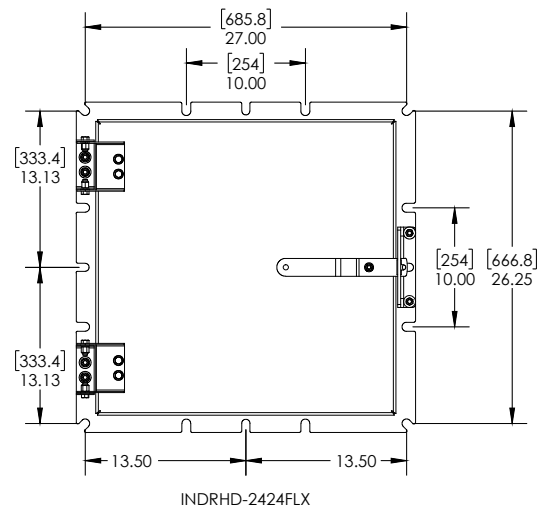

24" x 24" Super Seal Door

Section 9 - Other Flexco Conveyor Products

Flexco provides many conveyor products that help your conveyors to run more efficiently and safely. These components solve typical conveyor problems and improve productivity. Here is a quick overview on just a few of them:

MMP Precleaner




- Extra cleaning power right on the head pulley
- A 10" (250mm) TuffShear™ blade provides increased blade tension on the belt to peel off abrasive materials
- The unique Visual Tension Check™ ensures optimal blade tensioning and quick, accurate retensioning
- Easy to install and simple to service

DRX™ Impact Beds



- Exclusive Velocity Reduction Technology™ to better protect the belt
- Slide-Out Service™ gives direct access to all impact bars for change-out
- Impact bar supports for longer bar life
- 4 models to custom fit to the application

MHS Secondary Cleaner with Service Advantage Cartridge

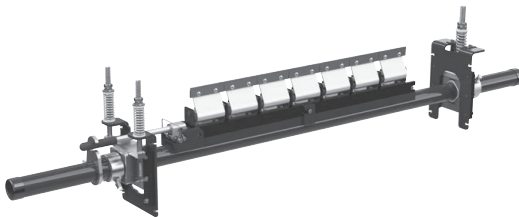

- An easy slide-out cartridge for service
- Cartridge design to speed up blade-change maintenance
- Patented PowerFlex™ Cushions for superior cleaning performance
- Compatible with Flexco® mechanical splices

PT Max™ Belt Trainer



- Patented “pivot & tilt” design for superior training action
- Dual sensor rollers on each side to minimize belt damage
- Pivot point guaranteed not to seize or freeze up
- Available for topside and return side belts

Flexco Specialty Belt Cleaners



- “Limited space” cleaners for tight conveyor applications
- High Temp cleaners for severe, high heat applications
- A rubber fingered cleaner for chevron and raised rib belts
- Multiple cleaner styles in stainless steel for corrosive applications

Belt Plows



- A belt cleaner for the tail pulley
- Exclusive blade design quickly spirals debris off the belt
- Economical and easy to service
- Available in vee or diagonal models



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 • USA
Tel: (630) 971-0150 • Fax: (630) 971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2021 Flexible Steel Lacing Company. 12/02/21. For reorder: X6303

